

# INDEX

TRAUB



## INDEX MS22-8

Tool holder

Technical Information

better.parts.faster.

## **Note on applicability**

Illustrations in this publication may deviate from the product supplied. Errors and omissions due to technical progress expected.

## **A word on copyright**

This document is protected by copyright and was originally compiled in German.

The duplication and distribution of this document or parts thereof is prohibited without prior consent of the copyright owner, and any violators will be prosecuted. All rights, including the right to translate, are reserved.

© Copyright by INDEX-Werke GmbH & Co. KG

<b>Technical Information .....</b>	<b>5</b>
Tool holder selection .....	5
Warranty .....	5
Information on wear parts.....	5
Inspection of live tool holders.....	5
Tool holders with cooling lubricant supply.....	6
Cooling lubricant filtering .....	6
Cleaning live tool holders.....	6
Speed ratio specifications on tool holders .....	6
Direction of rotation specification .....	7
Tightening torque .....	8
Replacement seals for tool shank .....	8
Tool holders with fixation .....	9
Load limits of live tools .....	9
Notes on how to use the chart when using tool holders .....	10
<b>Usage information .....</b>	<b>11</b>
Machine concept of the INDEX MS22-8 .....	11
Full configuration .....	11
Double four-spindle machine .....	12
Double rear end machining.....	13
Travel of cross slide unit INDEX MS22-8.....	14
Cross slide unit X-NC / Z-NC 1.1 - 8.2	
Cross slide unit X-rigid 1.2 - 7.1 .....	14
Cross slide unit X-NC / Z rigid 7.3 / 8.3 .....	15
Synchronized spindle INDEX MS22-8.....	16
Synchronous spindle with parts removal 7.2, 8.1 .....	16
Rear end machining on swivel axis 7.2, 8.1	
Rear end machining unit on cross slide unit 7.1, 7.3, 8.2, 8.3.....	17
Y axis INDEX MS22-8 .....	18
Attachable to cross slide unit 3.1, 4.1, 5.1, 6.1, 7.2 .....	18
Tool drive unit shank VDI20, INDEX MS22-8.....	19
Cross slide unit 1.1 - 8.2.....	19
Installation size.....	19
Tool drive unit reinforced shank VDI25, INDEX MS22-8.....	21
Cross slide unit 1.1 - 8.2.....	21
Installation size.....	21
Cross slide unit INDEX MS22-8.....	23
X-NC 1.1 - 8.2 .....	23
Modular design of INDEX MS22-8.....	24
Grooving tool holder .....	24
Cross slide unit 1.1 - 8.2, machining in X/Z direction.....	24
Base holder with drill holder D28,5mm.....	25
Cross slide unit 1.1 - 8.2, machining in X/Z direction.....	25
Milling tool holder .....	26
Cross slide unit 1.1 - 8.2, machining in X/Z direction.....	26

Milling unit, shank HSK25C .....	27
Cross slide unit 1.1 - 8.2, machining in X/Z direction.....	27
Tool drive unit, shank VDI20/VDI25.....	28
Cross slide unit 1.1 - 8.2, 7.3/8.3 machining in X/Z direction.....	28
Polygon turning unit .....	29
Cross slide unit 1.1 - 8.2, machining in X/Z direction.....	29
Rear end machining unit, rigid .....	30
Cross slide unit 7.1/8.2, 7.3/8.3, machining in X/Z direction.....	30
Rear end machining unit .....	31
Cross slide unit 7.1/8.2, 7.3/8.3, machining in X/Z direction.....	31
Performance diagram .....	32
Tool drive unit VDI20/VDI25, Cross slide unit 1.1 - 7.2, 8.1, 8.2 .....	32
Tool drive unit VDI20/VDI25, Cross slide unit 7.3, 8.3.....	33
Milling unit transverse HSK25C, i=0,5 .....	34
Milling unit axis-parallel, HSK25C, i=0,59375	
Milling unit angle-adjustable, HSK25C, i=0,6 .....	35
Polygon turning unit i=1 .....	36
Polygon turning unit i=5.....	37
Polygon turning unit i=7 .....	38
Rear end machining unit i=0,5.....	39
Rear end machining unit i=0,5538847 (221:399) .....	40
Rear end machining unit i=0,5261904 (221:420) .....	41
Rear end machining unit i=2 .....	42

## Tool holder selection



For more information, please visit our iXshop at ixshop.index-traub.com

We will be happy to send you an individual offer.  
Just call us at +49 711 3191-9854 or  
send us an email to werkzeughalter@index-werke.de.

## Warranty



When using tool holders that are not adjusted, tested and marked as such by INDEX TRAUB, the warranty for the tool drive is void.

## Information on wear parts

Tool holders are wear parts requiring correct handling.  
In order to ensure a long service life, compressed air or coolant must not enter the gap seals of the holders.

## Inspection of live tool holders



Tool holders must be inspected at regular intervals (at least twice a year) for smooth running and play.



The drive pinion and drive clutch of the live tool holders must be subjected to a visual inspection for damage or wear.

If one of the above-mentioned defects is detected during the inspection of the tool holders, they must be returned immediately for preventive maintenance or repair to the following address:

INDEX-Werke GmbH & Co. KG  
Hauffstraße 4  
D-73262 Reichenbach  
Fon +49 711 3191-554  
werkzeughalter@index-werke.de

## Tool holders with cooling lubricant supply



Tool holders marked with this symbol must be operated with cooling lubricant (no dry running permitted).



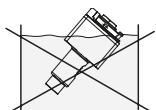
Tool holders marked with this symbol can be converted from external cooling lubricant supply to internal cooling lubricant supply.

Observe dry running capability of IC attachment!

## Cooling lubricant filtering

When using live tool holders with internal cooling lubricant supply, it is necessary to use a cooling lubricant filter system with a retained particle size  $\leq 50 \mu\text{m}$ .

## Cleaning live tool holders



Live tool holders must never be immersed in cleaning fluid since mixing the cleaning fluid with the bearing grease will reduce the service life of the tool holders.

## Speed ratio specifications on tool holders

The value to be programmed is specified in the documentation and on the live tool holders (= the input in the NC program).

$$n_{\text{prog}} = n_{\text{Tool}} \times i$$

$n_{\text{Tool}}$  = speed at the cutting tool edge

$n_{\text{PROG}}$  = speed to be programmed

$i$  = speed ratio in the tool holder

This means the speed increase or speed reduction is not specified as a fraction but as **a number**.

This gives speed **increase** ratios as numbers **less than 1**.

Example:  $i = 0.333$  (corresponds to  $i = 1:3$ )

$i = 0.676$  (corresponds to  $i = 1:1.48$ )

Speed reduction ratios are numbers greater than 1.

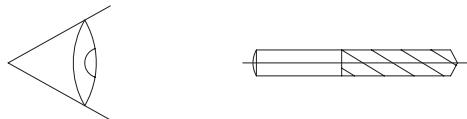
Example:  $i = 2$  (corresponds to  $i = 2:1$ )

$i = 1.333$  (corresponds to  $i = 4:3$ )

## Direction of rotation specification

Definition of the viewing direction.

Viewing direction for determining the direction of rotation is always from behind (that is, from the drive direction) toward the shaft.



On the machine side, the direction of rotation has been set by parameters such that M03 always denotes clockwise rotation and M04 counter-clockwise rotation at the interface of the drive pinion of the tool holder.

The direction of rotation given on the holder therefore refers to a "change in direction within the holder". M03 and M04 are machine functions to be programmed. The and arrows indicate the direction of rotation of the cutting edges.

This means:



### No reversal of direction of rotation

When the holder drive shaft has the **same** direction of rotation as the tool cutting edge, the clockwise direction of run must be specified by M03 (clockwise rotation). Accordingly, counter-clockwise rotation must be specified by M04.

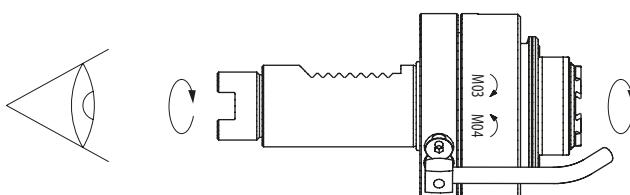


### Reversal of direction of rotation

When the holder drive shaft has the **opposite** direction of rotation as the tool cutting edge, the clockwise direction of rotation must be specified by M04. Accordingly, counter-clockwise rotation must be specified by M03.

Example

### No reversal of direction of rotation



## **Tightening torque**

The tightening torques of the clamping pieces to the tool holder mounting depends on the shank diameter of the tool holder.

Shank size	Tightening torque
Ø 20mm	8 Nm
Ø 25mm	20 Nm
Ø 30mm	25 Nm
Ø 40mm	40 Nm

## **Replacement seals for tool shank**

The gaskets on the tool shank and the cooling lubricant bushing must be regularly checked for damages.

O-ring	O-ring color	Material number	Installation location
ø23.52 x 1.78	Green	10823023	Shank ø25
ø9.75 x 1.78	Green	10046965	Cooling lubricant adapter

The color of the reordered O-ring must always be the same as the one already used on the tool shank.

## Tool holders with fixation



Except for very few cases, all tool holders have been pre-adjusted with high precision and sealed with the INDEX V bar / TRAUB adjusting bar / W-serration.

This setting must not be changed.

The INDEX V bar / TRAUB adjusting bar / W-serration ensures positional accuracy of the tool when re-inserted.

The tool holders are fixed around the shank axis by pins (DIN 69880).

DIN holders can be used.

Double serration of the tool holders allows several uses.

## Load limits of live tools

The drive power and torques are indicated in the performance charts. These values represent the upper limit of the calculated theoretical performance values (average values). In case of interrupted cuts, e.g., for milling, the load peaks occurring when the cutting edge enters the material may be much higher than the theoretical torque according to the performance chart.



The cutter should be selected so that a cutting edge is constantly being used for cutting during the machining process.

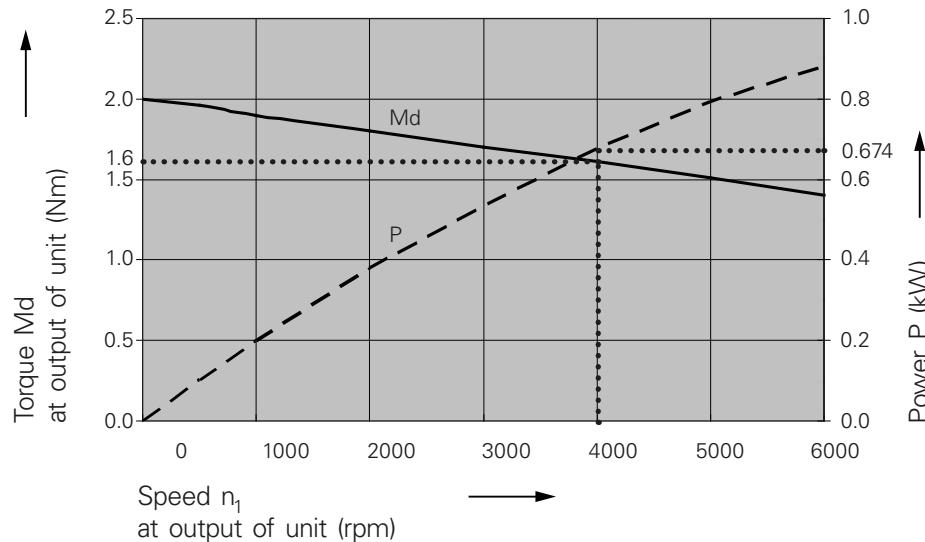
## Notes on how to use the chart when using tool holders

The diagram relates to the output speed  $n$  of the tool unit. The tool speed can be read directly from the diagram only if the internal speed ratio  $i$  in the tool holder is 1:1.

For tool holders with an internal speed ratio  $i \neq 1$ , the output speed  $n$  of the tool unit to be programmed must be calculated from the required tool speed and the speed ratio  $i$ . Afterwards, the actual powers or torques can be read off or determined.

Example (at 100% duty cycle):

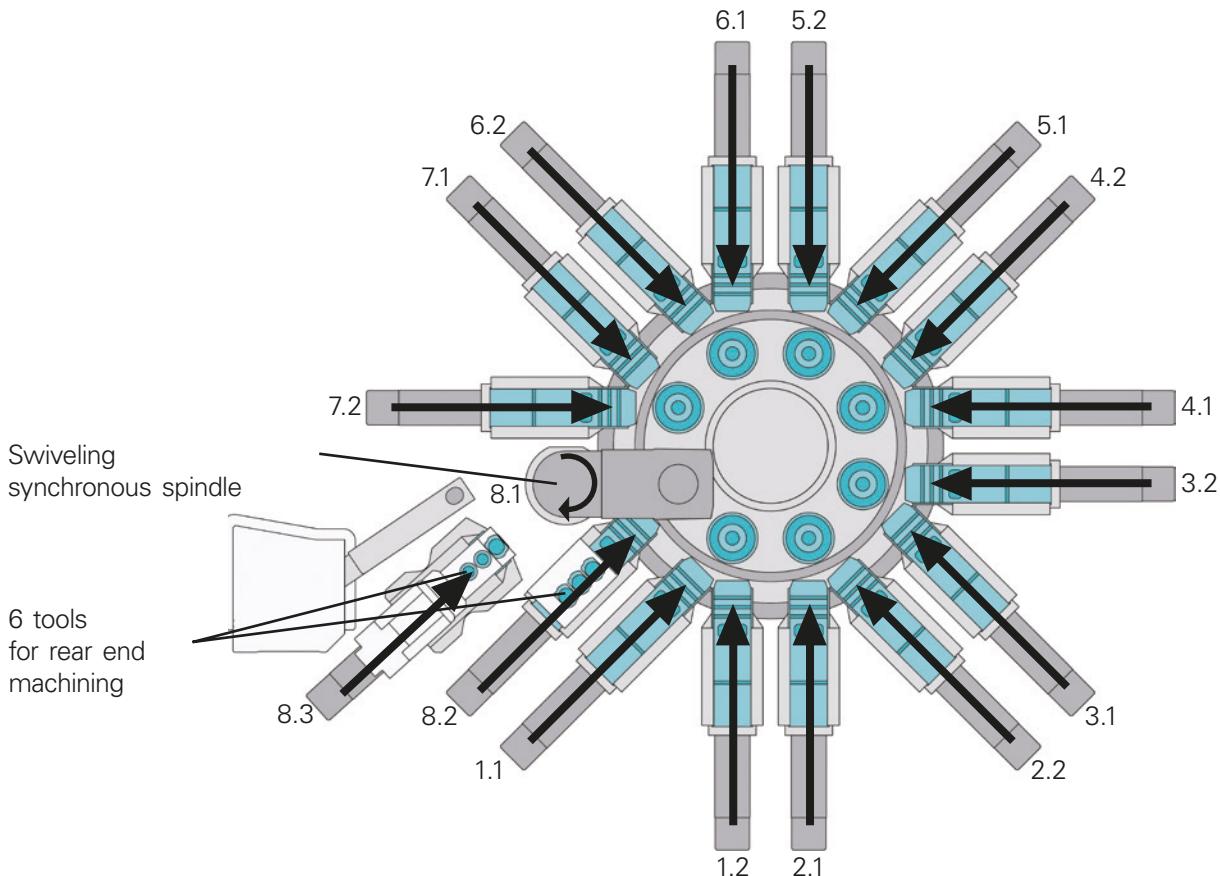
live tool unit, tool speed $n_{\text{tool}} = 1000 \text{ rpm}$	
Internal speed ratio $i$ of the tool holder	$i = 4$
Programmed speed $n_{\text{prog}}$ for the drive of the unit	$n_{\text{prog}} = n_{\text{tool}} \times i = 1000 \text{ rpm} \times 4 = 4000 \text{ rpm}$
Torque $M_{\text{tool}}$ at the output of the tool holder	Read-out $M_d$ at speed $n_{\text{prog}} = 4000 \text{ rpm} = 1.6 \text{ Nm}$ $M_d = M_{\text{tool}} : i$ Formula changed: $M_{\text{Tool}} = M_d \times i = 1.6 \text{ Nm} \times 4 = 6.4 \text{ Nm}$
Power $P$ at the output of the tool holder $\approx$ Power $P$ at the output of the setup	Read-out at 4000 rpm $\rightarrow P = 0.67 \text{ kW}$ calculated: $P = 2 \times \pi \times n_{\text{prog}} \times M_d$ $P = 2 \times \pi \times 4000 \times 1.6 \text{ Nm} = 0.67 \text{ kW}$ $60 \times 1000$



The speed ratio and the technical data of each tool holder are indicated on the next pages.

## Machine concept of the INDEX MS22-8

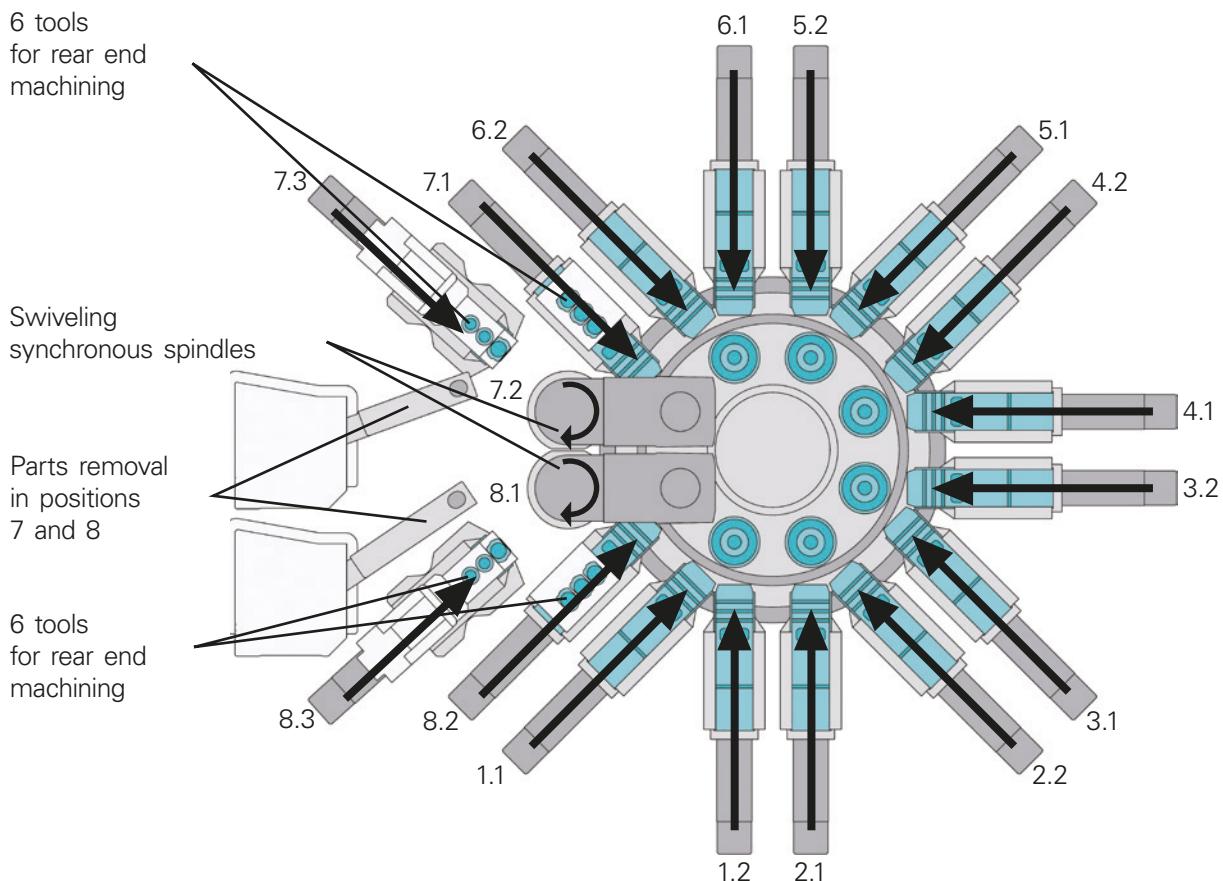
### Full configuration



- 15 tool carriers with 1 or 2 axes,
- 1x swiveling synchronous spindle, 1x rear slide
- Rear end machining unit with 6 tools, max. 3 live
- Multiple tooling of the cross slide unit optional
- Only the tool holders determine the machining direction (inside or outside)
- Transverse machining with live tools

## Machine concept of the INDEX MS22-8

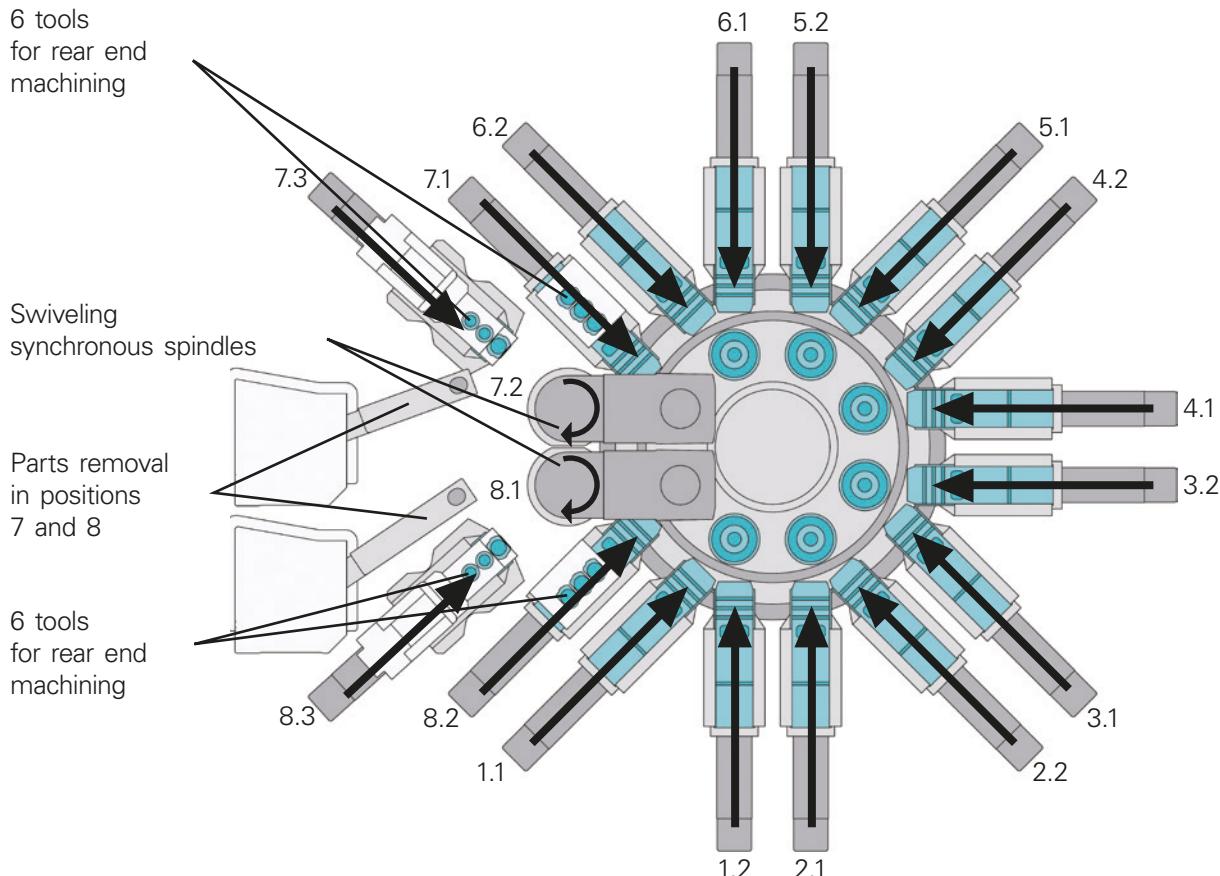
### Double four-spindle machine



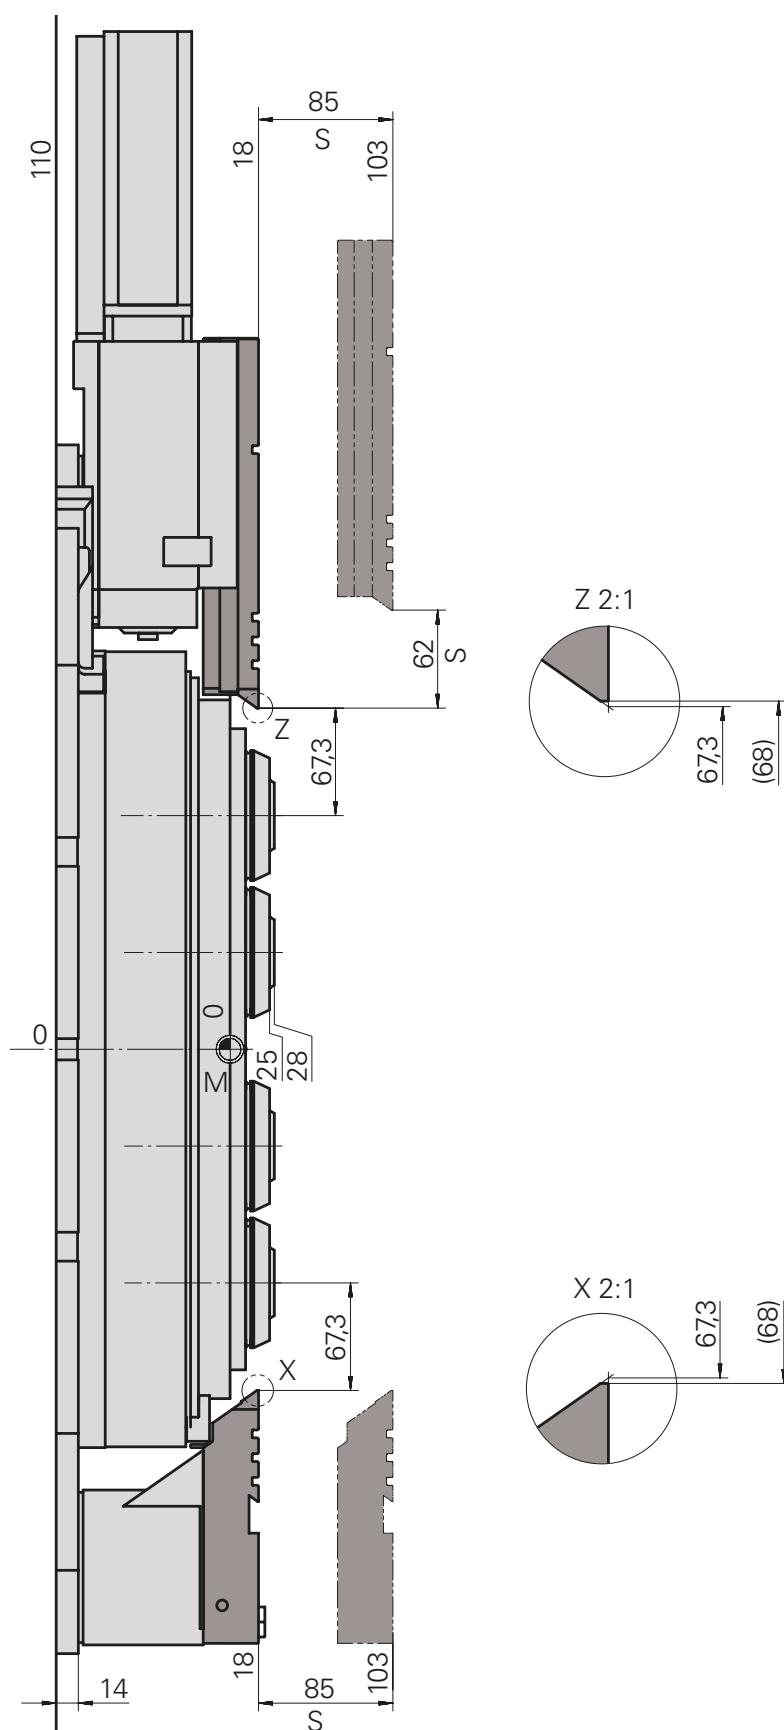
- 2x4 spindles
- 16 tool carriers with 1 or 2 axes, 2x swiveling synchronous spindles, 2x rear slides
- 2 rear end machining units each with 6 tools, max. 3 driven on each unit
- Multiple tooling of the cross slide unit optional
- Only the tool holders determine the machining direction (inside or outside)
- Transverse machining with live tools
- Machining on cut-off end with 2 tools simultaneously per swiveling synchronized spindle

## Machine concept of the INDEX MS22-8

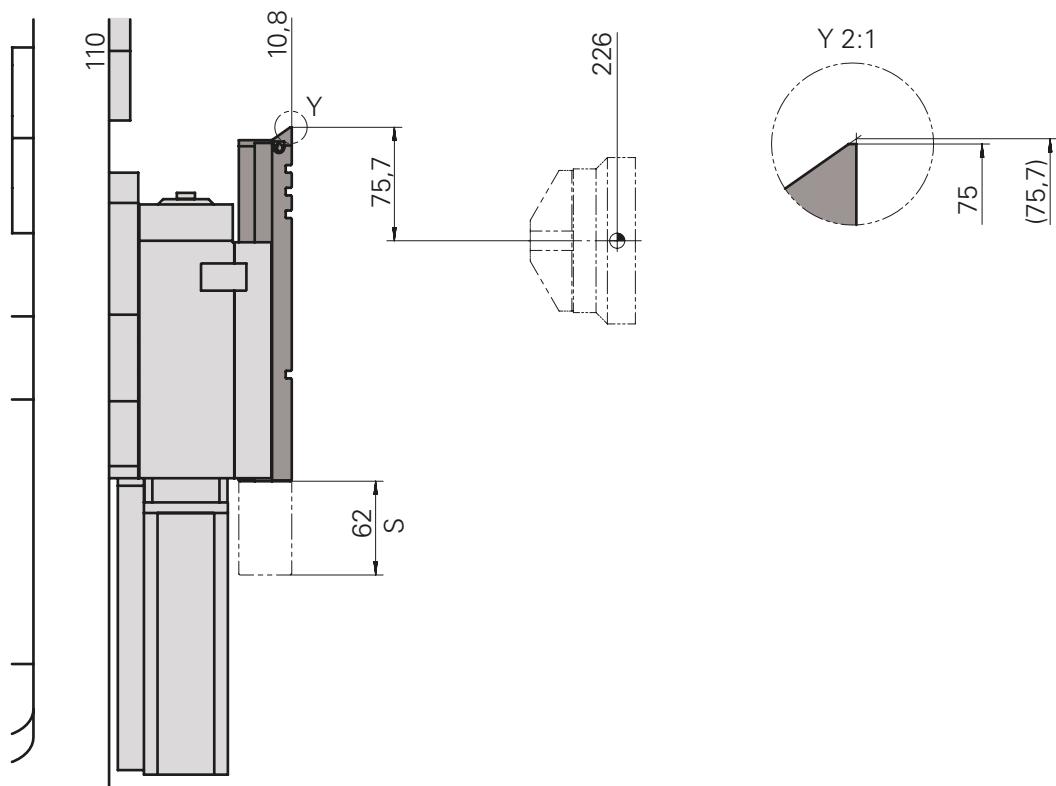
### Double rear end machining



- The same machine configuration as for double four-spindle machine
- Eight-spindle machine with simultaneous rear end machining in 2 spindle positions
- Front end machining on 6 main spindles
- Simultaneous cutoff-side machining on 2 swiveling synchronous spindles
- Advantage: Reduced cycle time with time-determining rear end machining

**Travel of cross slide unit INDEX MS22-8****Cross slide unit X-NC / Z-NC 1.1 - 8.2****Cross slide unit X-rigid 1.2 - 7.1**

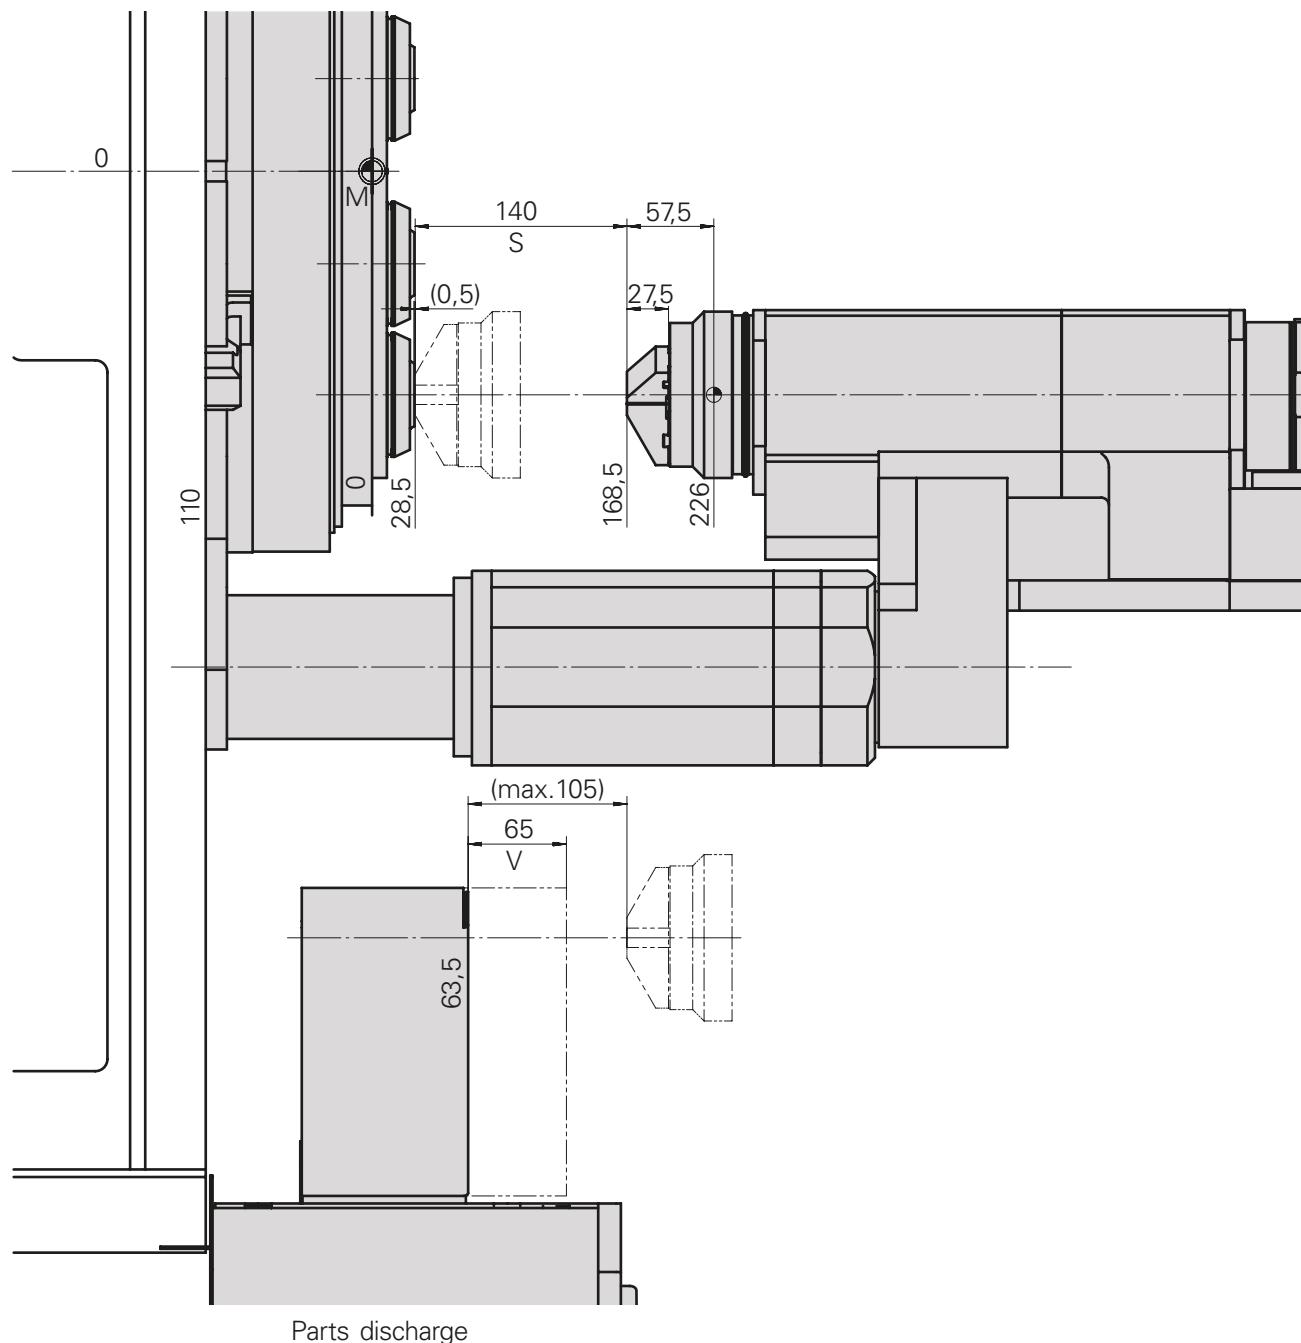
S = travel of cross slide unit

**Travel of cross slide unit INDEX MS22-8****Cross slide unit X-NC / Z rigid 7.3 / 8.3**

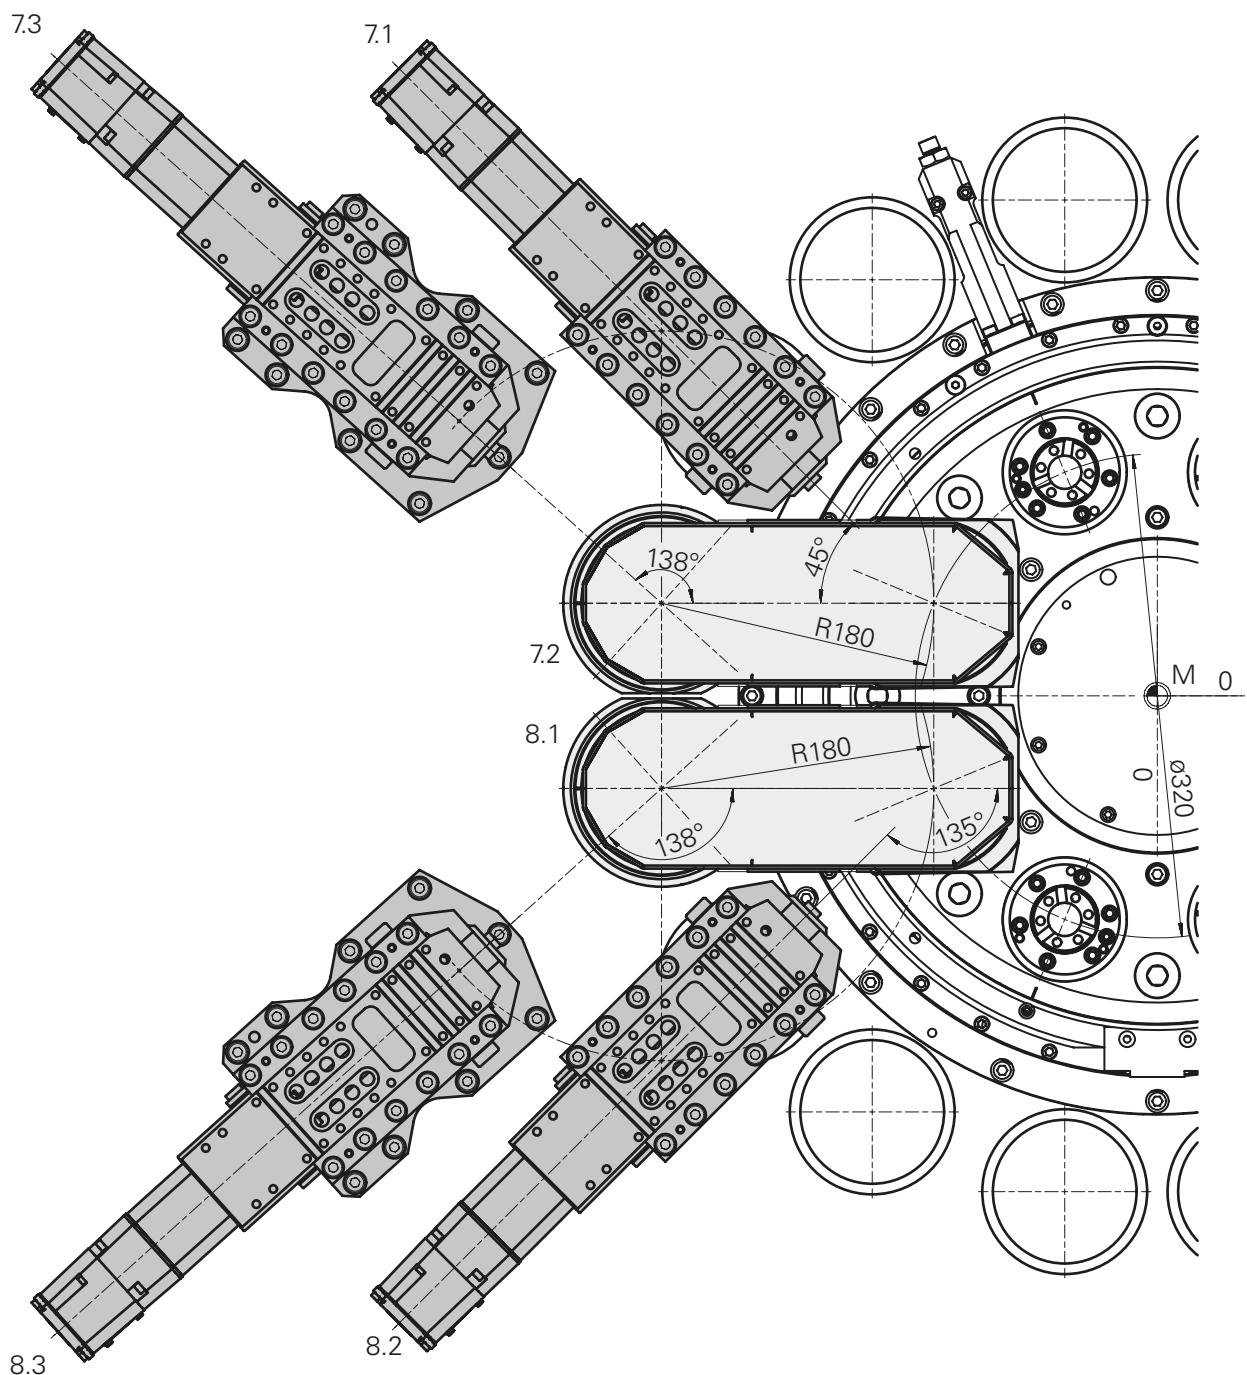
S = travel of cross slide unit

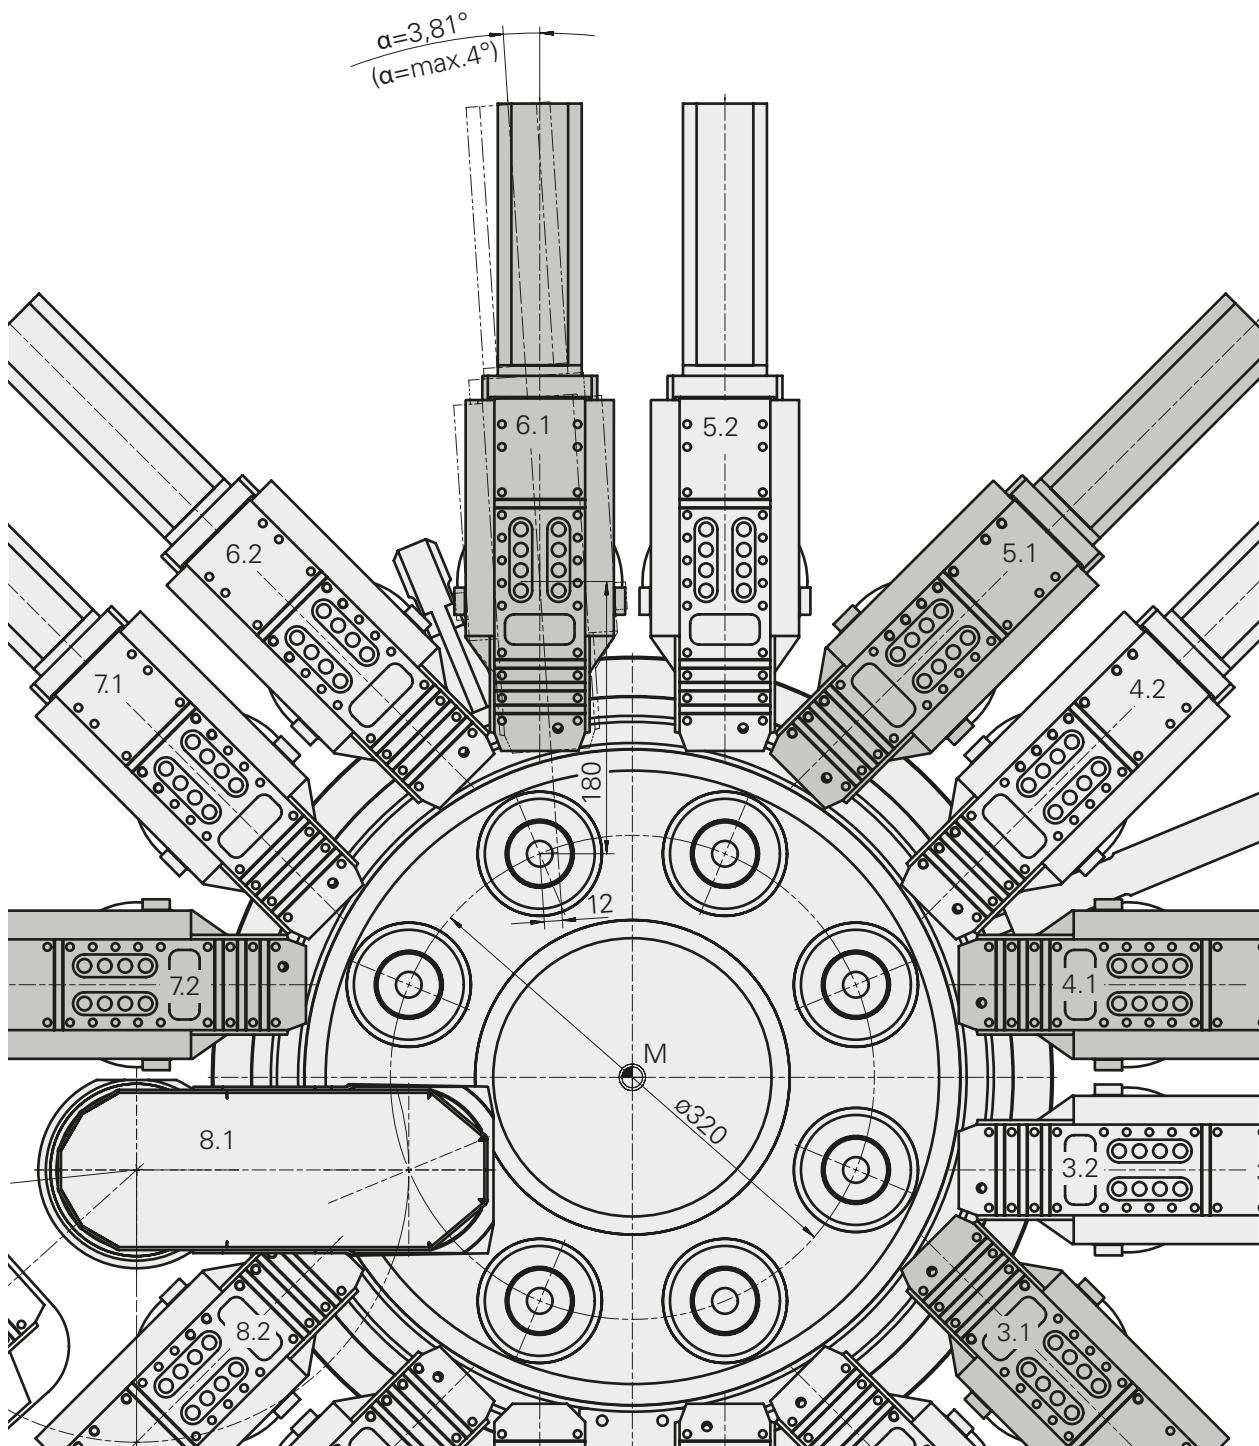
**Synchronized spindle INDEX MS22-8****Synchronous spindle with parts removal 7.2, 8.1**

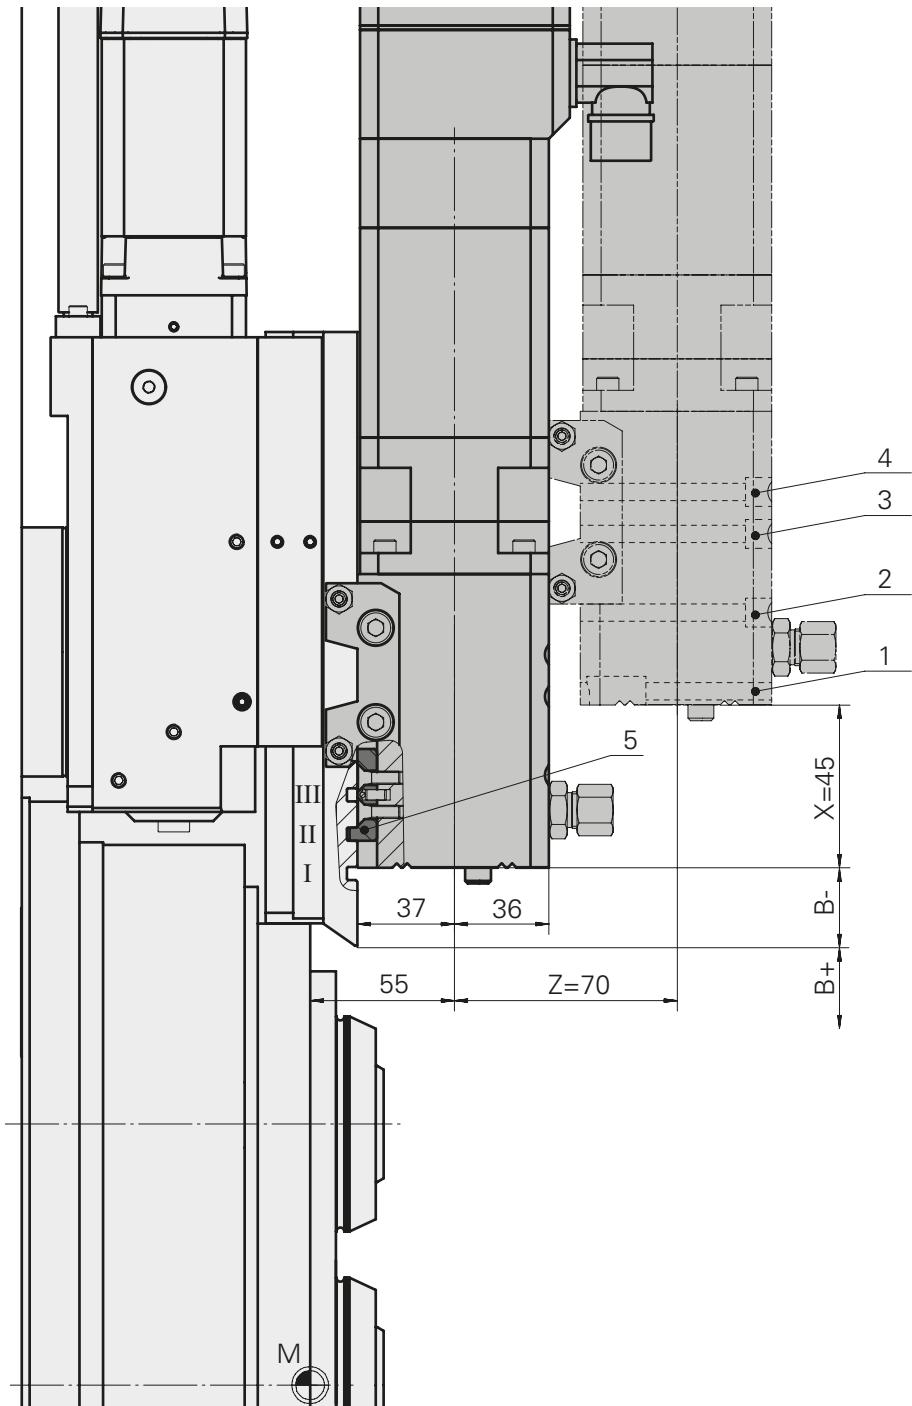
Clamping device height  
Standard: 57.5mm  
for Hainbuch deadlength and  
Röhm chuck with top jaws



S = travel of cross slide unit  
V = adjustment option

**Synchronized spindle INDEX MS22-8****Rear end machining on swivel axis 7.2, 8.1****Rear end machining unit on cross slide unit 7.1, 7.3, 8.2, 8.3**

**Y axis INDEX MS22-8****Attachable to cross slide unit 3.1, 4.1, 5.1, 6.1, 7.2** $\alpha = 0.93337^\circ$  per motor revolution

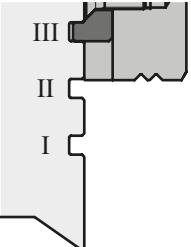
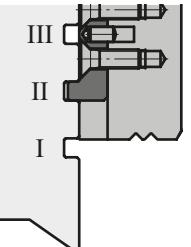
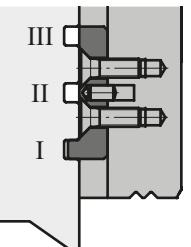
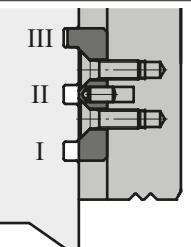
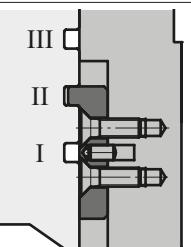
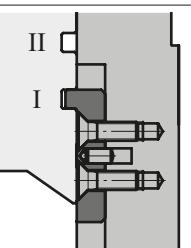
**Tool drive unit shank VDI20, INDEX MS22-8****Cross slide unit 1.1 - 8.2****Installation size**

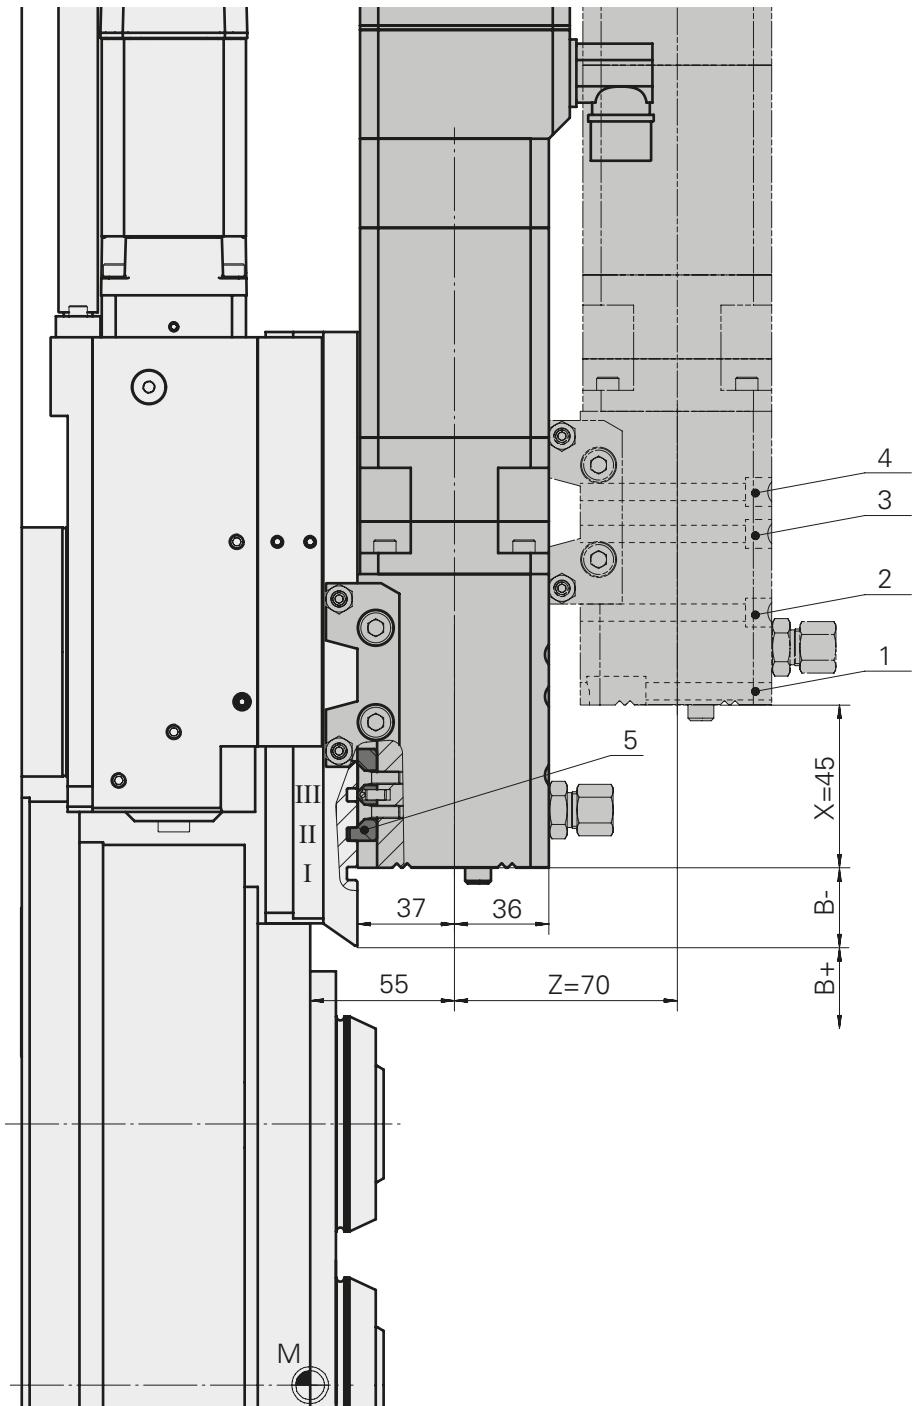
1-4 = pair of screws

5 = slot nut

I, II, III = slide slot

**Tool drive unit shank VDI20, INDEX MS22-8****Cross slide unit 1.1 - 8.2****Installation size**

Basic dimension B	Slot nut 10223322 used in the cross-slot unit slot	used pairs of screws
-45,4 mm		4 1
-30,4 mm		4 1
-15,4 mm		4 (2) 1
-15,4 mm		4 (2) 1
-0,4 mm		3 2
+14,6 mm		3 2

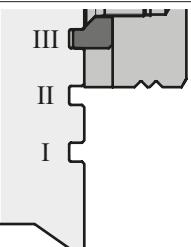
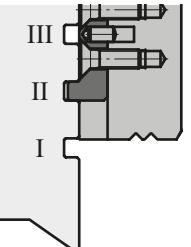
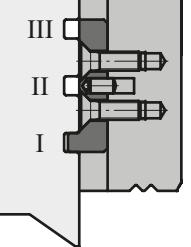
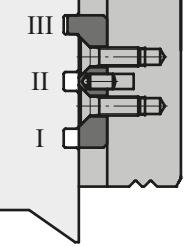
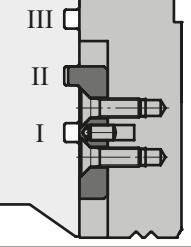
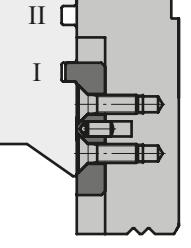
**Tool drive unit reinforced shank VDI25, INDEX MS22-8****Cross slide unit 1.1 - 8.2****Installation size**

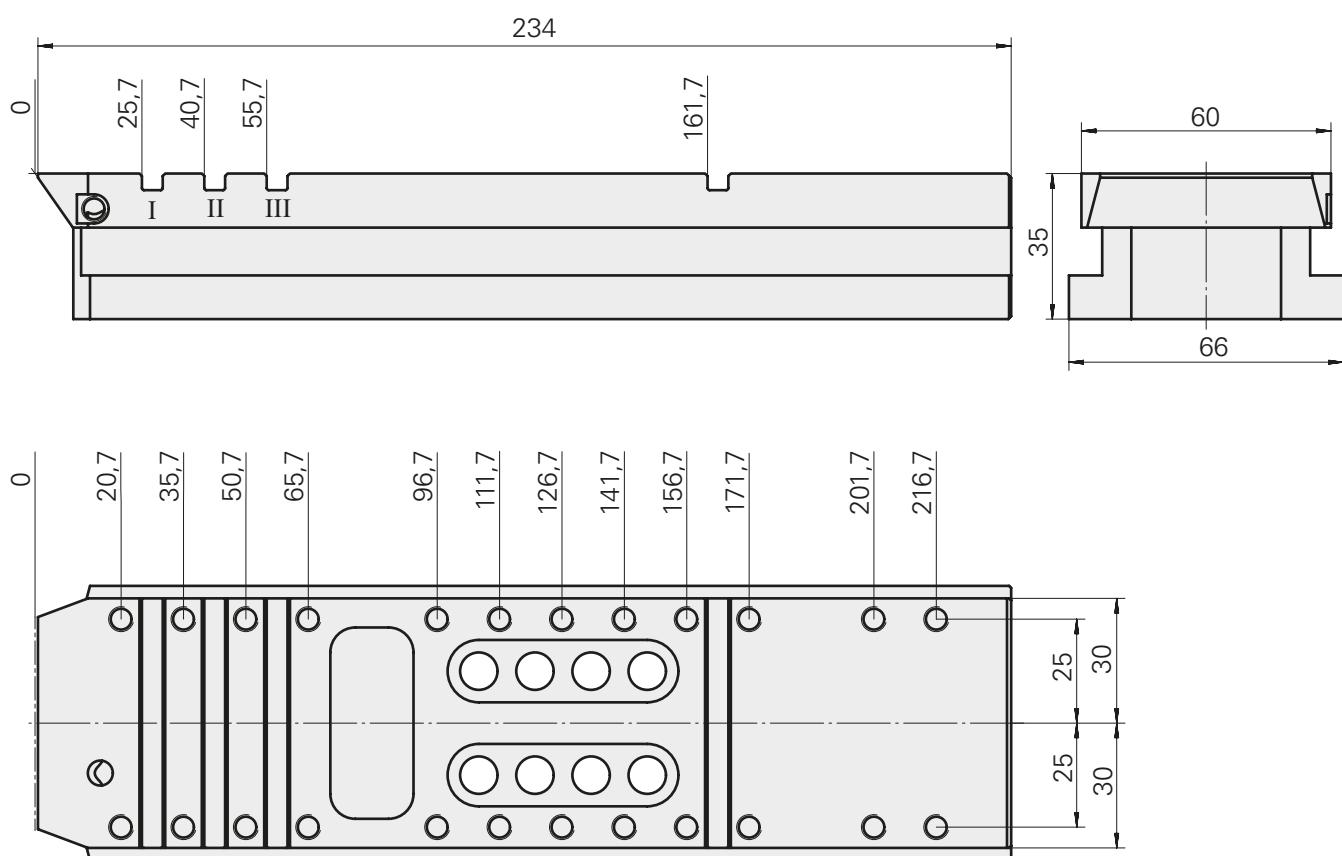
1-4 = pair of screws

5 = slot nut

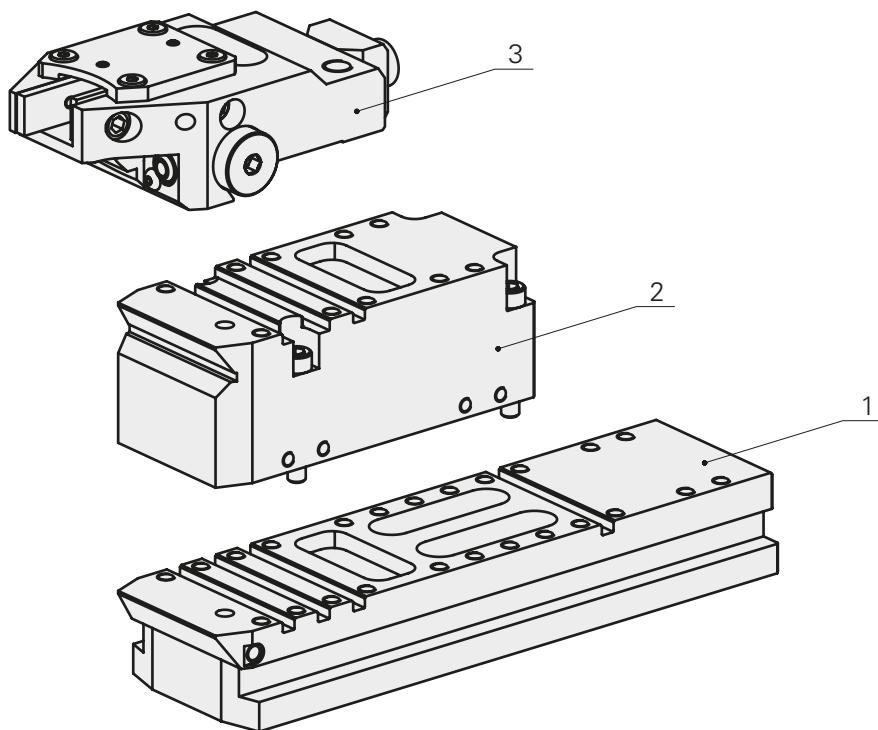
I, II, III = slide slot

**Tool drive unit shank VDI25, INDEX MS22-8****Cross slide unit 1.1 - 8.2****Installation size**

Basic dimension B	Slot nut 10223322 used in the cross-slot unit slot	used pairs of screws
-43,5 mm		4 1
-28,5 mm		4 1
-13,5 mm		4 (2) 1
-13,5 mm		4 (2) 1
+1,5 mm		3 2
+16,5 mm		3 2

**Cross slide unit INDEX MS22-8****X-NC 1.1 - 8.2**

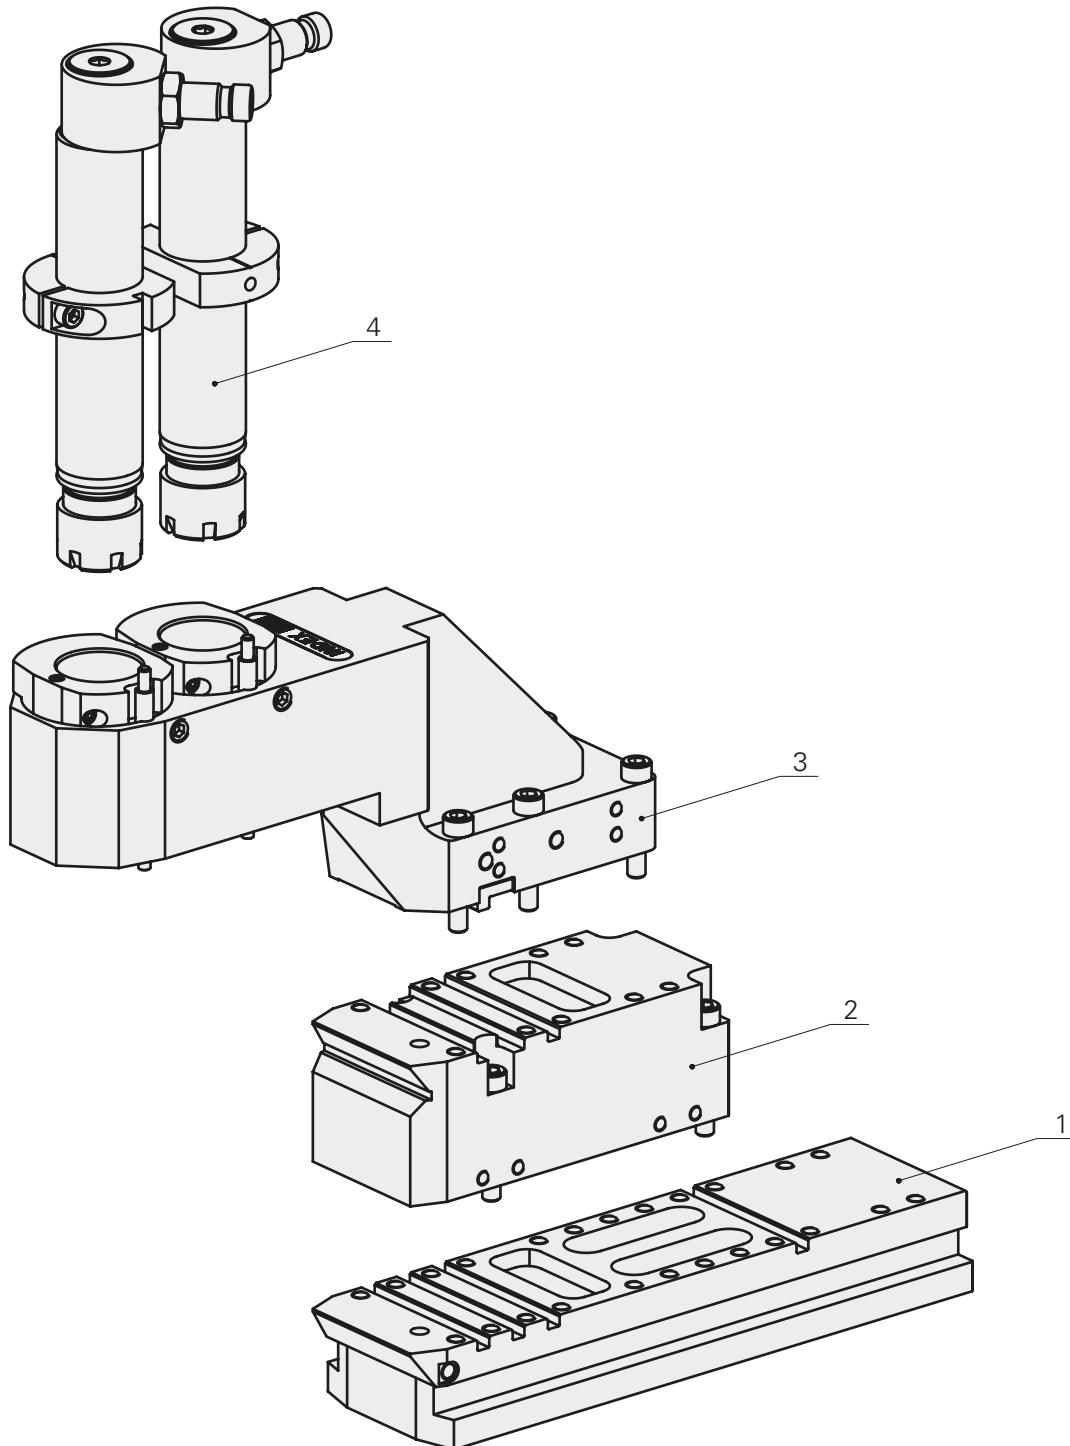
I, II, III = cross slide slot

**Modular design of INDEX MS22-8****Grooving tool holder****Cross slide unit 1.1 - 8.2, machining in X/Z direction**

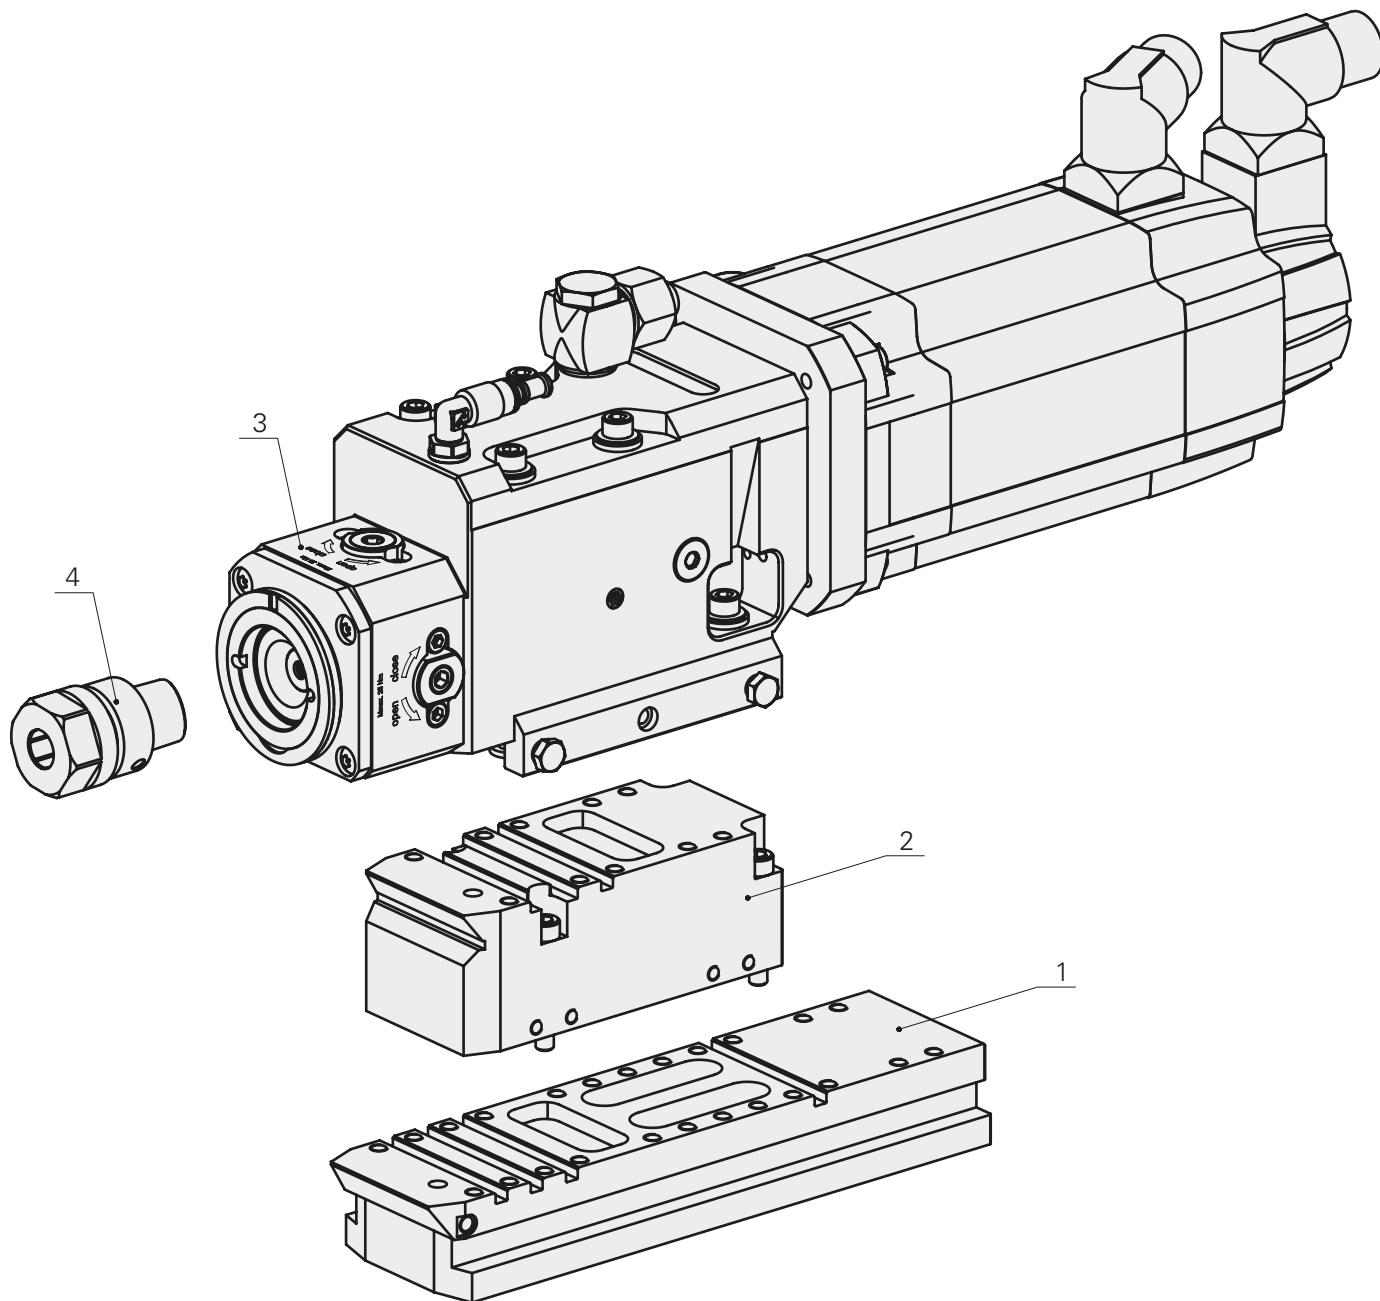
1 Cross slide unit 1.1 - 8.2

2 Intermediate plate as needed

3 Grooving tool holder

**Modular design of INDEX MS22-8****Base holder with drill holder D28,5mm****Cross slide unit 1.1 - 8.2, machining in X/Z direction**

- 1 Cross slide unit 1.1 - 8.2
- 2 Intermediate plate as needed
- 3 Base holder
- 4 Drill holder ø28,5mm

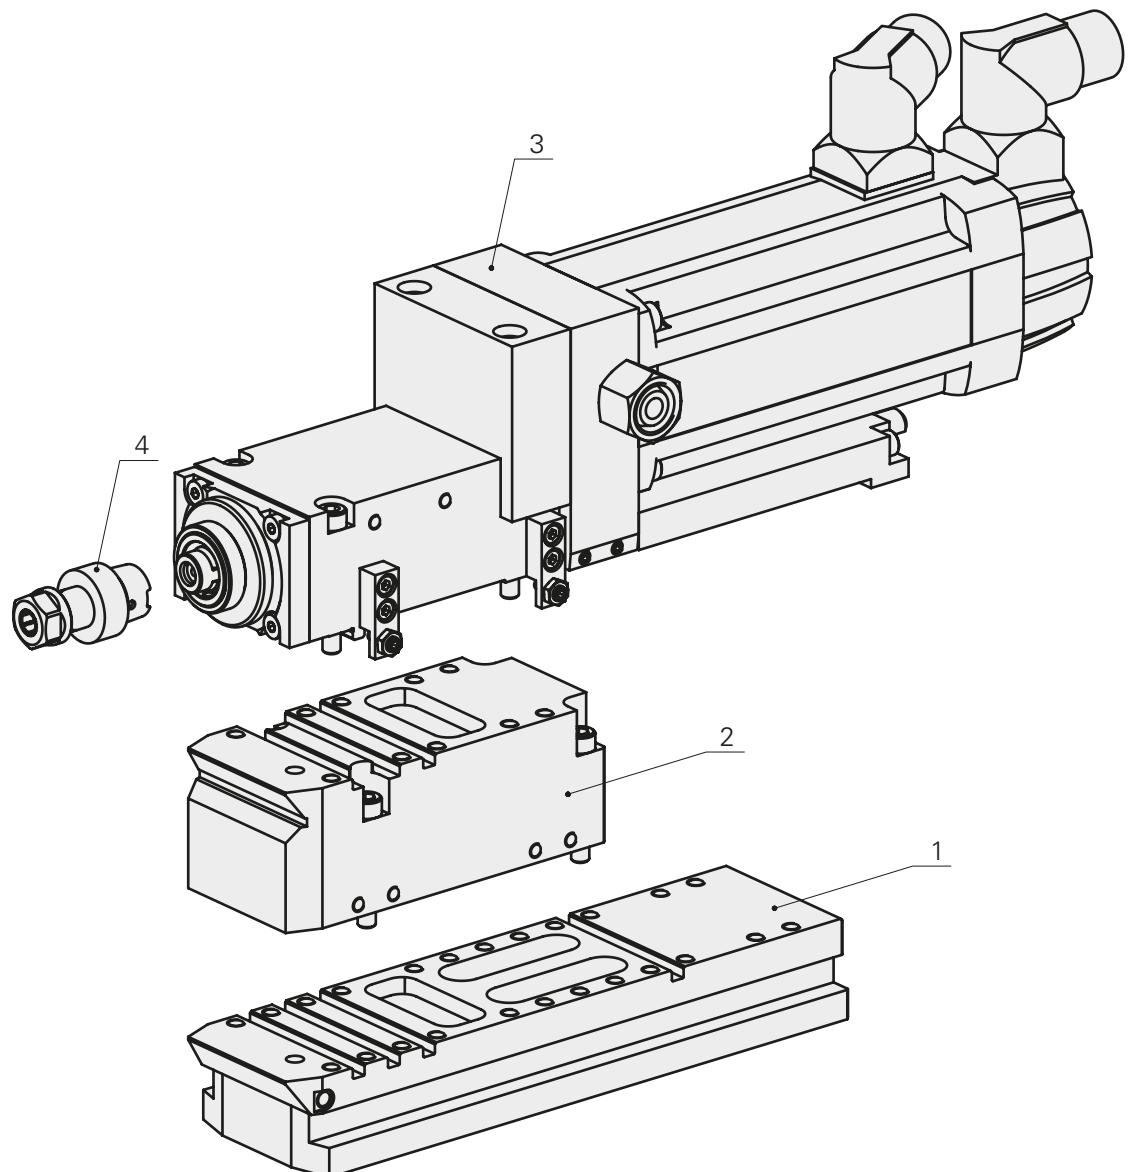
**Modular design of INDEX MS22-8****Milling tool holder****Cross slide unit 1.1 - 8.2, machining in X/Z direction**

1 Cross slide unit 1.1 - 8.2

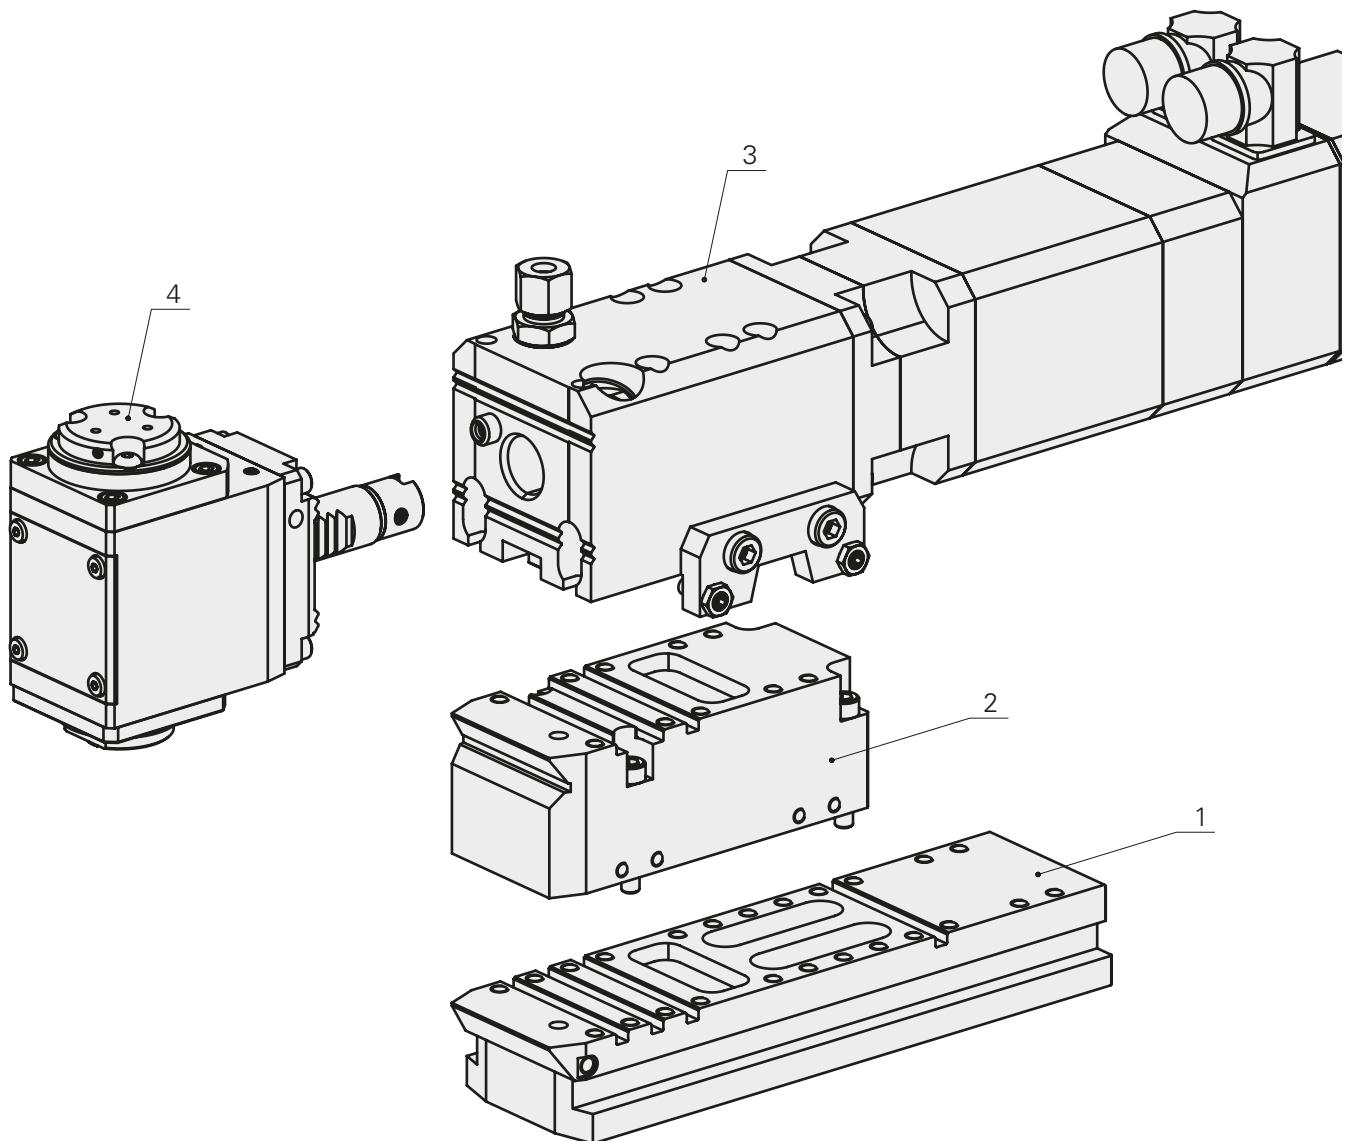
2 Intermediate plate as needed

3 Milling unit

4 Quick-change insert INDEX TRAUB CAPTO

**Modular design of INDEX MS22-8****Milling unit, shank HSK25C****Cross slide unit 1.1 - 8.2, machining in X/Z direction**

- 1 Cross slide unit 1.1 - 8.2
- 2 Intermediate plate as needed
- 3 Milling unit
- 4 Tool holders HSK25C

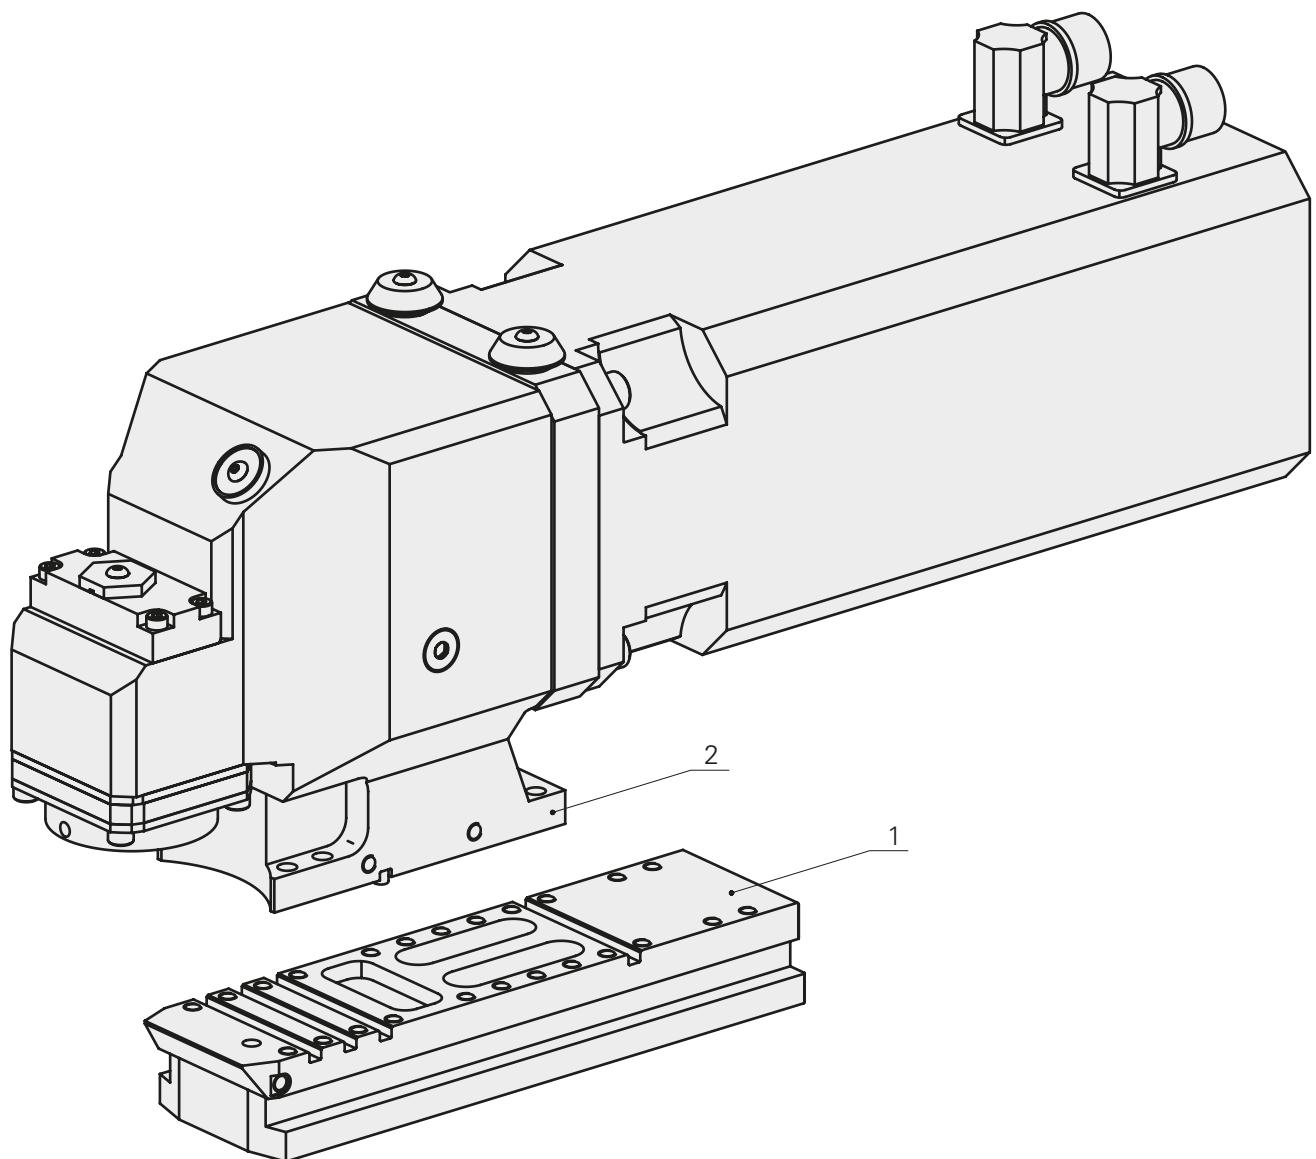
**Modular design of INDEX MS22-8****Tool drive unit, shank VDI20/VDI25****Cross slide unit 1.1 - 8.2, 7.3/8.3 machining in X/Z direction**

1 Cross slide unit 1.1 - 8.2 (shown 1.1 - 8.2)

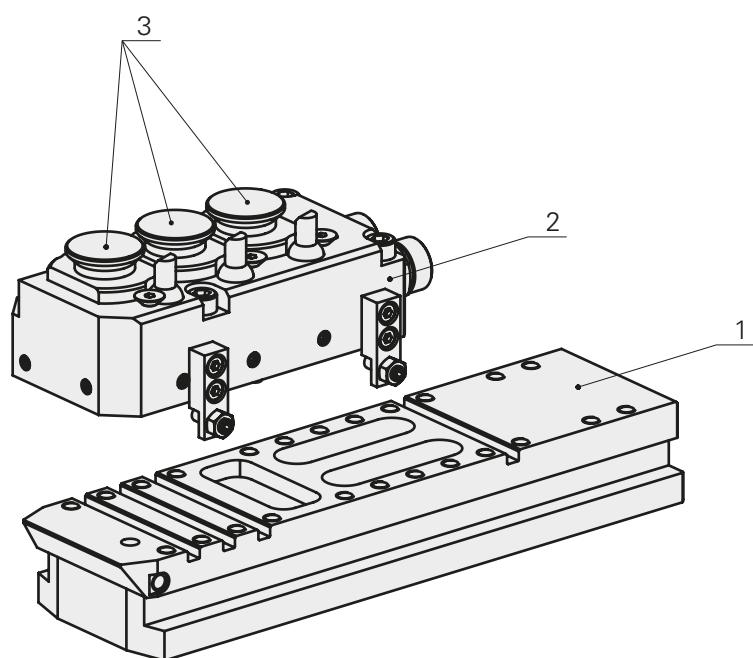
2 Intermediate plate as needed

3 Tool drive unit

4 Tool holder VDI20/VDI25

**Modular design of INDEX MS22-8****Polygon turning unit****Cross slide unit 1.1 - 8.2, machining in X/Z direction**

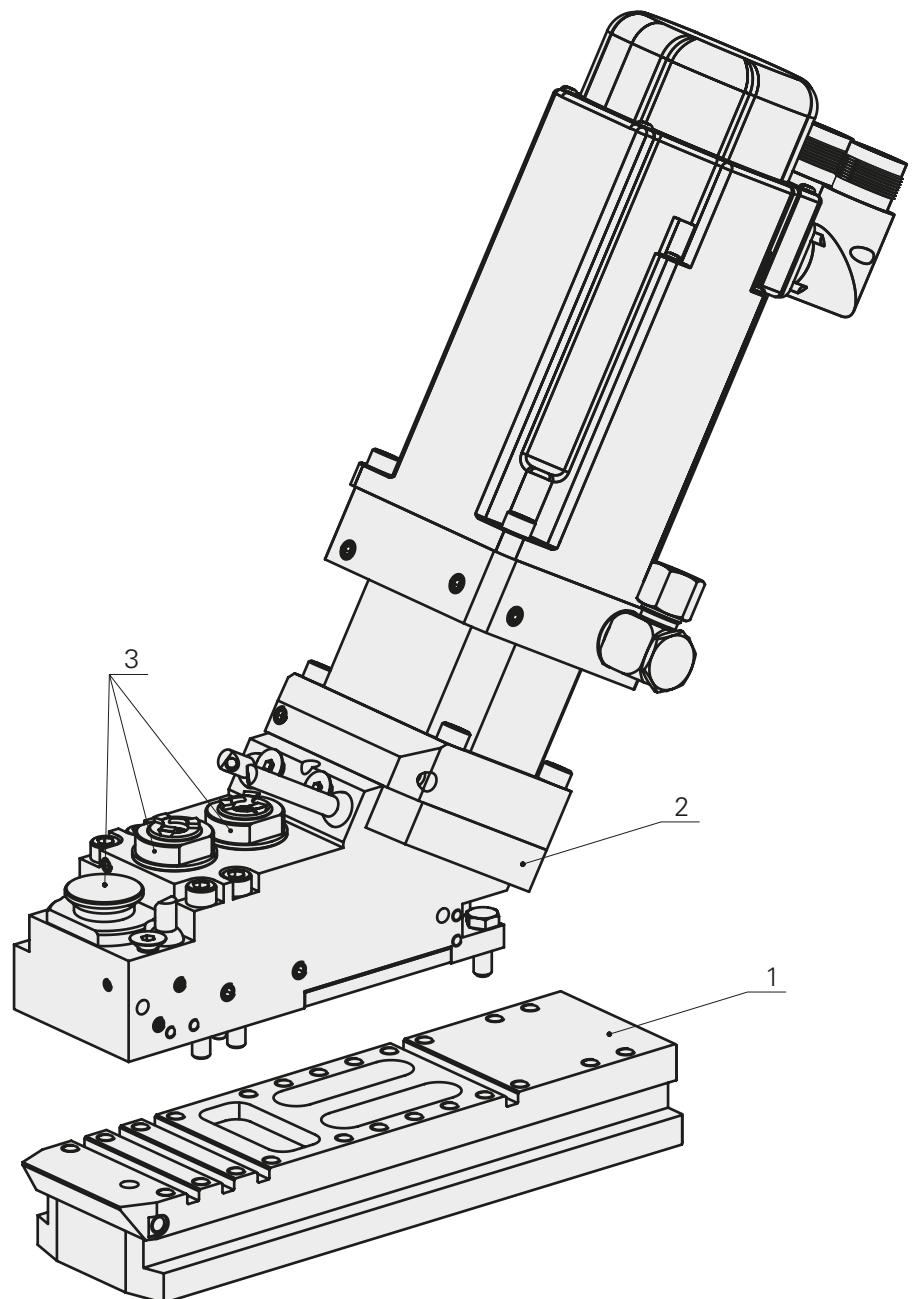
- 1 Cross slide unit 1.1 - 8.2
- 2 Polygon turning unit

**Modular design of INDEX MS22-8****Rear end machining unit, rigid****Cross slide unit 7.1/8.2, 7.3/8.3, machining in X/Z direction**

1 Cross slide unit 7.1/8.2, 7.3/8.3

2 Rear end machining unit, rigid

3 Mounting, fixed

**Modular design of INDEX MS22-8****Rear end machining unit****Cross slide unit 7.1/8.2, 7.3/8.3, machining in X/Z direction**

- 1 Cross slide unit 7.1/8.2, 7.3/8.3
- 2 Rear end machining unit
- 3 Mounting fixed / driven

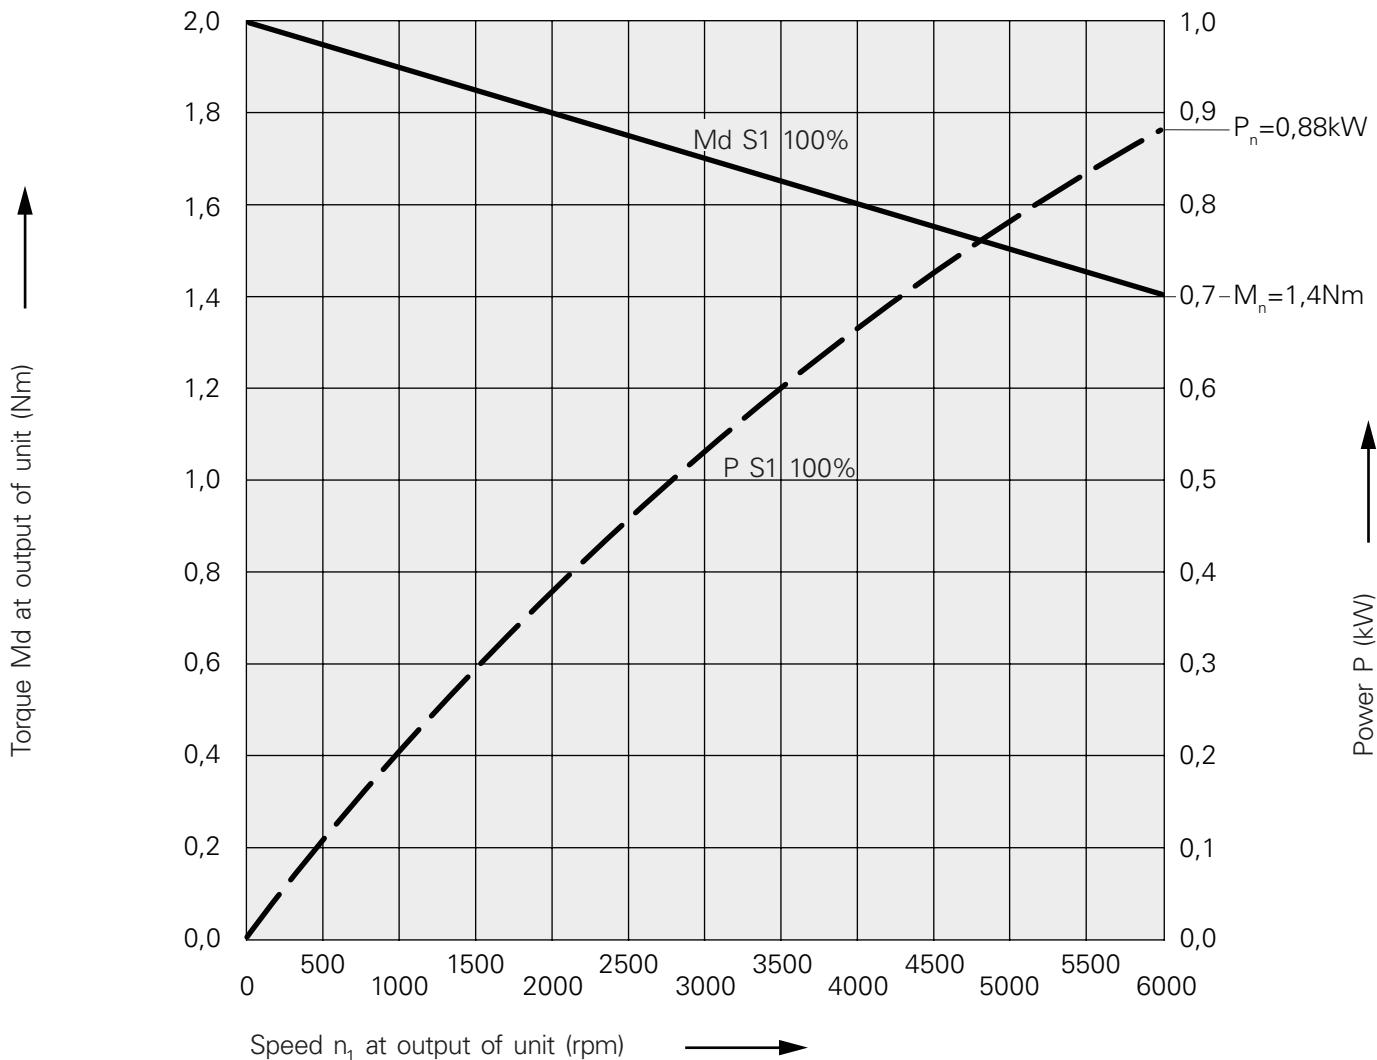
## Performance diagram

**Tool drive unit VDI20/VDI25, Cross slide unit 1.1 - 7.2, 8.1, 8.2**

Speed range 0-6000 rpm



For information on how to use the diagram, see Chapter "Technical Information".



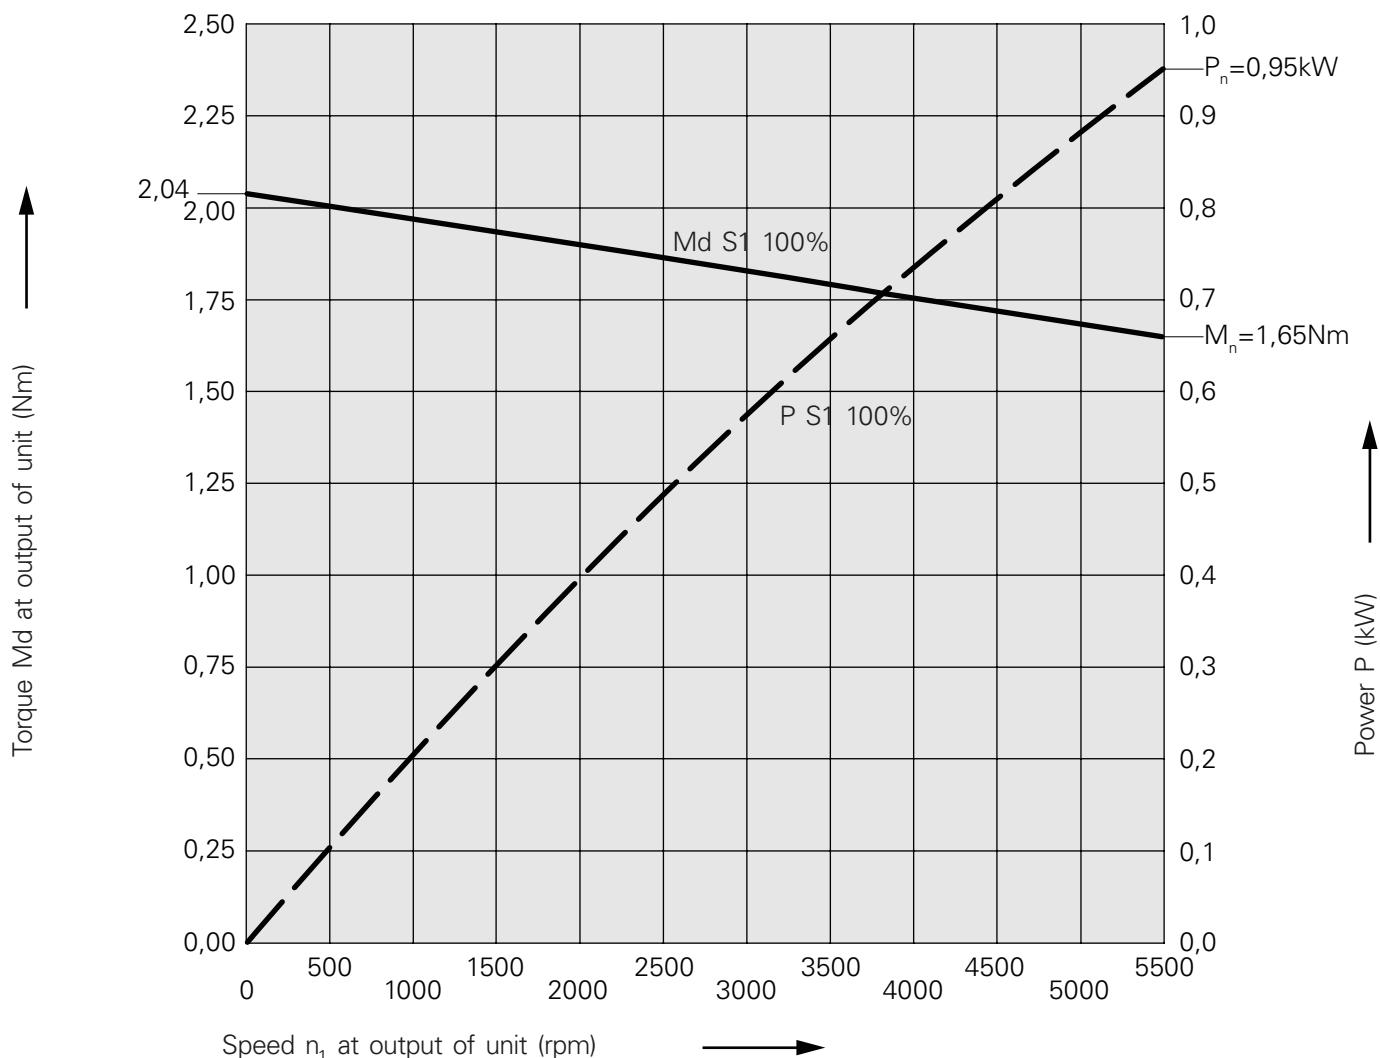
## Performance diagram

**Tool drive unit VDI20/VDI25, Cross slide unit 7.3, 8.3**

Speed range 0-5500 rpm



For information on how to use the diagram, see  
Chapter "Technical Information".



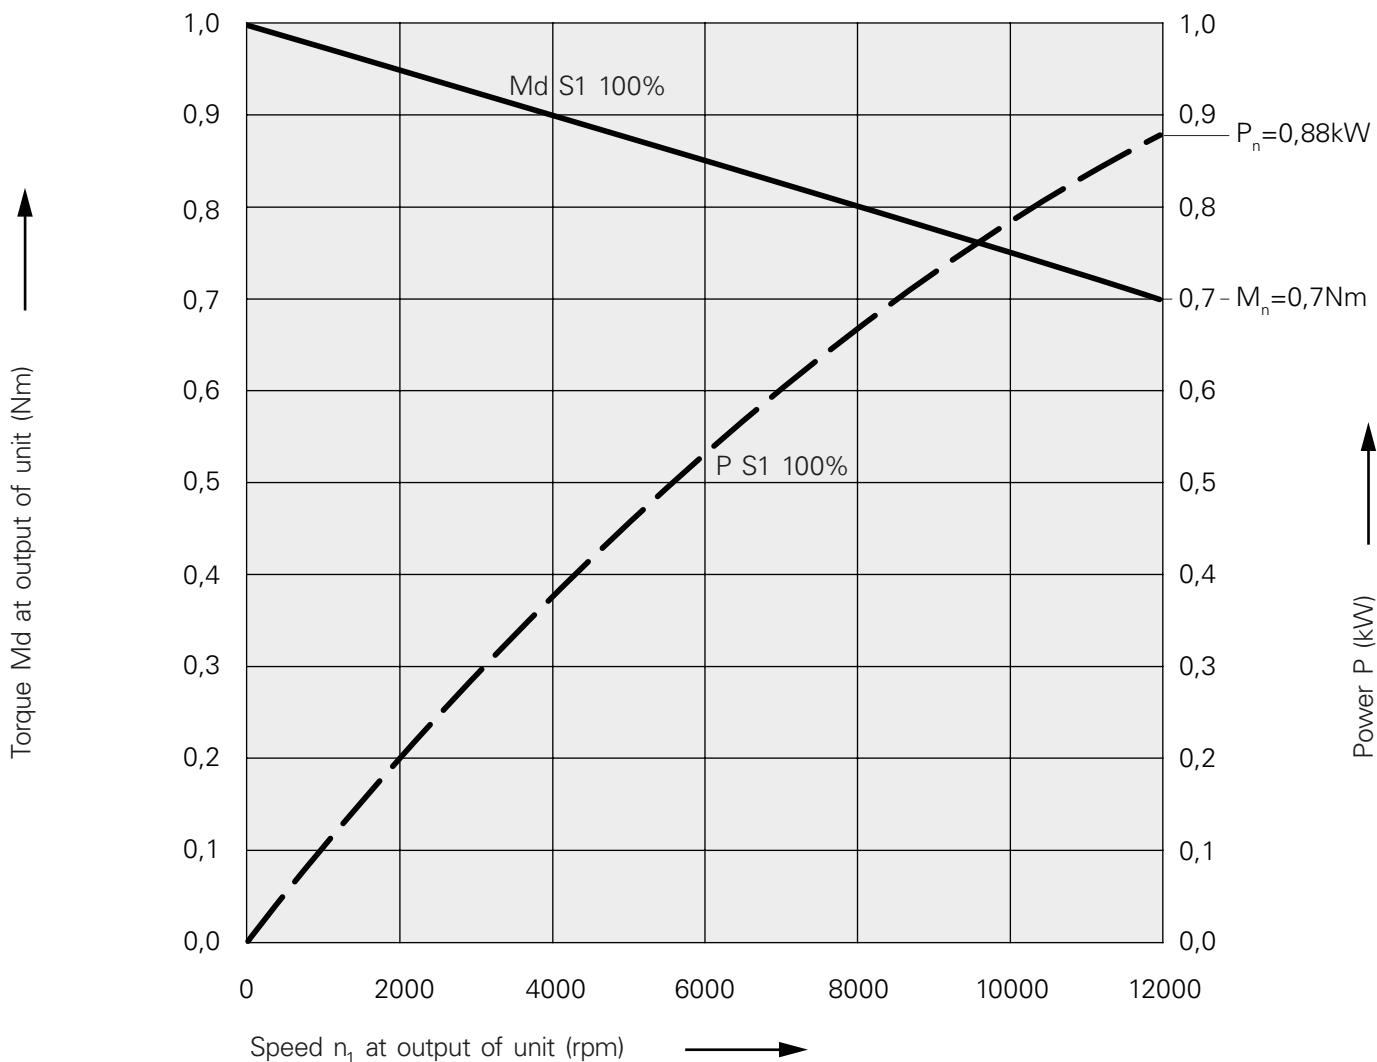
## Performance diagram

Milling unit transverse HSK25C,  $i=0,5$

Speed range 0-12000 rpm



For information on how to use the diagram, see Chapter "Technical Information".



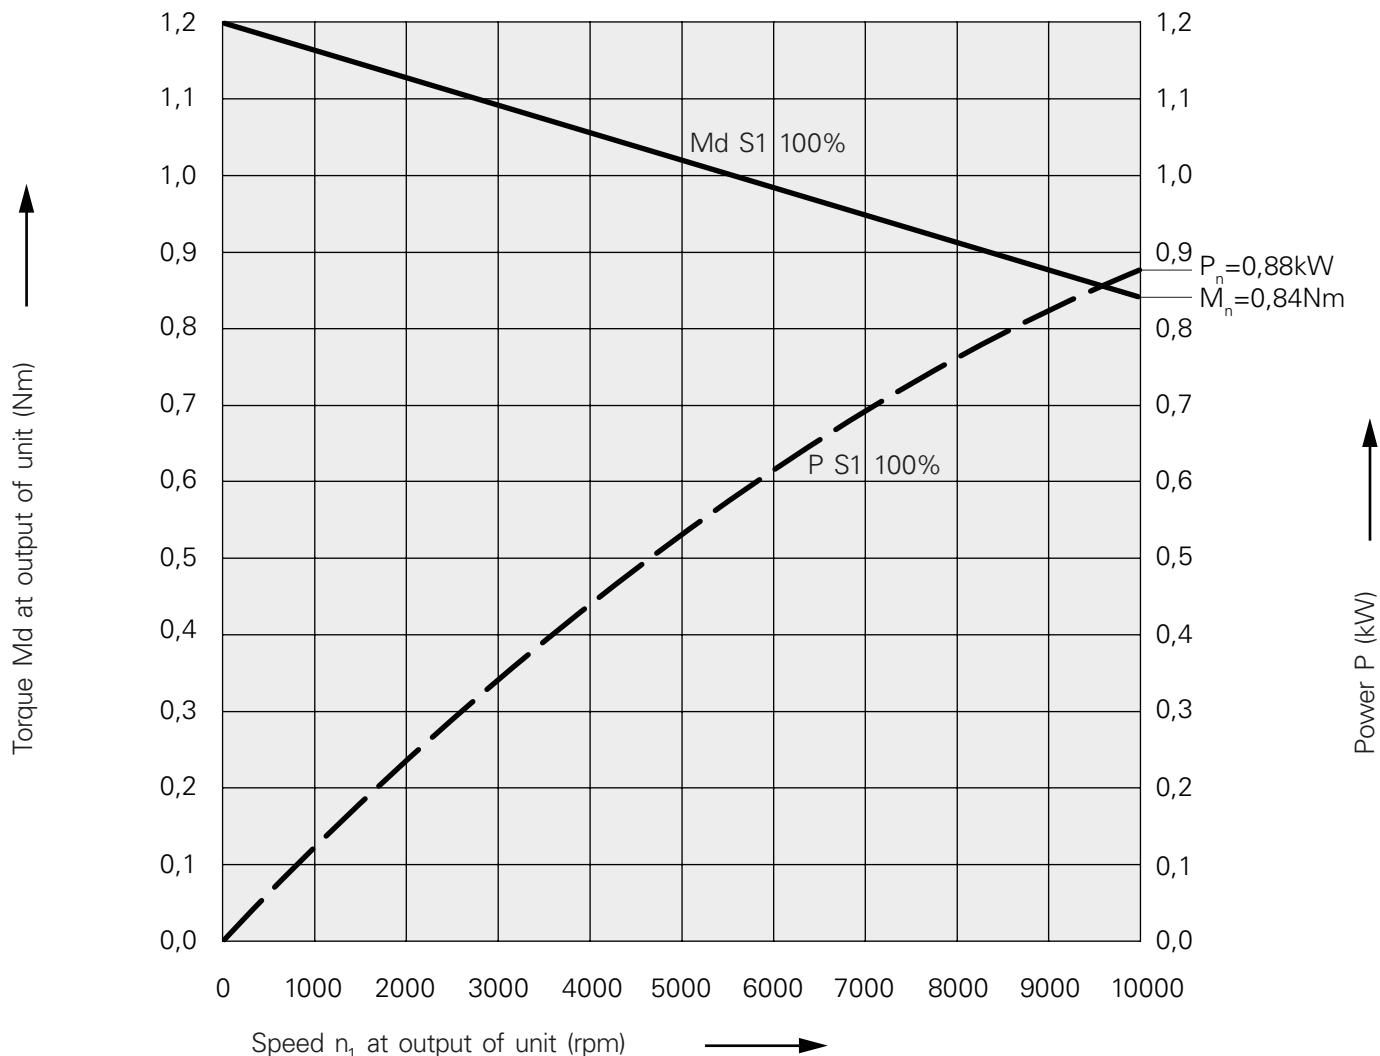
## Performance diagram

**Milling unit axis-parallel, HSK25C,  $i=0,59375$**   
**Milling unit angle-adjustable, HSK25C,  $i=0,6$**

Speed range 0-10000 rpm



For information on how to use the diagram, see  
Chapter "Technical Information".



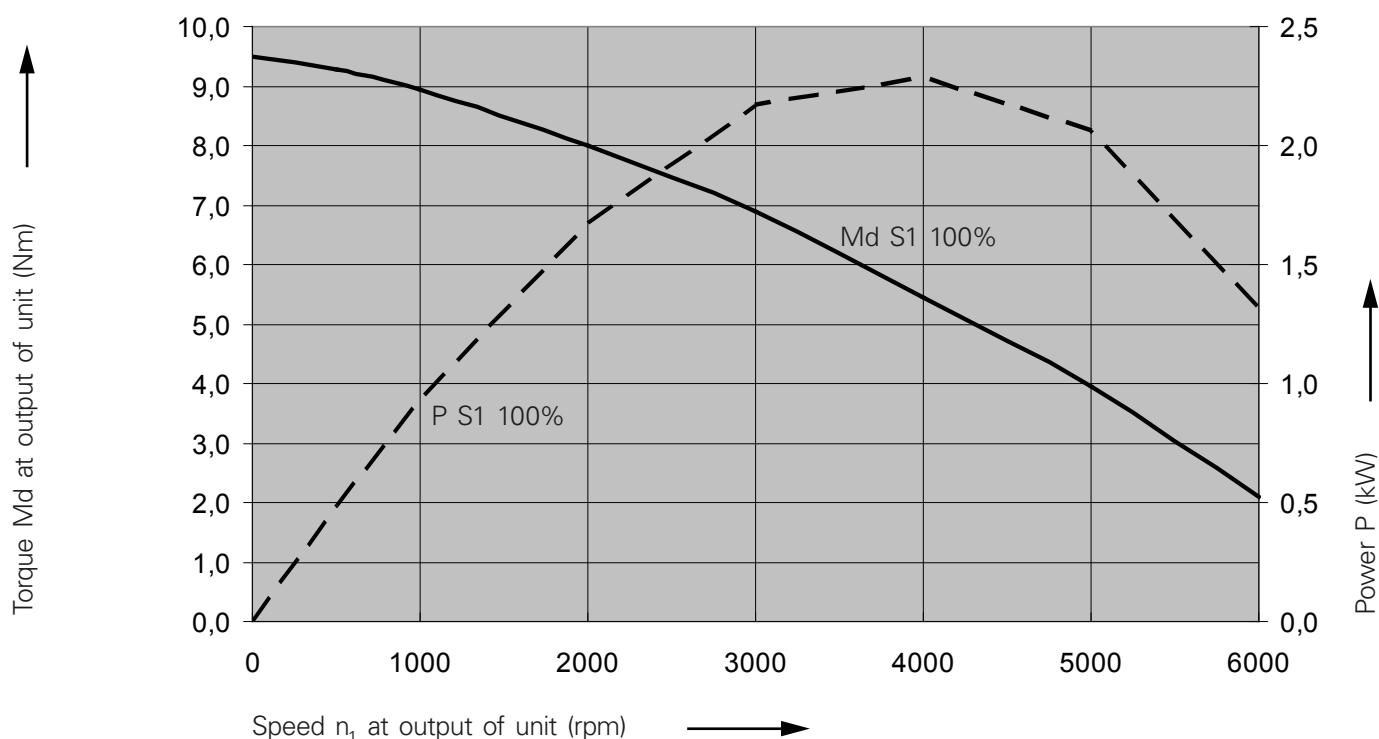
## Performance diagram

### Polygon turning unit i=1

Speed range 0-6000 rpm



For information on how to use the diagram, see Chapter "Technical Information".

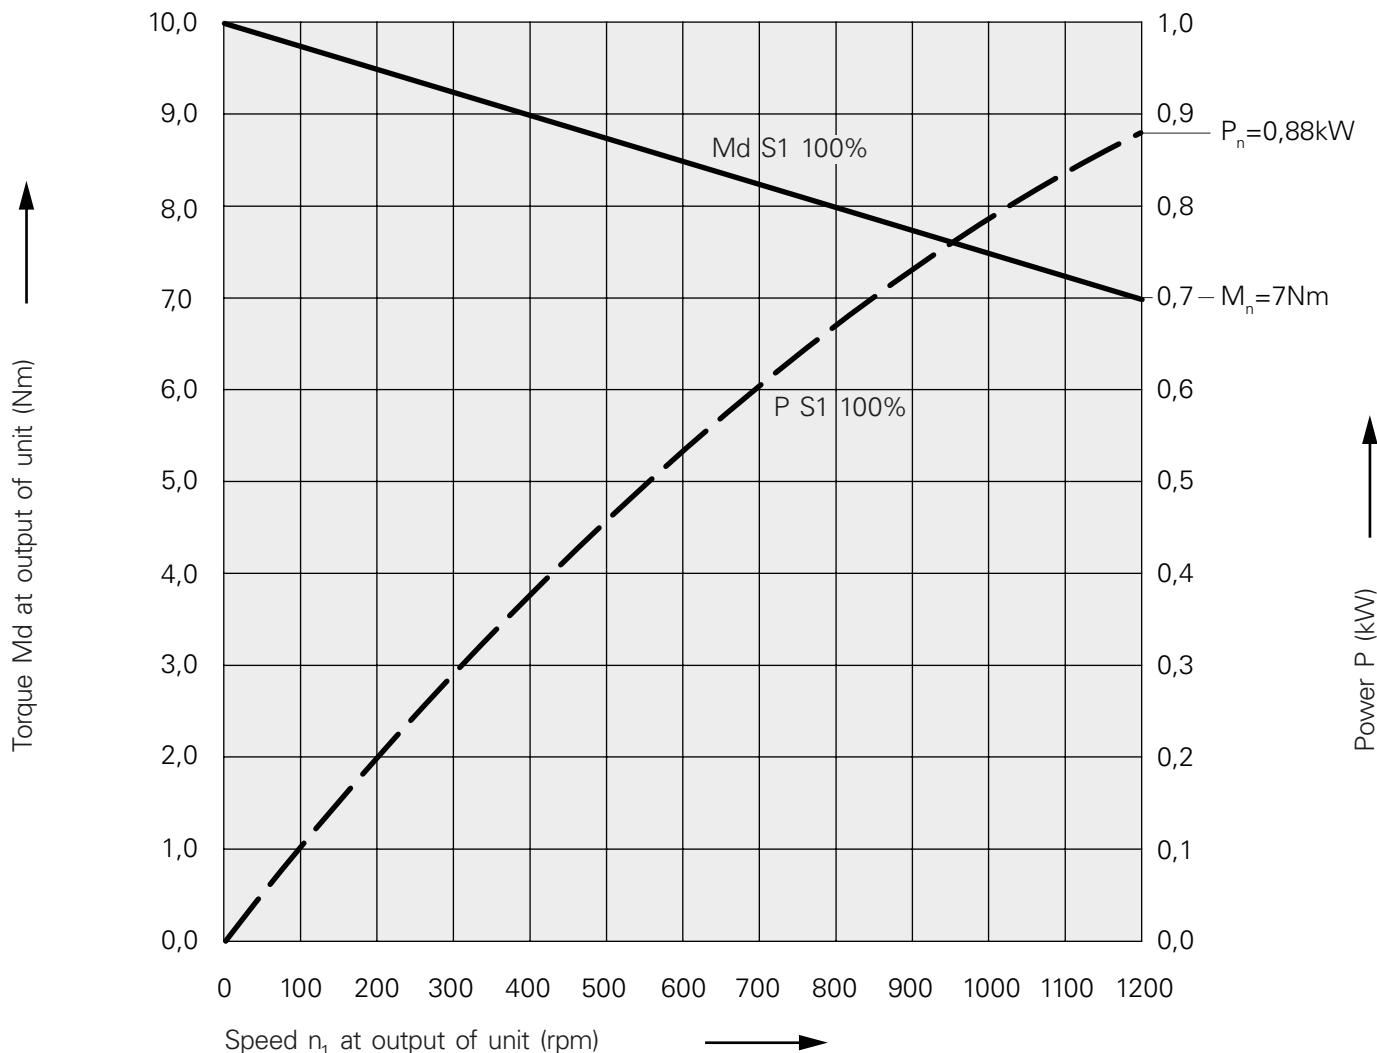


**Performance diagram****Polygon turning unit i=5**

Speed range 0-1200 rpm



For information on how to use the diagram, see  
Chapter "Technical Information".

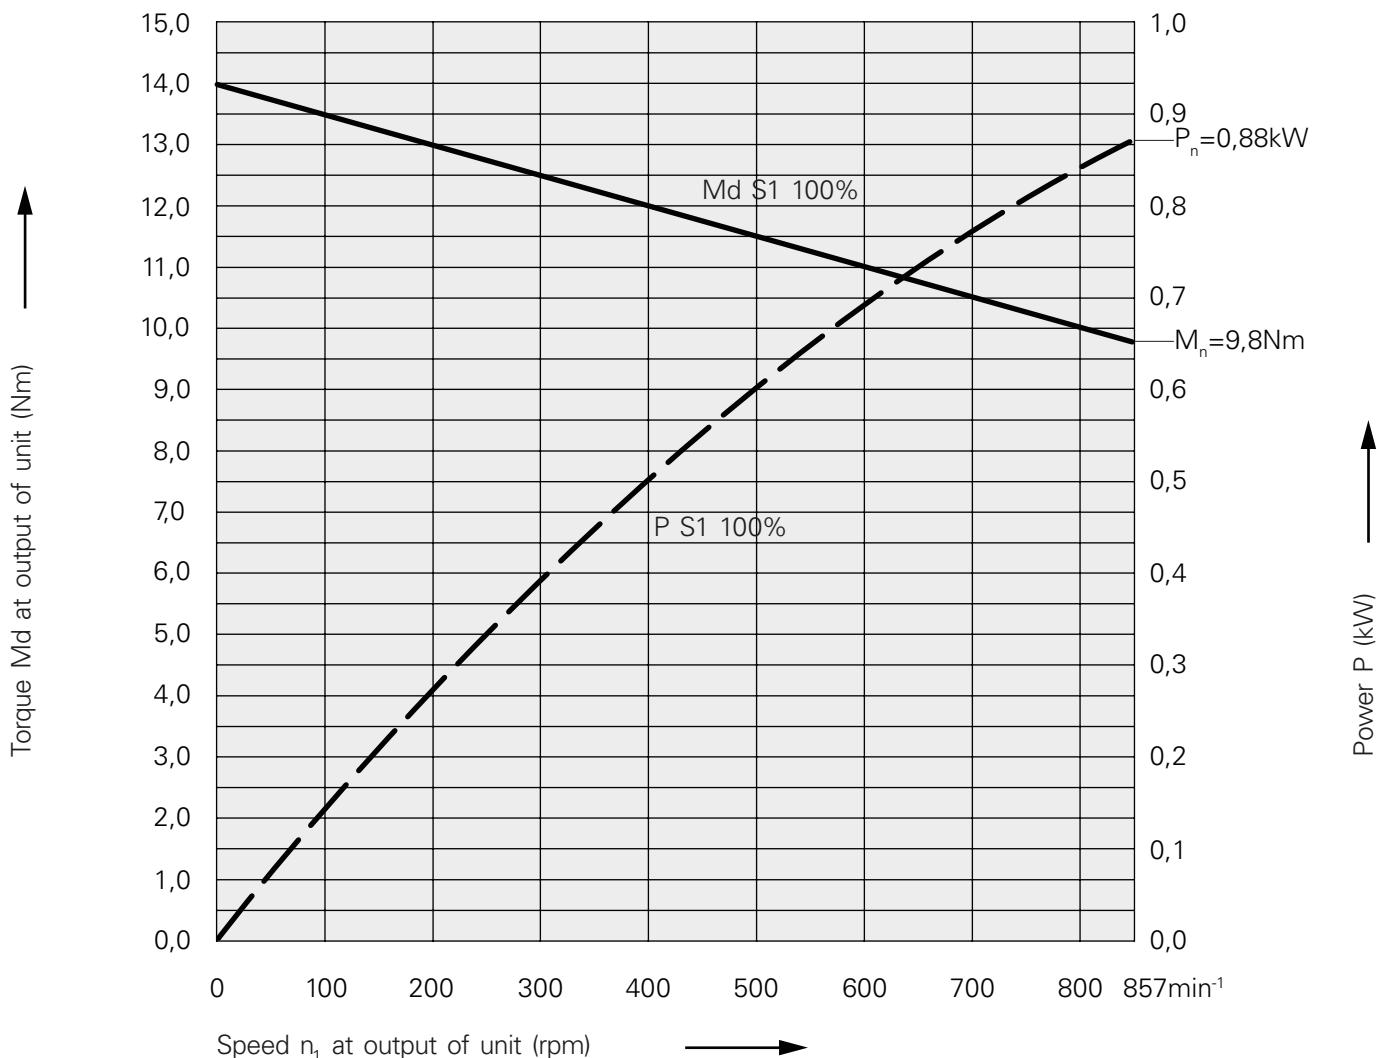


**Performance diagram****Polygon turning unit i=7**

Speed range 0-857 rpm



For information on how to use the diagram, see  
Chapter "Technical Information".



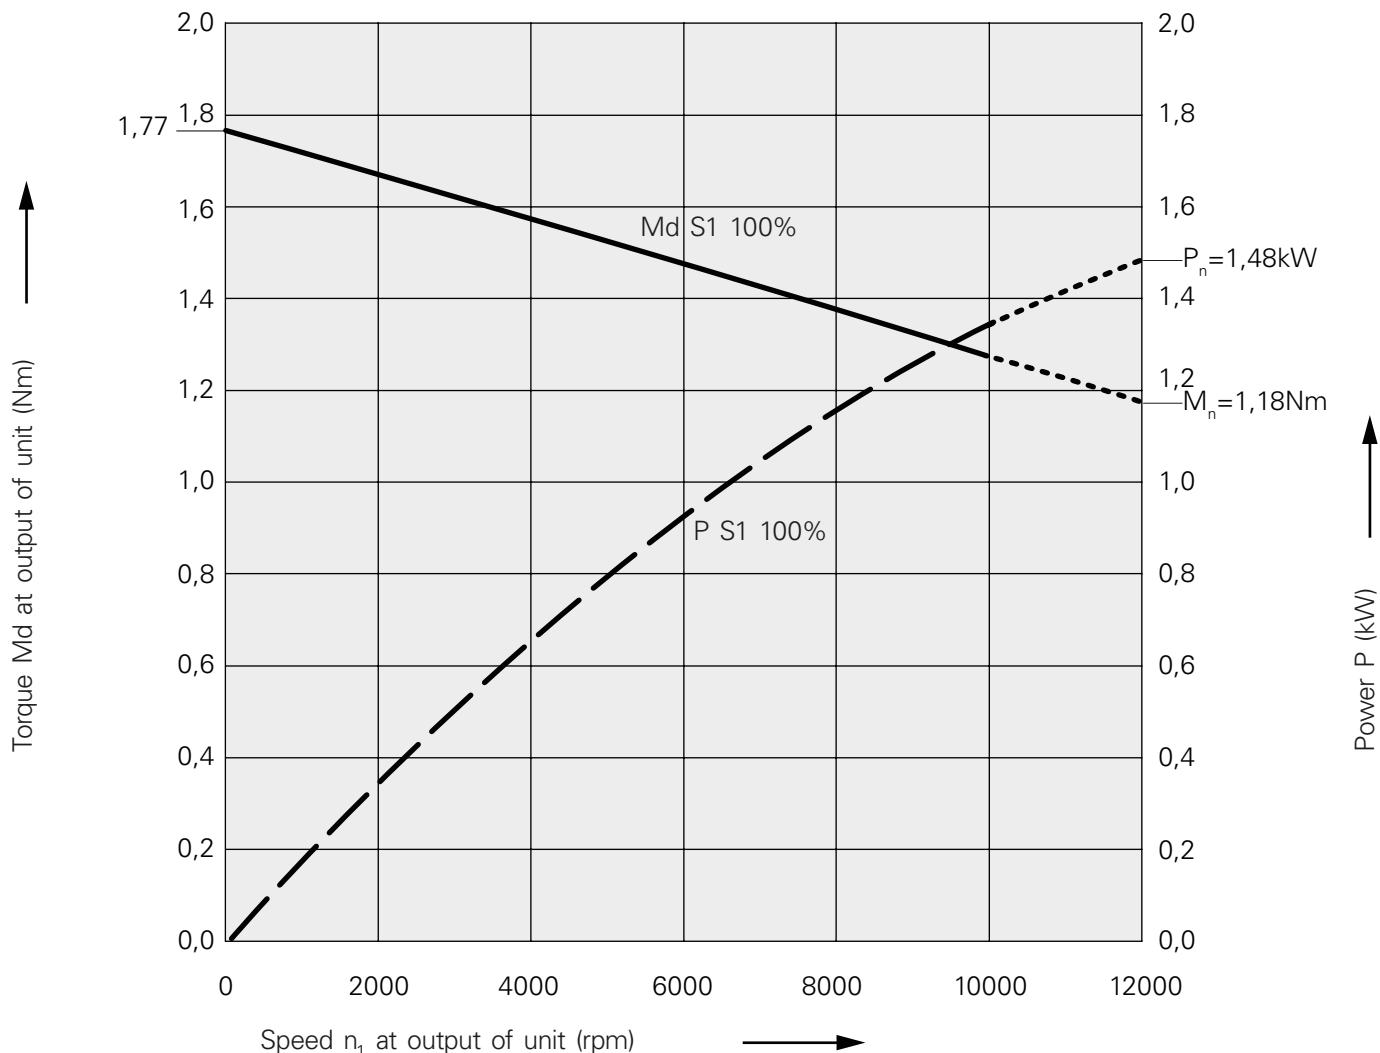
## Performance diagram

Rear end machining unit  $i=0,5$

Speed range 0-12000 rpm



For information on how to use the diagram, see Chapter "Technical Information".



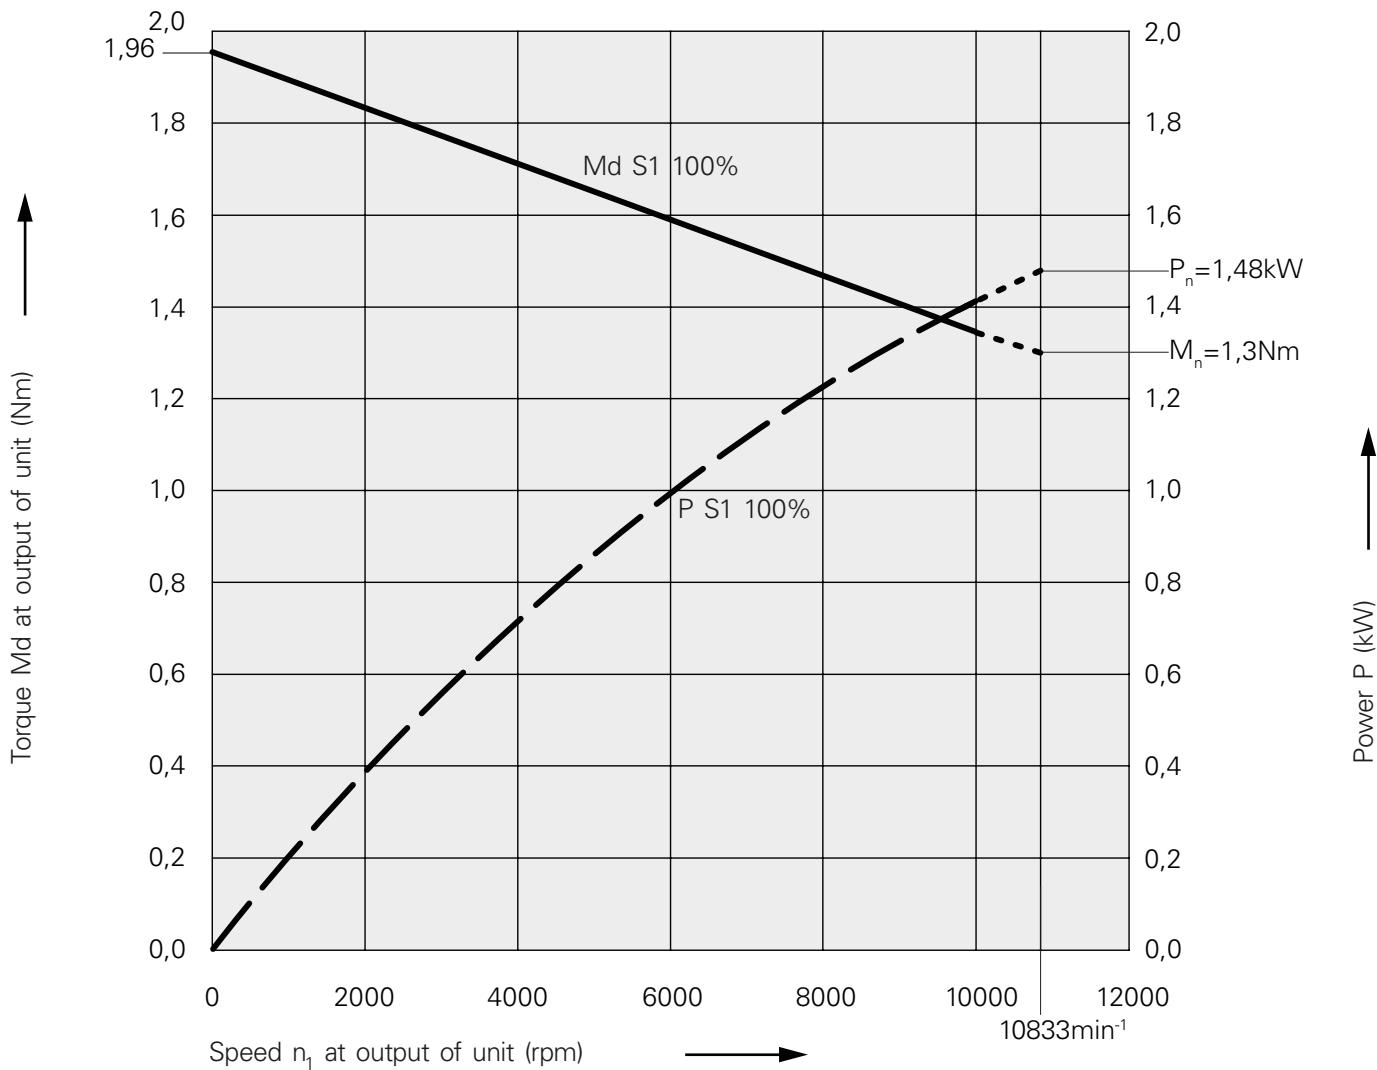
## Performance diagram

Rear end machining unit i=0,5538847 (221:399)

Speed range 0-10000 rpm



For information on how to use the diagram, see  
Chapter "Technical Information".



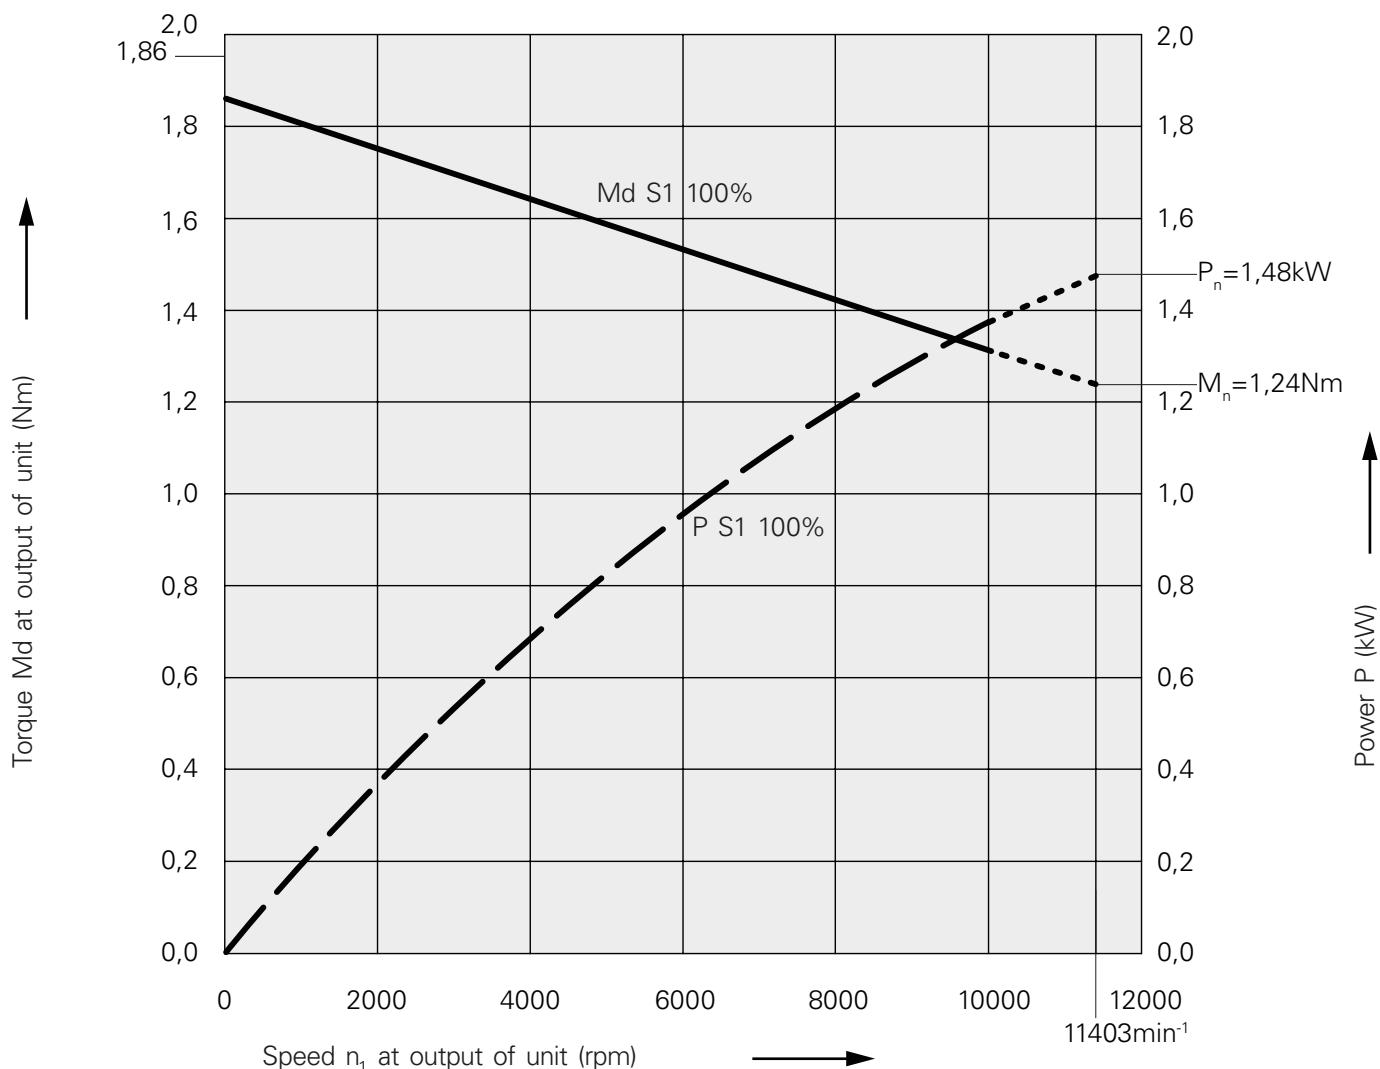
## Performance diagram

Rear end machining unit i=0,5261904 (221:420)

Speed range 0-10000 rpm



For information on how to use the diagram, see Chapter "Technical Information".



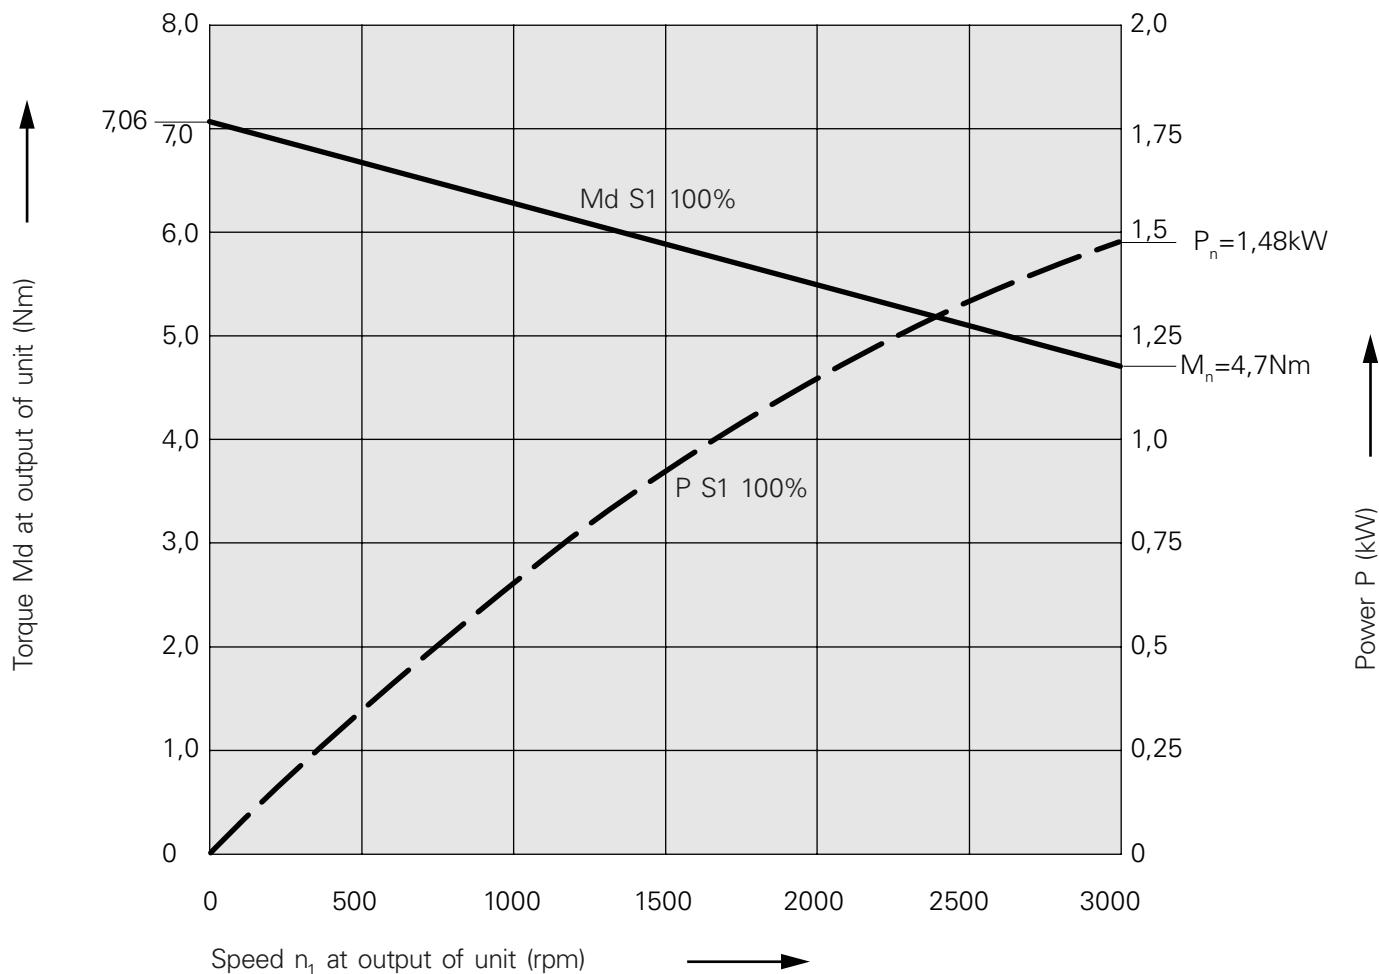
## Performance diagram

### Rear end machining unit i=2

Speed range 0-3000 rpm



For information on how to use the diagram, see  
Chapter "Technical Information".





# INDEX

## TRAUB

**INDEX-Werke GmbH & Co. KG  
Hahn & Tessky**

Plochinger Straße 92  
D-73730 Esslingen

Fon +49 711 3191-0  
Fax +49 711 3191-587

[info@index-werke.de](mailto:info@index-werke.de)  
[www.index-werke.de](http://www.index-werke.de)