



INDEX G320.2

Tool holder

Technical Information

Note on applicability

Illustrations in this publication may deviate from the product supplied. Errors and omissions due to technical progress expected.

A word on copyright

This document is protected by copyright and was originally compiled in German.

The duplication and distribution of this document or parts thereof is prohibited without prior consent of the copyright owner, and any violators will be prosecuted. All rights, including the right to translate, are reserved.

© Copyright by INDEX-Werke GmbH & Co. KG

Technical information	5
Tool holder selection	5
Warranty	5
Information on wear parts	5
Inspection of live tool holders	5
Tool holders with cooling lubricant supply	6
Cooling lubricant filtering	6
Cleaning live tool holders	6
Speed ratio specifications on tool holders	6
Direction of rotation specification	7
Tightening torque	8
Coolant supply	8
Replacement seals for tool shank	8
Sealing air port	8
Tool holders with fixation	9
High-pressure unit	9
Load limits of live tools	9
Live tool holders	10
Weight distribution on turret head	11
Collision	11
Tool change on live tool holders	11
Upper tool carrier, with motorized milling spindle	12
1 live tool station INDEX CAPTO C6	12
Coolant adapter, INDEX CAPTO C6	13
Coolant adapter set and socket wrench	13
Fitting/removing the coolant adapter set	13
Upper tool carrier, with motorized milling spindle	14
1 live tool station HSK63	14
Ultimate strength, HSK63	14
Coolant adapter, HSK63	15
Coolant adapter set and socket wrench	15
Replacement seals for the coolant adapter set	15
Installation of coolant adapter set	15
Tool holders with HSK shank	16
Balanced tool holders – balance quality	16
Balancing – Tool holder with tool	16
Balancing – Tool holder without tool	17
Tool magazine 1+2	18
INDEX CAPTO C6	18
HSK63	19
Notes on how to use the diagram when using tool holders	20
Usage information	21
Modular system of INDEX G320.2	21
Working area INDEX G320.2	22
Motorized milling spindle at top	
Tool carrier at bottom left and right, VDI30 with 15 stations	22

Motorized milling spindle at top
Tool carrier at bottom left, VDI30 with 15 stations..... 24

Motorized milling spindle at top
Tool carrier at bottom right, VDI30 with 15 stations..... 25

Motorized milling spindle at top
Tool carrier at bottom left and right, VDI40 with 12 stations 26

Motorized milling spindle at top
Tool carrier at bottom left, VDI40 with 12 stations..... 28

Motorized milling spindle at top
Tool carrier at bottom right, VDI40 with 12 stations..... 29

Swivel range INDEX G320.2..... 30

 Tool carrier XYZ at bottom left and right, VDI30 with 15 stations..... 30

 Tool carrier XYZ at bottom left and right, VDI40 with 12 stations..... 31

Performance chart INDEX G320.2 32

 Motorized milling spindle 72Nm..... 32

 Live tools with tooling system HSK63 or CAPTO C6..... 32

 Motorized milling spindle 95Nm 33

 Live tools with tooling system HSK63 or CAPTO C6..... 33

Live tools with tooling system VDI30 34

 Tool carrier XYZ at bottom, VDI30 with 15 stations 34

Live tools with tooling system VDI40 35

 Tool carrier XYZ at bottom, VDI40 with 12 stations 35

Tool holder selection



For more information, please visit our iXshop at ixshop.ixworld.com

We will be happy to send you an individual offer.
Just call us at +49 711 3191-9854 or
send us an email to werkzeughalter@index-werke.de.

Warranty



When using tool holders that are not adjusted, tested and marked as such by INDEX, the warranty for the tool drive is void.

Information on wear parts

Tool holders are wear parts requiring correct handling.
In order to ensure a long service life, compressed air or coolant must not enter the gap seals of the holders.

Inspection of live tool holders



Tool holders must be inspected at regular intervals (at least twice a year) for smooth running and play.



The drive pinion and drive clutch of the live tool holders must be subjected to a visual inspection for damage or wear.


If one of the above-mentioned defects is detected during the inspection of the tool holders, they must be returned immediately for preventive maintenance or repair to the following address:

INDEX-Werke GmbH & Co. KG
Plochinger Straße 92
D-73730 Esslingen
Fon +49 711 3191-554
werkzeughalter@index-werke.de



Tool holders with cooling lubricant supply

Tool holders marked with this symbol must be operated with cooling lubricant (no dry running permitted).

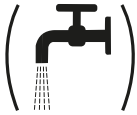


Tool holders marked with this symbol can be converted from external cooling lubricant supply to internal cooling lubricant supply.
Observe dry running capability of IC attachment!

Cooling lubricant filtering

When using live tool holders with internal cooling lubricant supply, it is necessary to use a cooling lubricant filter system with a retained particle size $\leq 50 \mu\text{m}$.

Cleaning live tool holders



Live tool holders must never be immersed in cleaning fluid since mixing the cleaning fluid with the bearing grease will reduce the service life of the tool holders.

Speed ratio specifications on tool holders

The value to be programmed is specified in the documentation and on the live tool holders (= the input in the NC program).

$$n_{\text{prog}} = n_{\text{Tool}} \times i$$

n_{Tool} = speed at the cutting tool edge

n_{PROG} = speed to be programmed

i = speed ratio in the tool holder

This means the speed increase or speed reduction is not specified as a fraction but as **a number**.

This gives speed **increase** ratios as numbers **less than 1**.

Example: $i = 0.333$ (corresponds to $i = 1:3$)
 $i = 0.676$ (corresponds to $i = 1:1.48$)


Speed reduction ratios are numbers greater than 1.

Example: $i = 2$ (corresponds to $i = 2:1$)
 $i = 1.333$ (corresponds to $i = 4:3$)



Direction of rotation specification

Definition of the viewing direction.

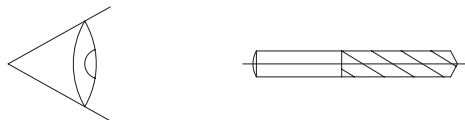Viewing direction for determining the direction of rotation is always from behind (that is, from the drive direction) toward the shaft.



On the machine side, the direction of rotation has been set by parameters such that M03 always denotes clockwise rotation and M04 counter-clockwise rotation at the interface of the drive pinion of the tool holder.

The direction of rotation given on the holder therefore refers to a “change in direction within the holder”. M03 and M04 are machine functions to be programmed. The  and  arrows indicate the direction of rotation of the cutting edges.

This means:



No reversal of direction of rotation

When the holder drive shaft has the **same** direction of rotation as the tool cutting edge, the clockwise direction of run must be specified by M03 (clockwise rotation). Accordingly, counter-clockwise rotation must be specified by M04.




Reversal of direction of rotation

When the holder drive shaft has the **opposite** direction of rotation as the tool cutting edge, the clockwise direction of rotation must be specified by M04. Accordingly, counter-clockwise rotation must be specified by M03.

Example

No reversal of direction of rotation

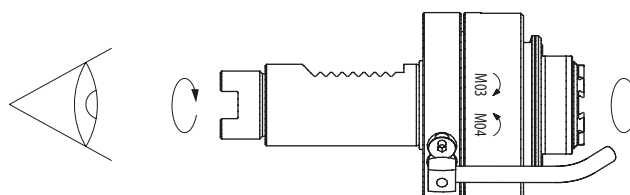

Tightening torque

The tightening torques of the clamping pieces to the tool holder mounting depends on the shank diameter of the tool holder.

Shank size	Tightening torque
ø 20mm	8 Nm
ø 25mm	20 Nm
ø 30mm	25 Nm
ø 40mm	40 Nm

Coolant supply

For tools with W-serration and double clamping serration, the 2nd hole for coolant supply must be closed by the end plug and the seal.

The gaskets on the tool shank and the coolant bushing must be regularly checked for damages.

Replacement seals for tool shank

The gaskets on the tool shank and the cooling lubricant bushing must be regularly checked for damages.

O-ring	Material number	Installation location
ø 18.77 x 1.78	10763730	Shank ø 20mm
ø 23.52 x 1.78	10823023	Shank ø 25mm
ø 28.3 x 1.78	10777976	Shank ø 30mm
ø 37.77 x 2.62	10066870	Shank ø 40mm
ø 9.75 x 1.78	10046965	Cooling lubricant adapter
ø 12.42 x 1.78	10824672	Cooling lubricant adapter

Sealing air port

It must be ensured on all machines with sealing air ports that the sealing air ports in the tool carrier and in the tool holders are sealed/closed with M5x6 mm set screws.

Tool holders with fixation



Except for very few cases, all tool holders have been pre-adjusted with high precision and sealed with the INDEX V bar / TRAUB adjusting bar/ W-serration.

This setting must not be changed.

The INDEX V bar / TRAUB adjusting bar / W-serration ensures positional accuracy of the tool when re-inserted.

The tool holders are fixed around the shank axis by pins (DIN 69880).

DIN holders can be used.

Double serration of the tool holders allows several uses.

High-pressure unit



The cooling lubricant up to 80 bar (e.g., for deep-hole drilling) is supplied through the standard cooling lubricant line.

Load limits of live tools

The drive power and torques are indicated in the performance charts. These values represent the upper limit of the calculated theoretical performance values (average values). In case of interrupted cuts, e.g., for milling, the load peaks occurring when the cutting edge enters the material may be much higher than the theoretical torque according to the performance chart.



The cutter should be selected so that a cutting edge is constantly being used for cutting during the machining process.

Live tool holders

Only the tool located in the working position is live.



The live tool holders are inserted into the mounting bores in the tool carriers just like non-live tool holders.

Each turret station can accept one live tool.

The motor drives the tool that is exclusively in working position. In addition, the index drive is actuated by switching using the same motor.



The sealing washer (1) must be removed first.

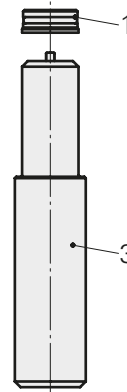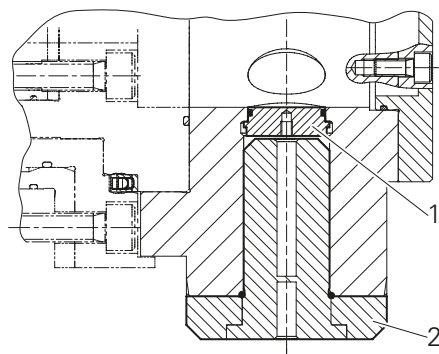

Tool carrier XYZ VDI30 with 15 stations

- | | | |
|---|----------------|----------|
| 1 | Sealing washer | 10346973 |
| 2 | Blanking plug | 10581081 |
| 3 | Mounting pin | 10066228 |

Tool carrier XYZ VDI40 with 12 stations

- | | | |
|---|----------------|----------|
| 1 | Sealing washer | 12014790 |
| 2 | Blanking plug | 10573819 |
| 3 | Mounting pin | 10682808 |



Before using the machine, make sure that all mounting bores without a tool have been closed with a sealing washer and that the gasket on all tool holders is not damaged.



Any mounting bores not used must be closed with blanking plugs during machining processes.

Weight distribution on turret head



Tool holders may have considerably different weights depending on their function and equipment. Therefore, be sure to balance the tool holders evenly around the turret head when tooling.

Collision




After a collision has occurred, check whether the tool carrier has been displaced. If this is the case, the tool carrier must be realigned to ensure that the drive and tool holder gears accurately engage with each other.

Tool change on live tool holders

To avoid damaging or changing the adjustment of the drive train in the turret, tools must **not** be changed on the live tool holders inserted in the turret.


Tools in live tool holders must be changed outside the machine.

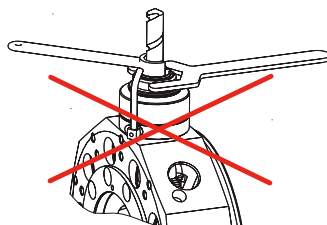

Upper tool carrier, with motorized milling spindle

1 live tool station INDEX CAPTO C6

A live tool holder can be used on the motorized milling spindle

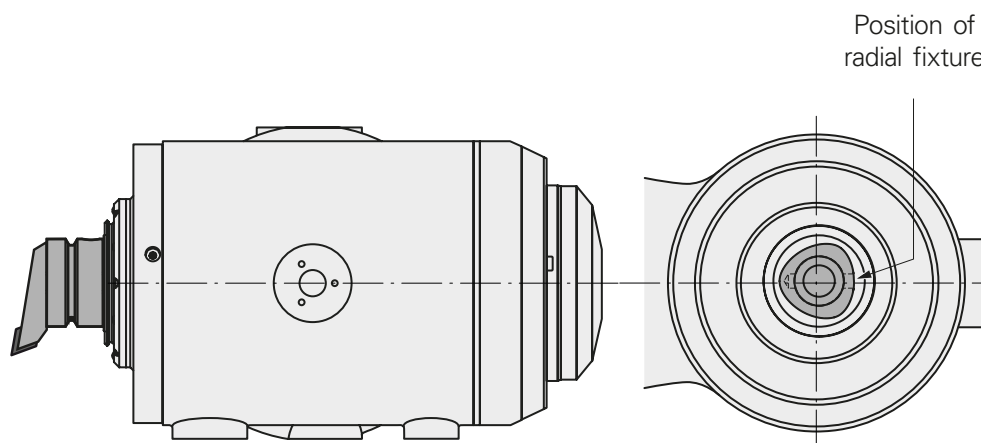


No rotation is permitted when using blanking plugs!




Caution!

Risk of damage by ingress of cooling lubricant!


Tool holders in the motorized milling spindle may only be **with** installed coolant adapters!

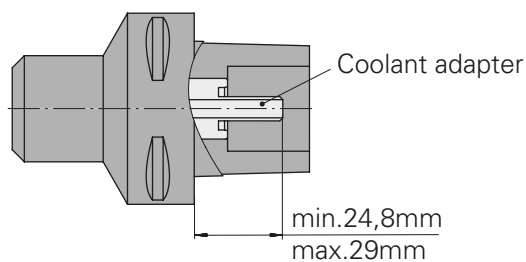Coolant adapter, INDEX CAPTO C6**Coolant adapter set and socket wrench**

Coolant adapter set INDEX CAPTO C6	10865732
Socket wrench INDEX CAPTO C6	12144844

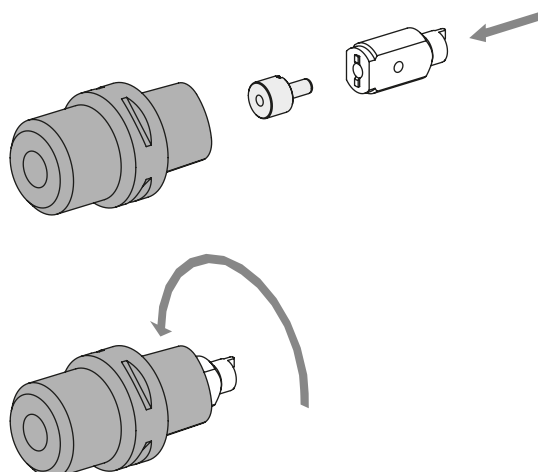Fitting/removing the coolant adapter set

For removal, the socket wrench must be turned through 180°.

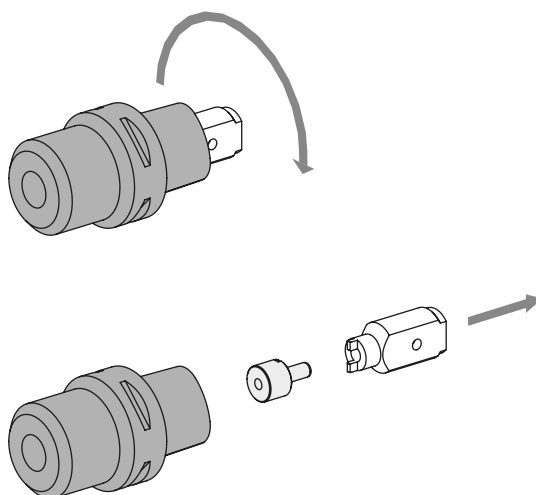


Upper tool carrier, with motorized milling spindle

1 live tool station HSK63

A live tool holder can be used on the motorized milling spindle

HSK63 with form T on turning tools
HSK63 with form A on drilling and milling tools

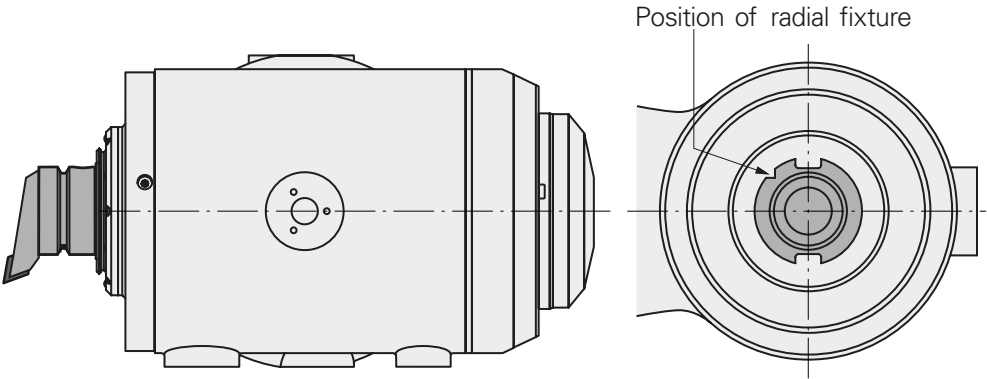

No rotation is permitted when using blanking plugs!



Caution!
Risk of damage by ingress of cooling lubricant!
Tool holders in the motorized milling spindle may only be **with** installed coolant adapters!


Ultimate strength, HSK63




Damage to motor milling spindle, tool holder, workpiece possible.
Observe the ultimate strength of the tool systems.

Ultimate strength of the tool systems according to VDMA 34181:

HSK	Torsional moment about axis of rotation [Nm]	Ultimate bending moment transverse to the flat position [Nm]
63	200	550

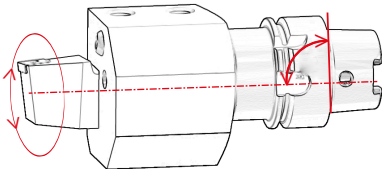

Coolant adapter, HSK63

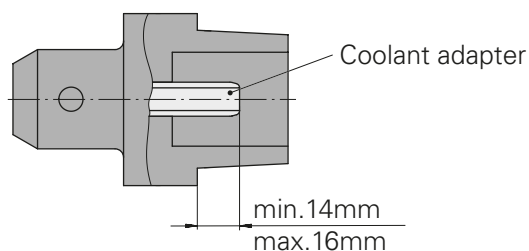


Coolant adapter set and socket wrench

Coolant adapter set HSK63 max. 80bar	11074450
Coolant adapter set HSK63 max. 120bar	12024087
Socket wrench HSK63	10352082


Replacement seals for the coolant adapter set

The sealing rings on the coolant adapter set must be inspected regularly for damage.

max. 80bar

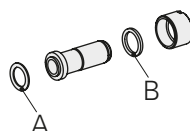


max. 120bar

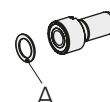

	O-ring	Material number	Installation location
A	ø 10 x 2,5	10272045	HSK63 max. 80bar, face side
B	ø 11 x 2,0	10401120	HSK63 max. 80bar, inside
A	ø 10 x 2,5	10272045	HSK63 max. 120bar, face side

Installation of coolant adapter set

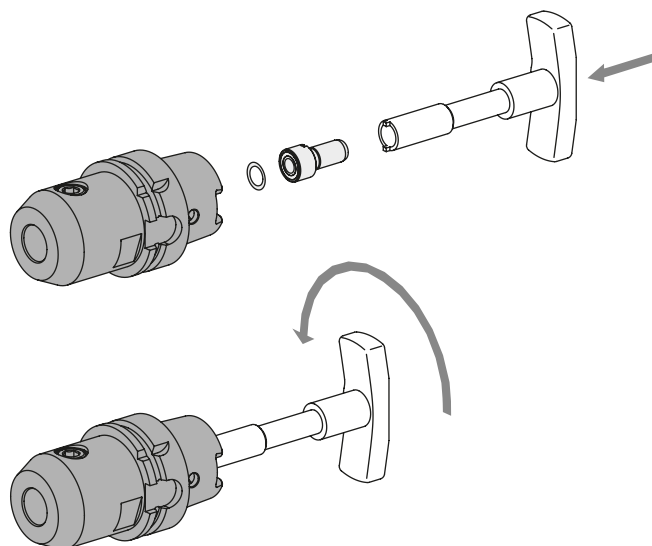

Tool holders with HSK shank

Balanced tool holders – balance quality

When operating rotating tools in the tool spindle (milling spindle), balanced tool holders must be used.




Caution!
Rotating tool holders (including tools) must have a balance quality of G6.3 or better in relation to the respective speed used!

Balancing – Tool holder with tool

according to DIN 69893-1 as of April 2011

If balancing of the hollow taper shank is required after tools or equipment (e.g., adapters) are mounted on the shank, this should be restricted to the preferred balancing zone.

Balancing zone

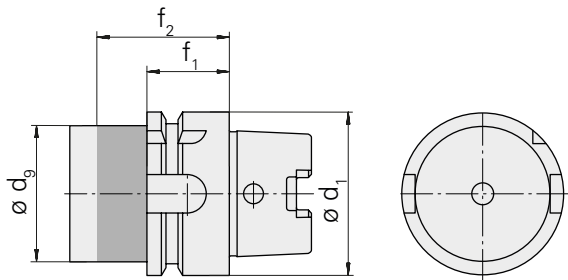

Nominal size	25	40	50	63	80
d_1 h10	25h10	40h10	50h10	63h10	80h10
d_9 max.	20	34	42	53	68
f_1 $^{0}_{-0.1}$	10	20	26	26	26
f_2 min.	20	35	42	42	42

Dimensions in mm

To ensure free interchangeability of the individual components of this tool mounting system, all parts (e.g., tool, tool holder, etc.) should be individually balanced.


Balancing – Tool holder without tool

according to DIN 69893-1 as of April 2011

If balancing of the hollow taper shank is required before tools or equipment (e.g., adapters) are mounted on the shank, this can be done with a balancing surface and a balancing bore.

The balancing surface is used exclusively to compensate for the orientation notch. The installation space for a data carrier according to DIN 69873 is not taken into account.


Balancing surface

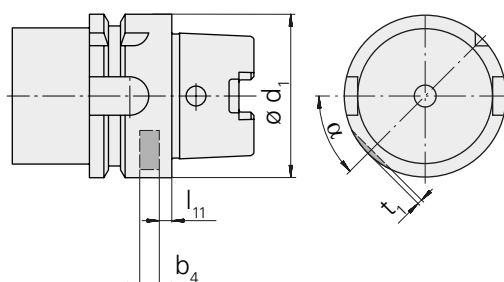

Nominal size	25	40	50	63	80
b_4	3	6.0	6.0	6.0	6.0
l_{11}	7	4.0	4.0	4.0	4.0
t_1	1.2	1.3	1.6	1.7	2.6
α	45°	45°	45°	45°	45°

Dimensions in mm

Balancing bore

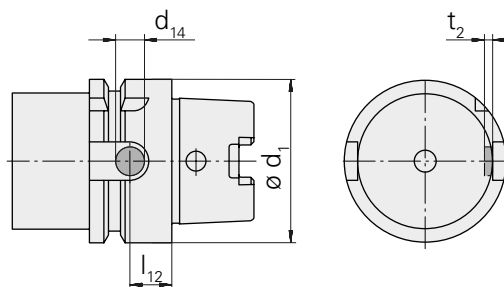

Nominal size	25	40	50	63	80
d_{14}	5.8	8.0	11.0	14.0	16.0
l_{14}	-	-	-	-	-
t_2	2.5	2.5	2.7	2.7	3.0

Dimensions in mm

Tool magazine 1+2

INDEX CAPTO C6

Max. weight of single tool 8kg


Max. tilting torque 12Nm






If tools with a diameter greater than $D_{\text{Norm}} = 70\text{mm}$ are used, the two adjacent pockets in the tool magazine must remain empty.

The maximum allowable tool weight is 8kg.

Tool magazine 2

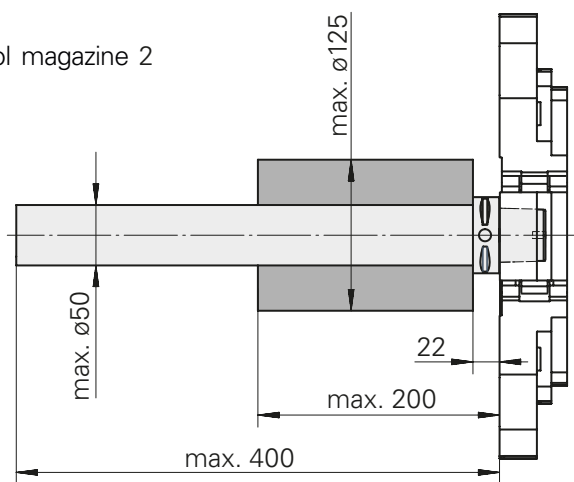

Tool magazine 1

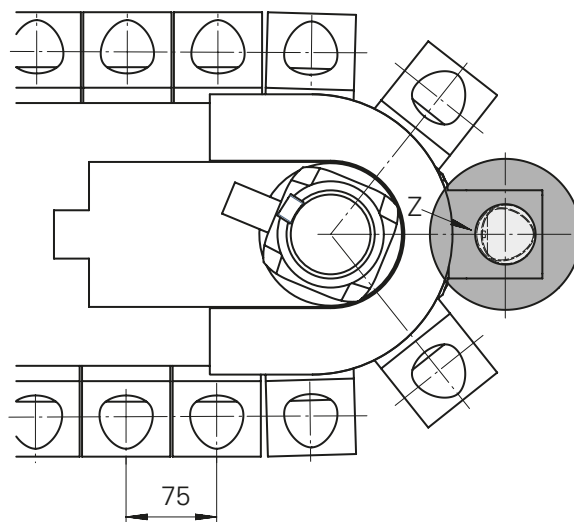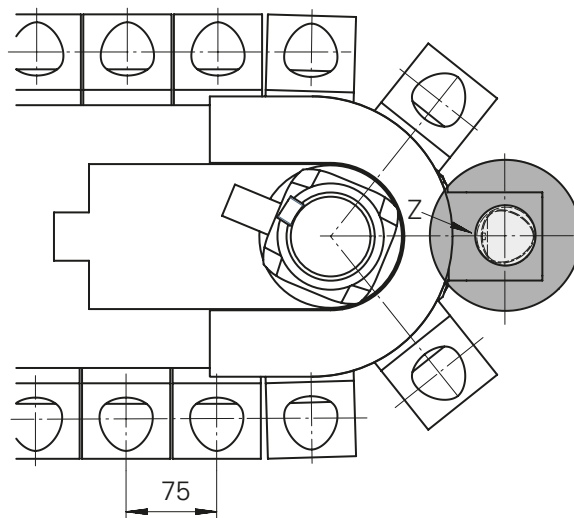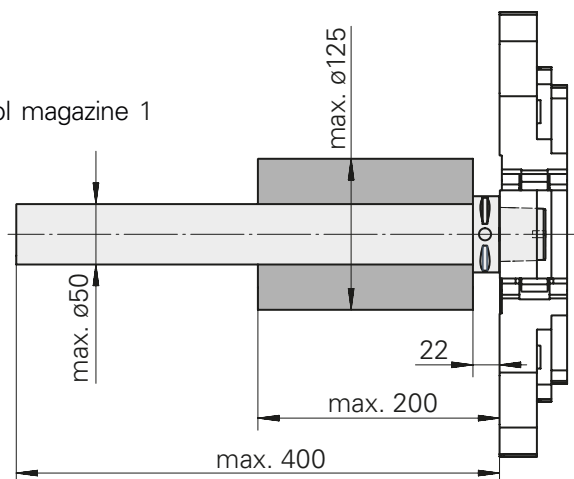

Z = Position of radial fixture

Tool magazine 1+2

HSK63

Max. weight of single tool 8kg


Max. tilting torque 12Nm






If tools with a diameter greater than $D_{\text{Norm}} = 70\text{mm}$ are used, the two adjacent pockets in the tool magazine must remain empty.

The maximum allowable tool weight is 8kg.

Tool magazine 2

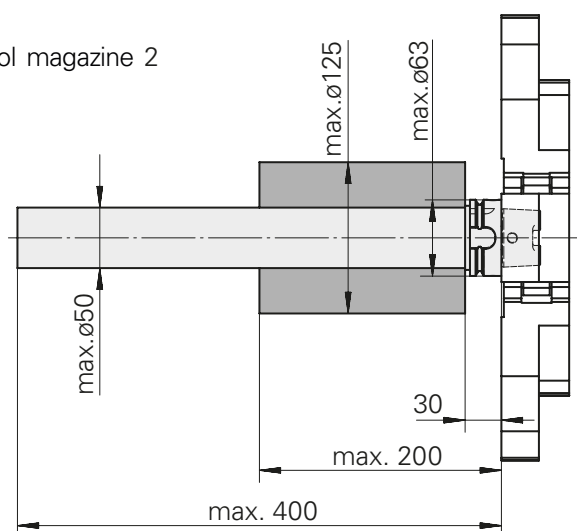

Tool magazine 1

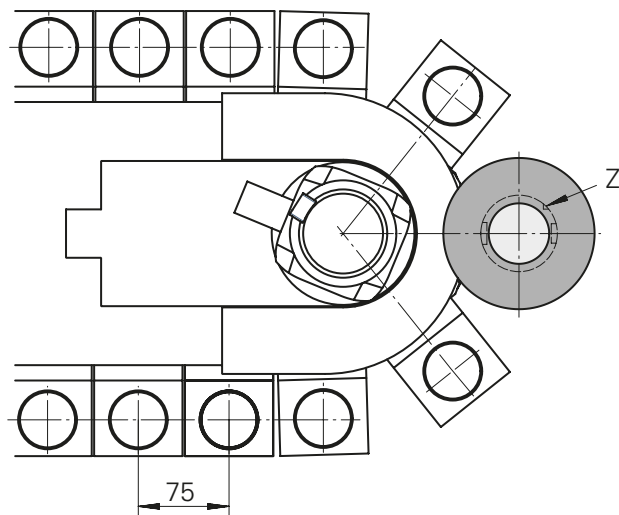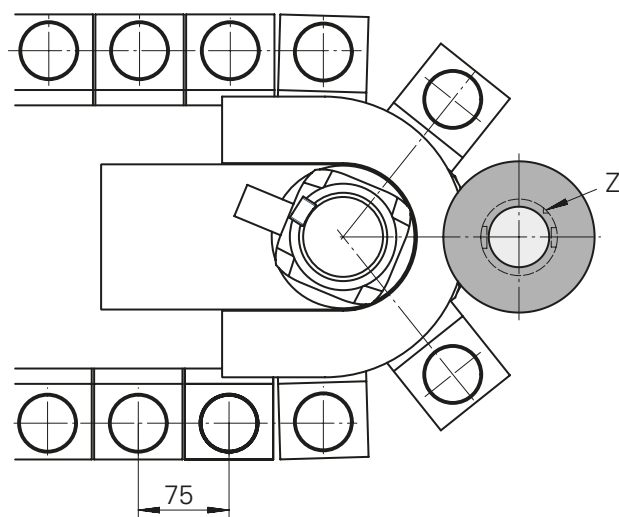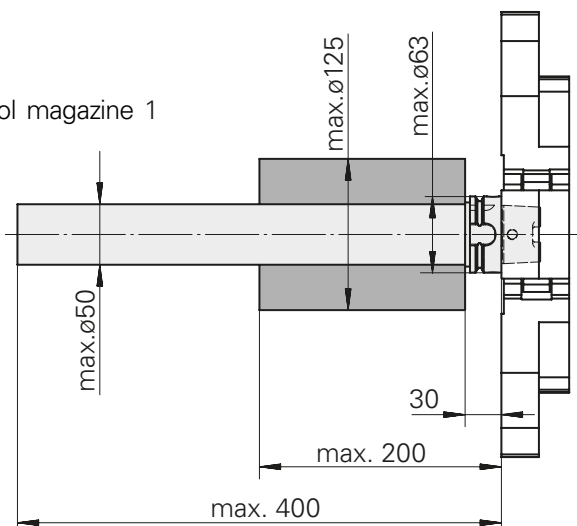

Z = Position of radial fixture


Notes on how to use the diagram when using tool holders

The diagram relates to the output speed **n** of the tool unit. The tool speed can be read directly from the diagram only if the internal speed ratio **i** in the tool holder is 1:1.

For tool holders with an internal speed ratio $i \neq 1$, the output speed **n** of the tool unit to be programmed must be calculated from the required tool speed and the speed ratio **i**. Afterwards, the actual powers or torques can be read off or determined.


Example (at 100% duty cycle):

live tool unit, tool speed $n_{Tool} = 1000 \text{ rpm}$	
Internal speed ratio i of the tool holder	$i = 4$
Programmed speed n_{prog} for the drive of the unit	$n_{prog} = n_{Tool} * i = 1000 \text{ rpm} * 4 = 4000 \text{ rpm}$
Torque M_{Tool} at the output of the tool holder	Read-out M_d at speed $n_{prog} = 4000 \text{ rpm} = 1.6 \text{ Nm}$ $M_d = M_{Tool} : i$ Formula changed: $M_{Tool} = M_d * i = 1.6 \text{ Nm} * 4 = 6.4 \text{ Nm}$
Power P at the output of the tool holder \approx Power P at the output of the setup	Read-out at 4000 rpm $\rightarrow P = 0.67 \text{ kW}$ calculated: $P = 2 * \pi * n_{prog} * M_d$ $P = \frac{2 * \pi * 4000 * 1.6 \text{ Nm}}{60 * 1000} = 0.67 \text{ kW}$

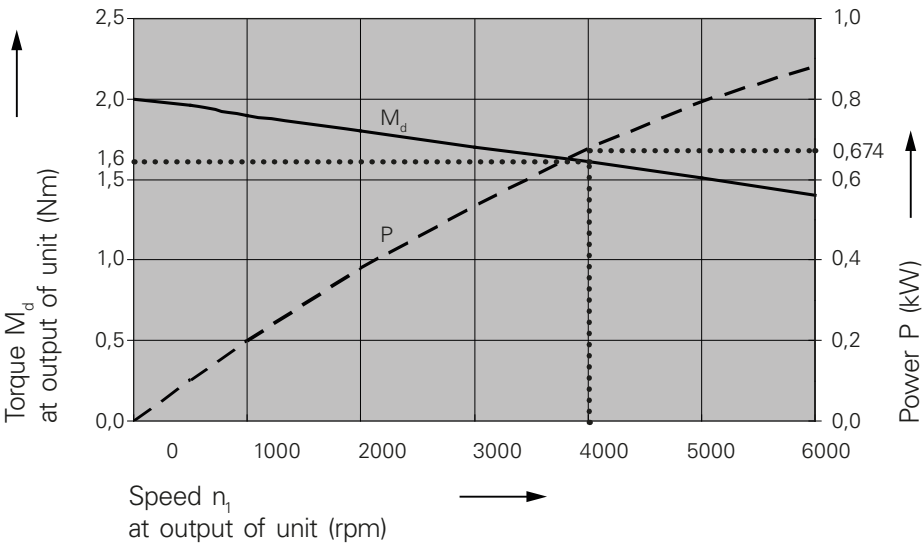

The transmission ratio and the technical data of each tool holder are available in our iXshop at ixshop.ixworld.com


Modular system of INDEX G320.2

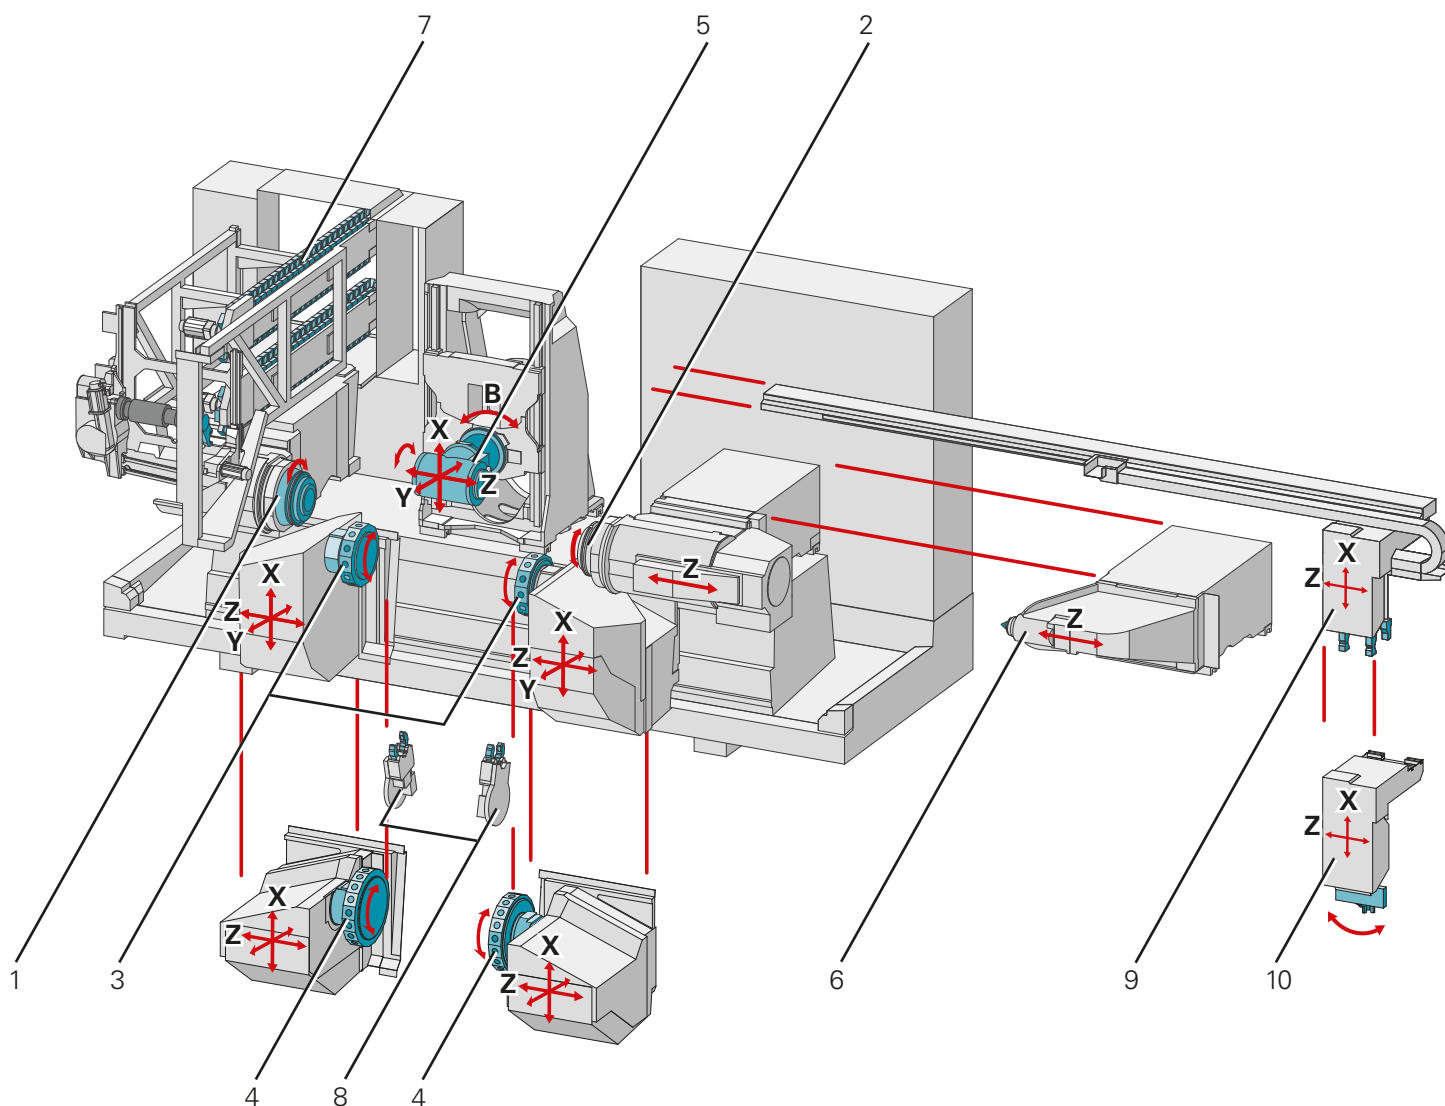

- 1 Main spindle
- 2 Counter spindle
- 3 Lower tool carrier VDI40 - XZY
- 4 Lower tool carrier VDI30 - XZY
- 5 Motor milling spindle - XZYB

- 6 Tailstock
- 7 Tool magazine
- 8 Lower turret steady rests (optional)
- 9 Shaft type workpiece handling unit (optional)
- 10 Flange type workpiece handling unit (optional)

Counter spindle

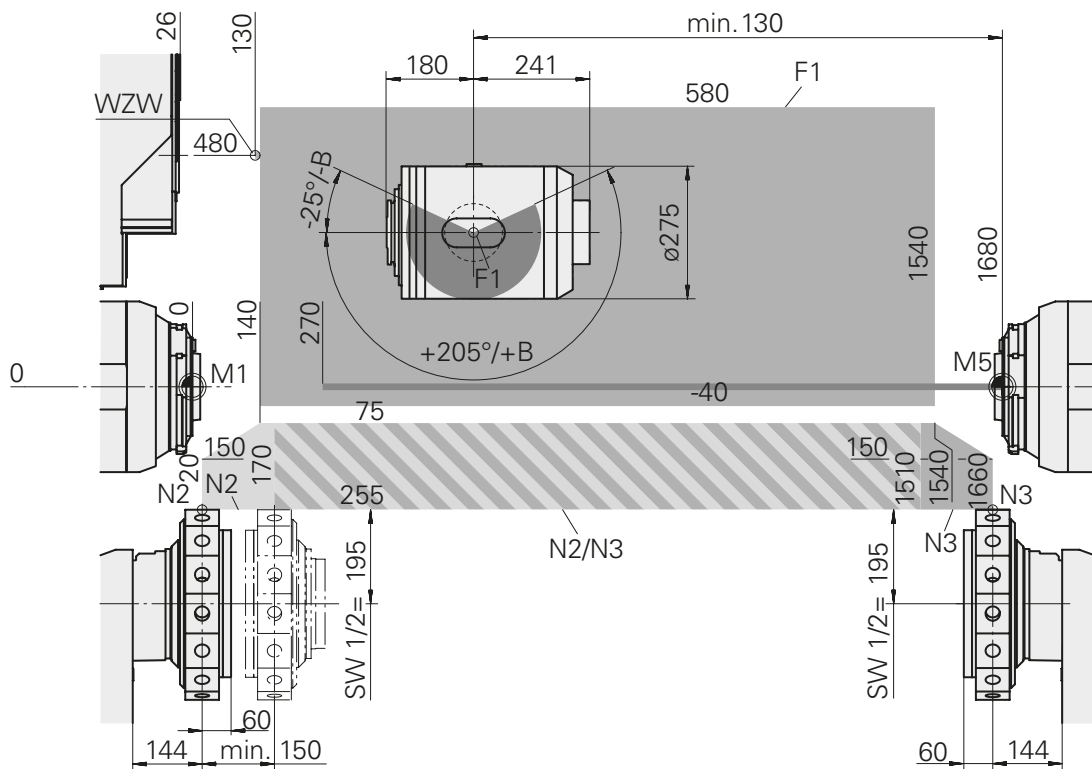

The technical drawing illustrates the N5000 series nozzle assembly through three primary views:


- Top View:** Shows the nozzle's footprint with a central circular feature labeled F1. Dimensions include a total width of 580 mm, a distance of 241 mm from the center to the right edge, and a radius of 180 mm. The central hole has a diameter of $\phi 27.5$. Angular specifications are given as $-25^\circ/-B$ and $+205^\circ/+B$.
- Front View:** Displays the nozzle's profile with a height of 130 mm and a base width of 26 mm. It includes labels WZW and M1.
- Side/Cross-sectional Views:** Detail the internal components, including the nozzle body (N5), the mounting bracket (N2/N3), and the base plate (N3). Key dimensions include a total length of 1460 mm, a mounting height of 1540 mm, and a base thickness of 1610 mm. A cross-section shows a diameter of $\phi 150$.

Additional annotations include "min.-80" at the top, "N2/N3" for the mounting bracket, and "SW 1/2 = 195" indicating a specific setting or dimension related to the assembly.

Working area INDEX G320.2

Motorized milling spindle at top

Tool carrier at bottom left and right, VDI30 with 15 stations

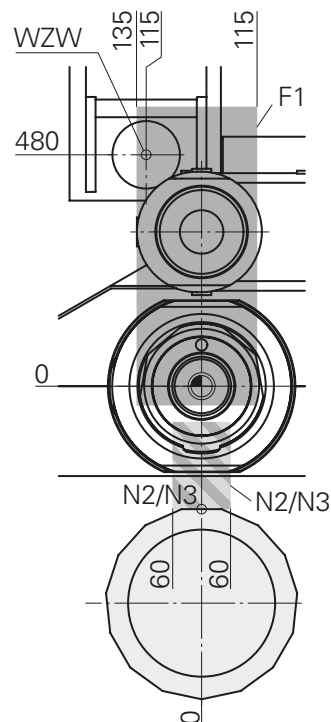

Motorized milling spindle at top
Tool carrier at bottom left, VDI30 with 15 stations

Technical drawing of a 1000mm x 1000mm x 100mm plate with various mounting holes and dimensions. The drawing includes a top view and a side view. The top view shows a central circular hole with a diameter of 275mm, surrounded by a circular area with a diameter of 580mm. The plate has a total width of 1000mm and a total height of 1000mm. The side view shows the plate's thickness of 100mm and the mounting holes on the top and bottom surfaces. The mounting holes are labeled M1, M2, M3, M4, M5, and M6. The dimensions are given in millimeters (mm).

Dimensions and features:

- Top view:
 - Central circular hole: $\varnothing 275$
 - Surrounding circular area: 580
 - Plate width: 1000
 - Plate height: 1000
 - Mounting holes: M1, M2, M3, M4, M5, M6
 - Dimensions: 180, 241, 270, 75, 150, 255, 195, 60, 144, 26, 130, 480, 140, 20, 0, 1540, 1680, 1540, 1680, 1540, 1680
 - Angles: $-25^\circ/B$, $+205^\circ/+B$
 - Labels: WZW, F1, N2, M5
- Side view:
 - Plate thickness: 100
 - Mounting holes: M1, M2, M3, M4, M5, M6
 - Dimensions: 144, 60, 195, 255, 150, 75, 270, 140, 20, 0, 1540, 1680, 1540, 1680, 1540, 1680


[illegible]

Working area INDEX G320.2


Motorized milling spindle at top

Tool carrier at bottom right, VDI30 with 15 stations

Counter spindle

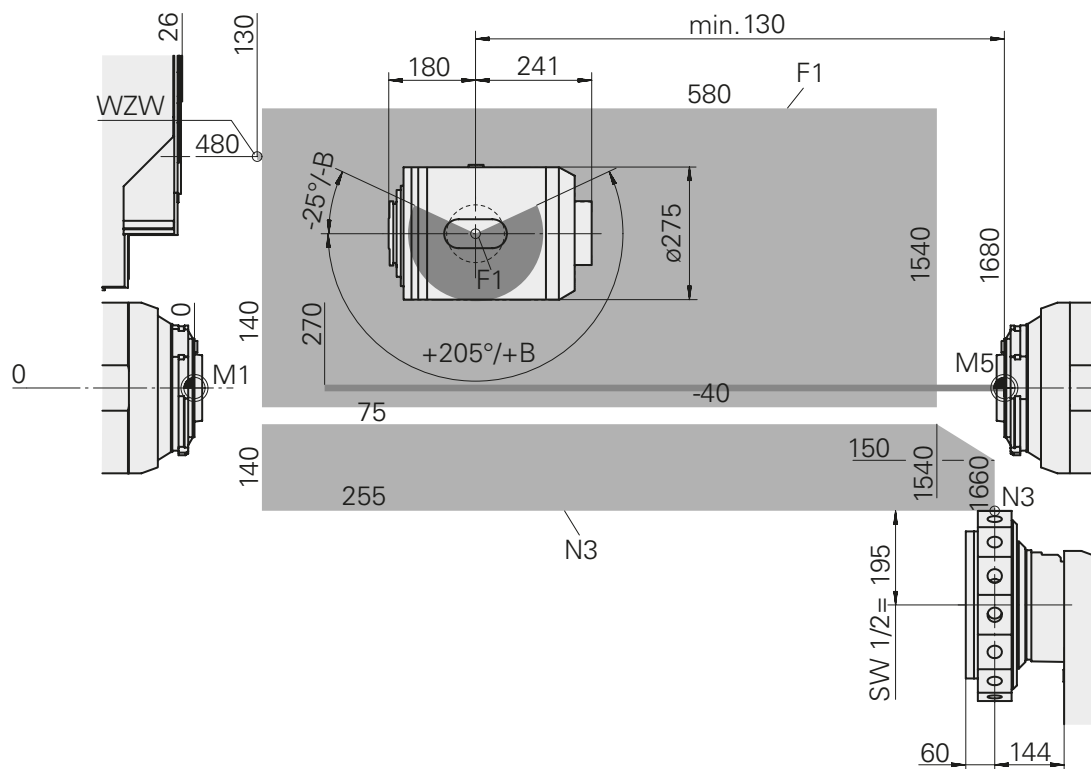

Tailstock

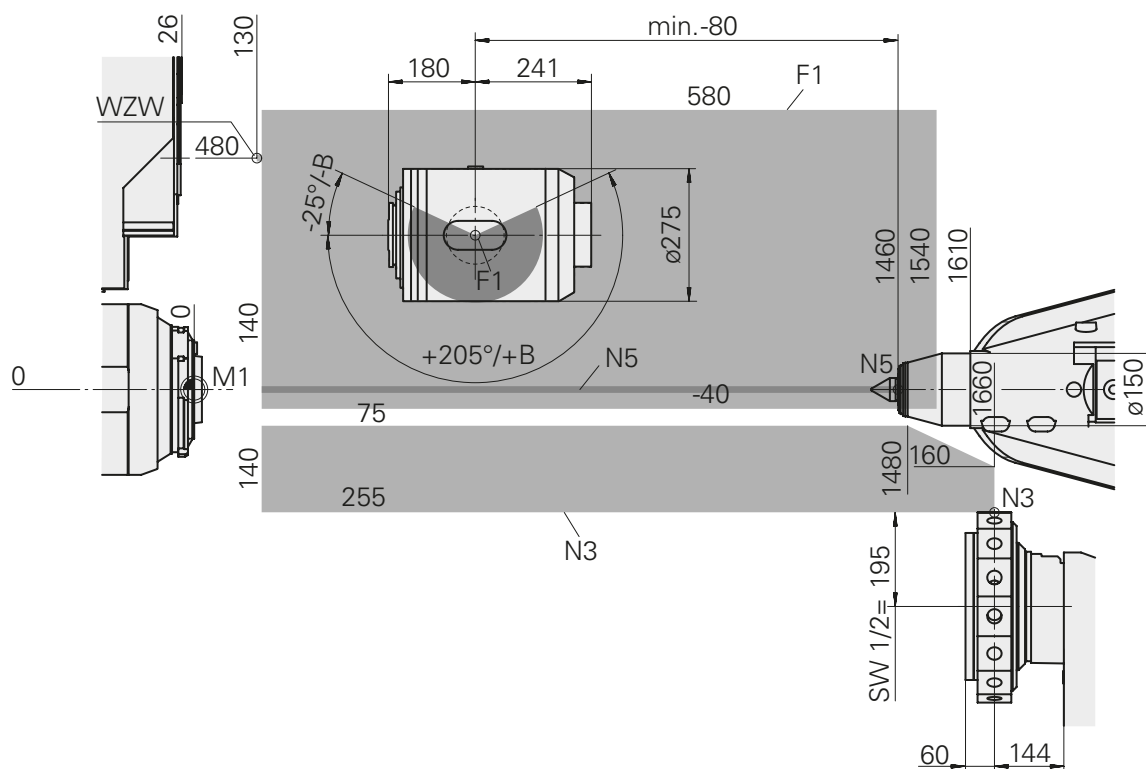


Working area INDEX G320.2


Motorized milling spindle at top

Tool carrier at bottom left and right, VDI40 with 12 stations

Counter spindle

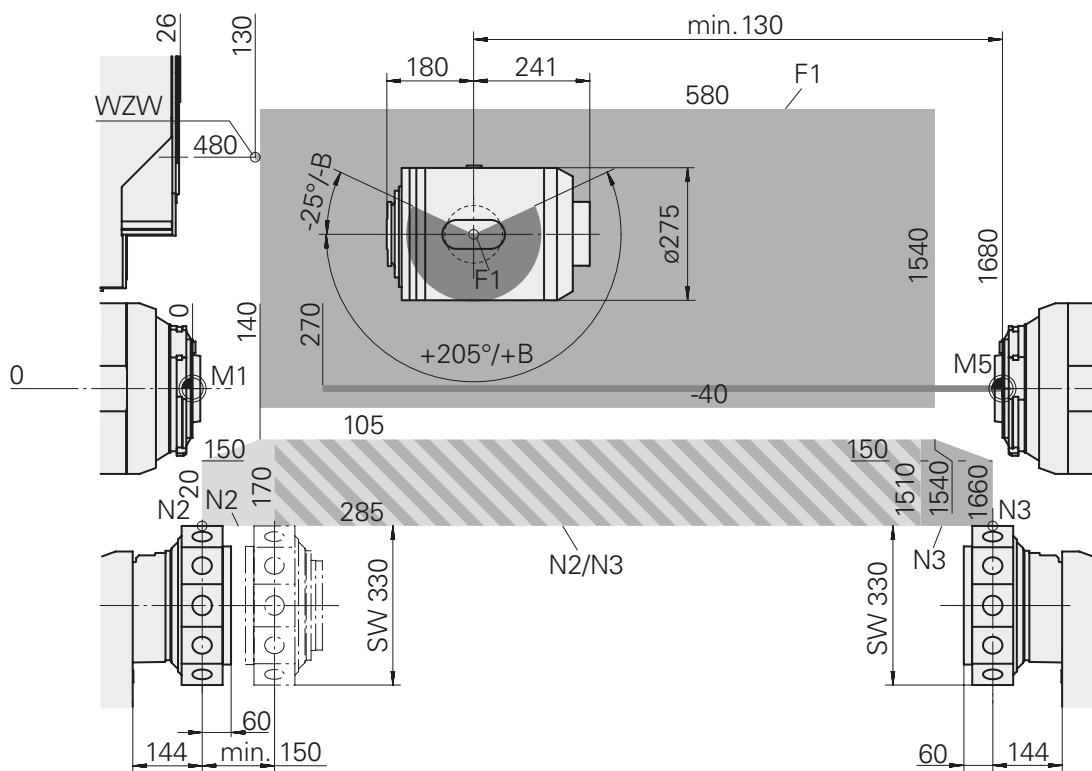


Tailstock

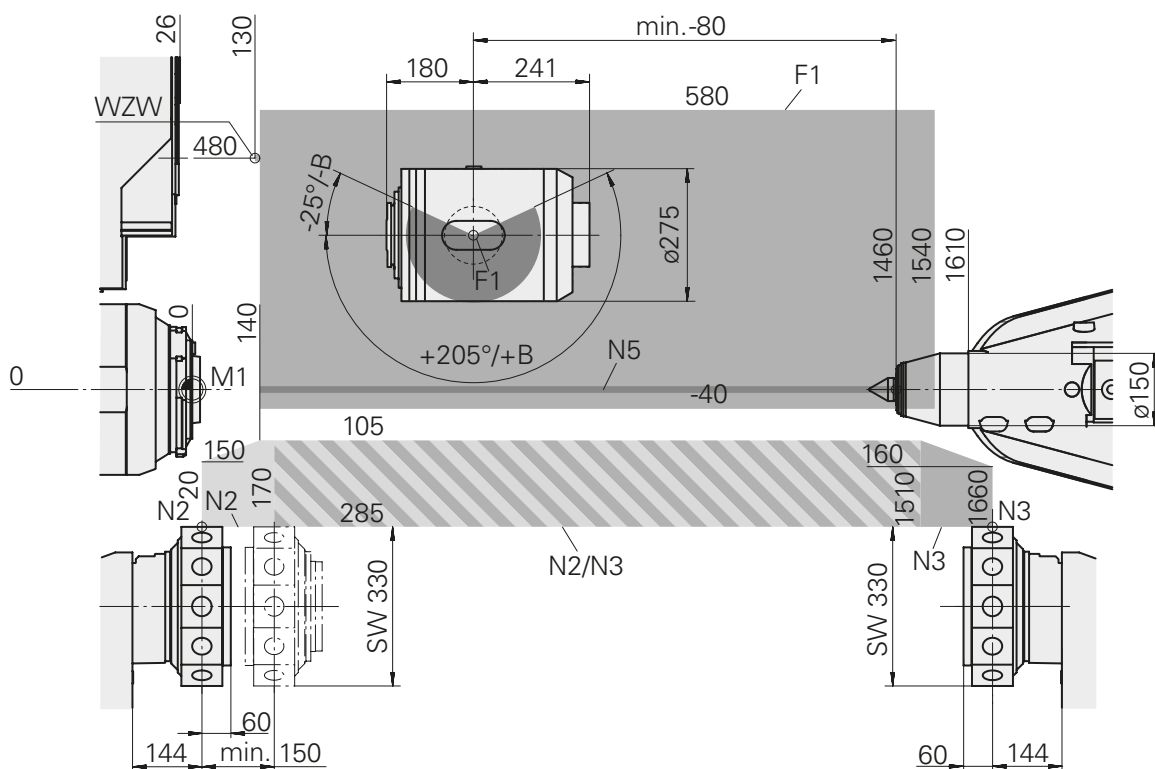

Working area INDEX G320.2

Motorized milling spindle at top

Tool carrier at bottom left and right, VDI40 with 12 stations

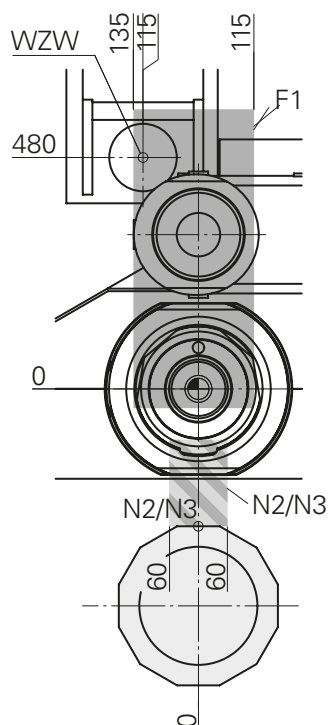


Working area INDEX G320.2


Motorized milling spindle at top

Tool carrier at bottom left, VDI40 with 12 stations

Counter spindle

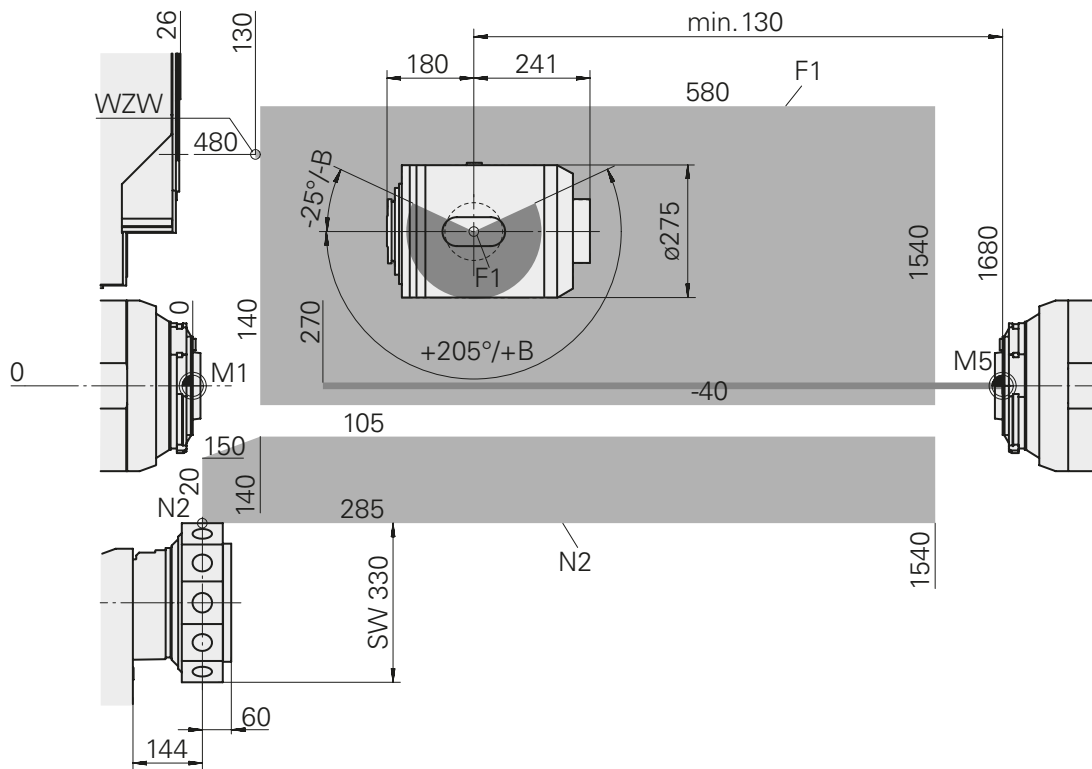

Tailstock

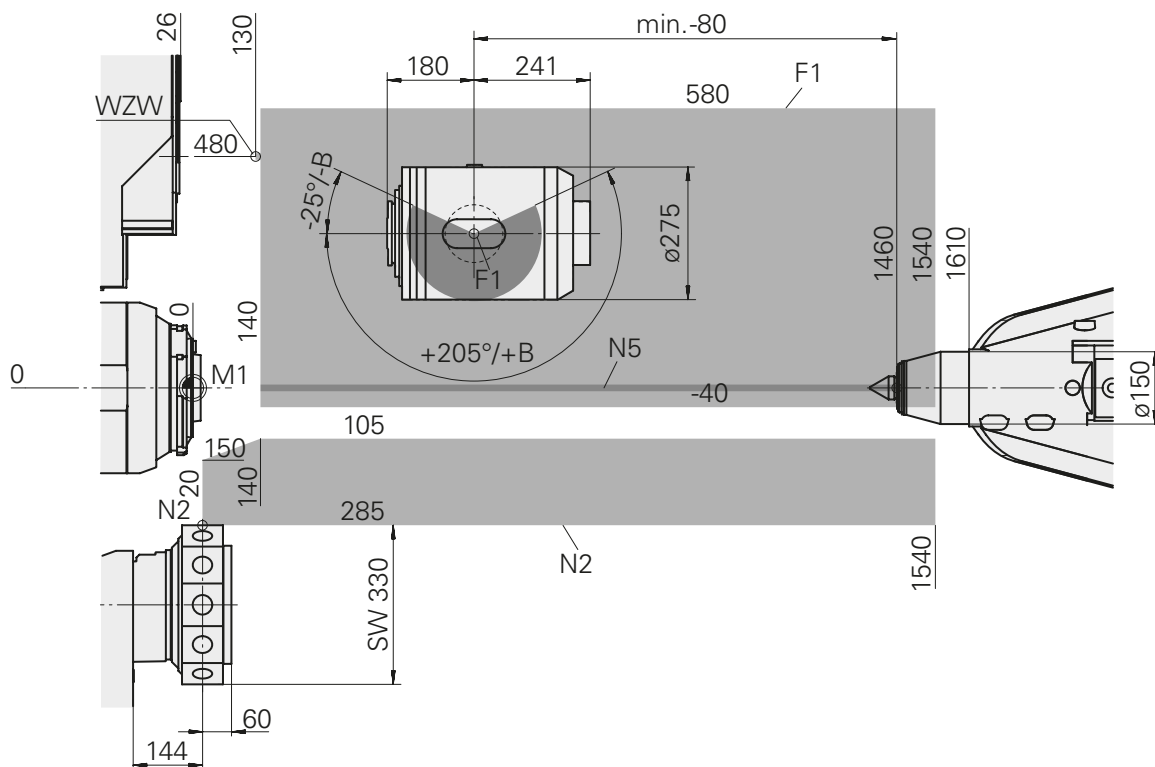


Working area INDEX G320.2


Motorized milling spindle at top

Tool carrier at bottom right, VDI40 with 12 stations

Counter spindle

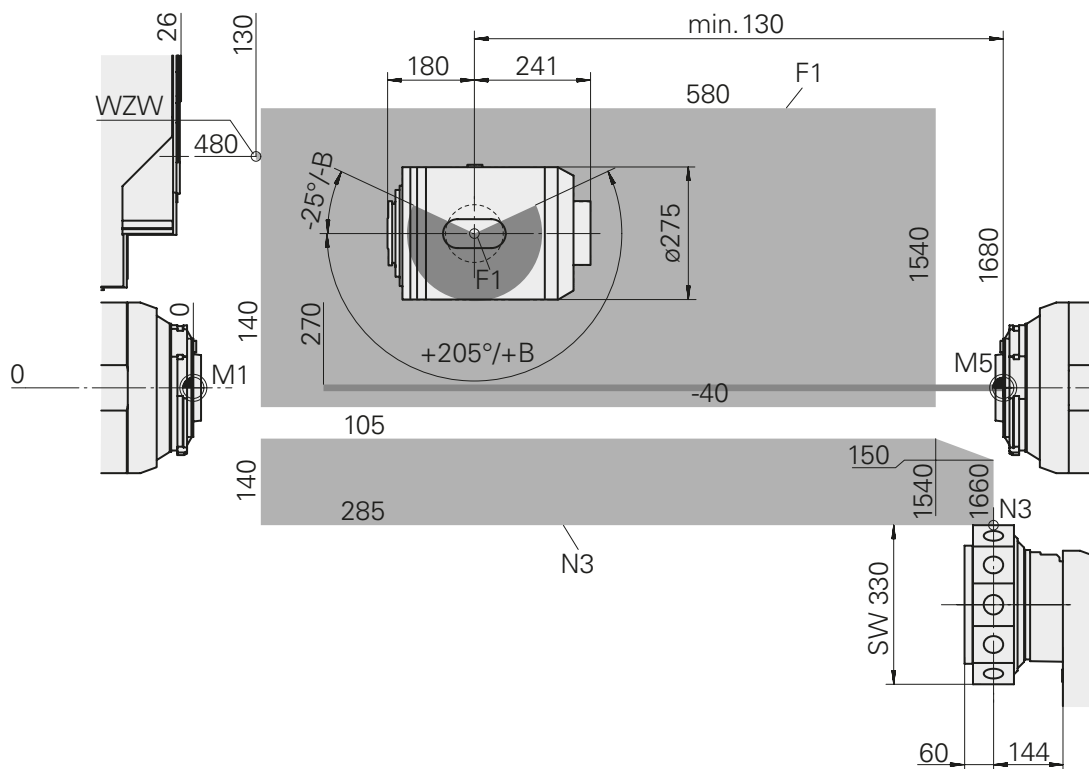


Tailstock

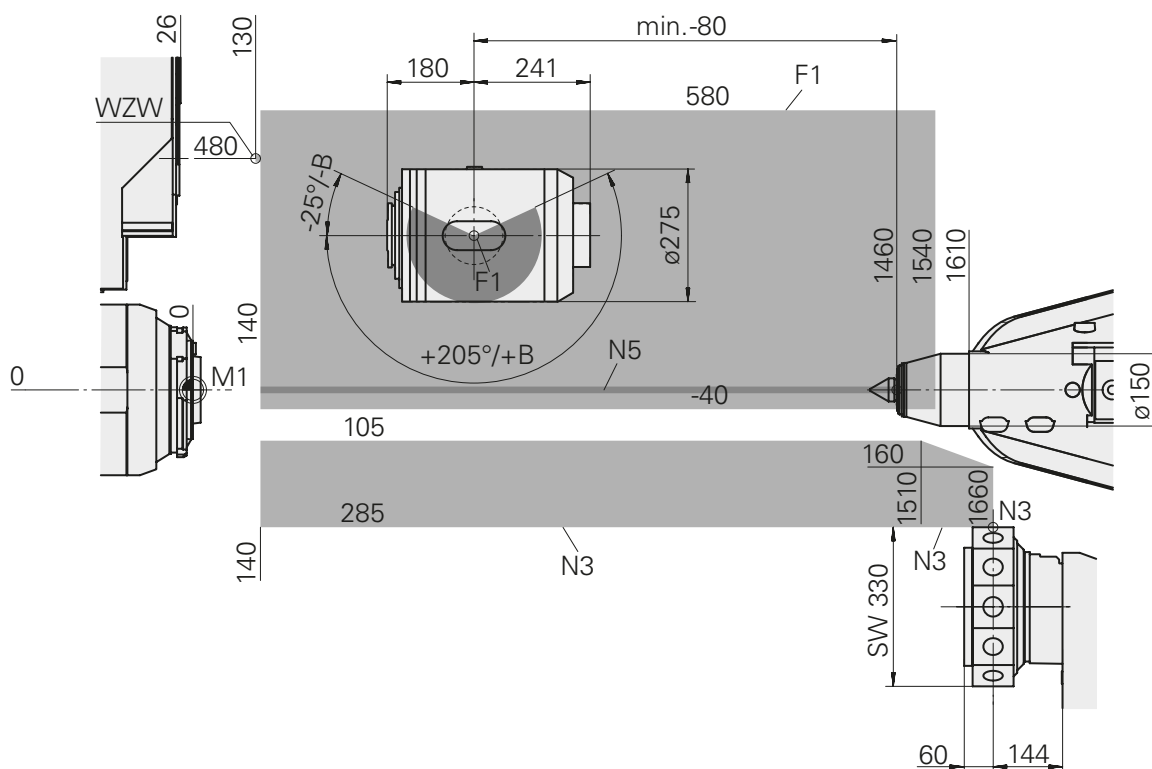


Swivel range INDEX G320.2

Tool carrier XYZ at bottom left and right, VDI30 with 15 stations

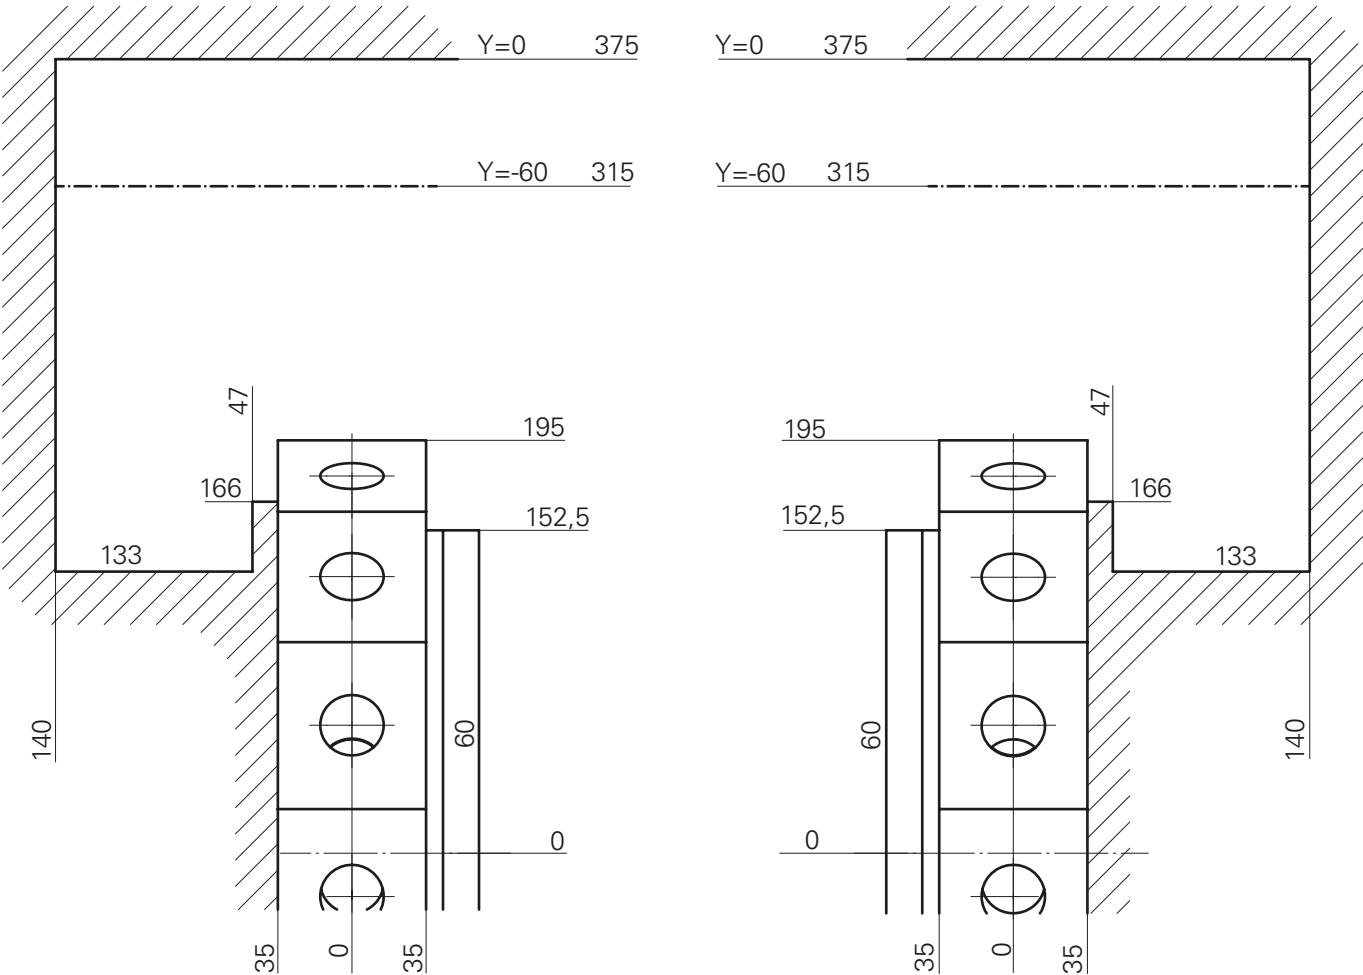

Swivel range INDEX G320.2

Tool carrier XYZ at bottom left and right, VDI40 with 12 stations

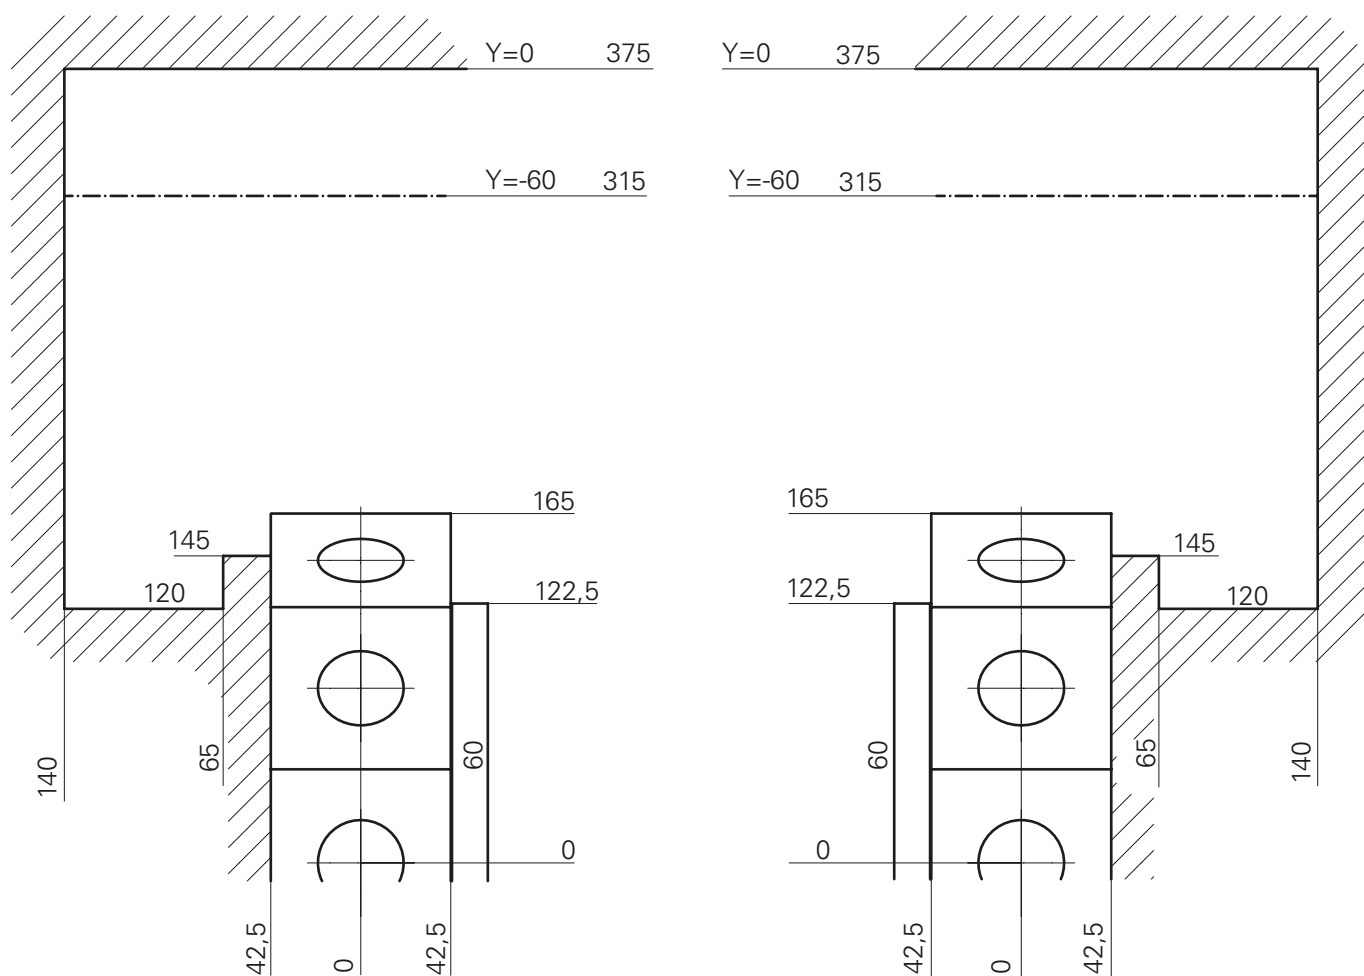


Performance chart INDEX G320.2


Motorized milling spindle 72Nm

Live tools with tooling system HSK63 or CAPTO C6

Speed range 0-12000 rpm



For information on how to use the diagram, see Chapter "Technical Information".

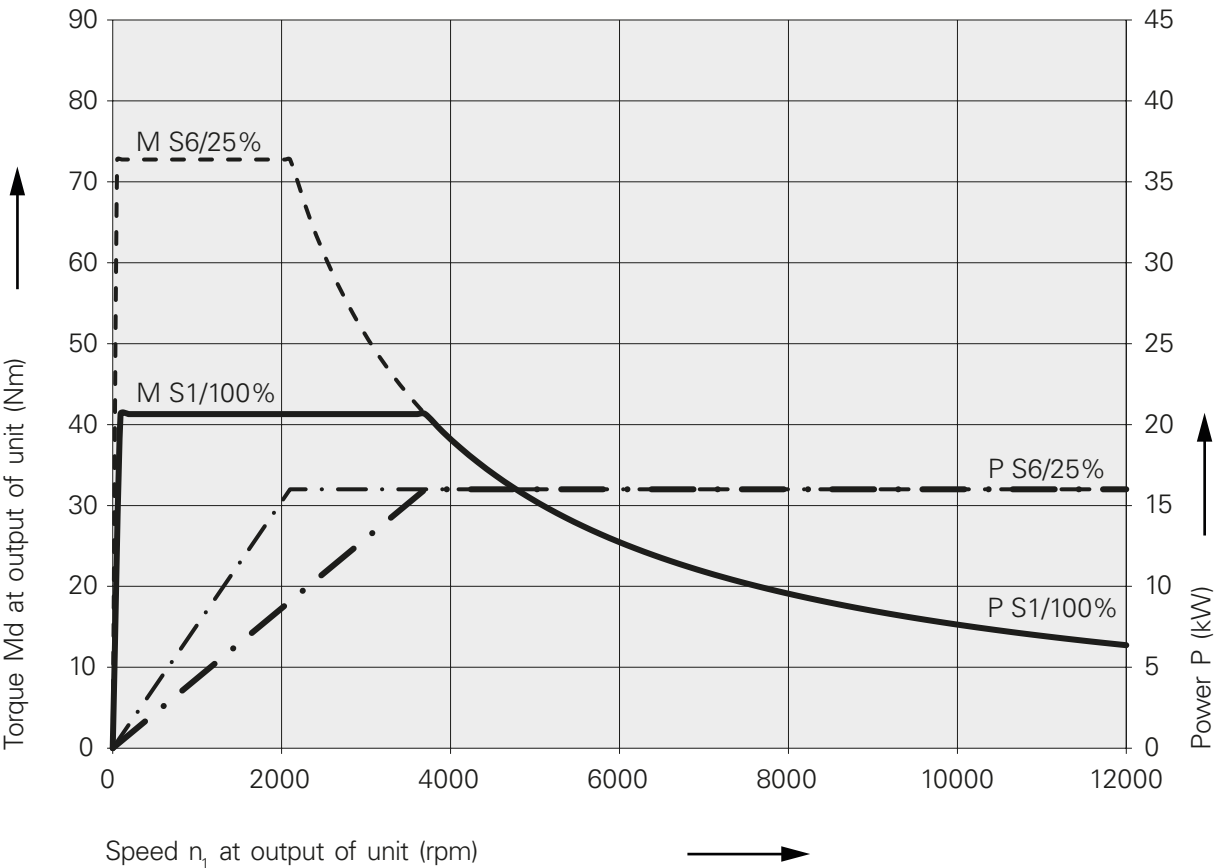

Performance chart INDEX G320.2


Motorized milling spindle 95Nm

Live tools with tooling system HSK63 or CAPTO C6

Speed range 0-12000 rpm



For information on how to use the diagram, see Chapter "Technical Information".

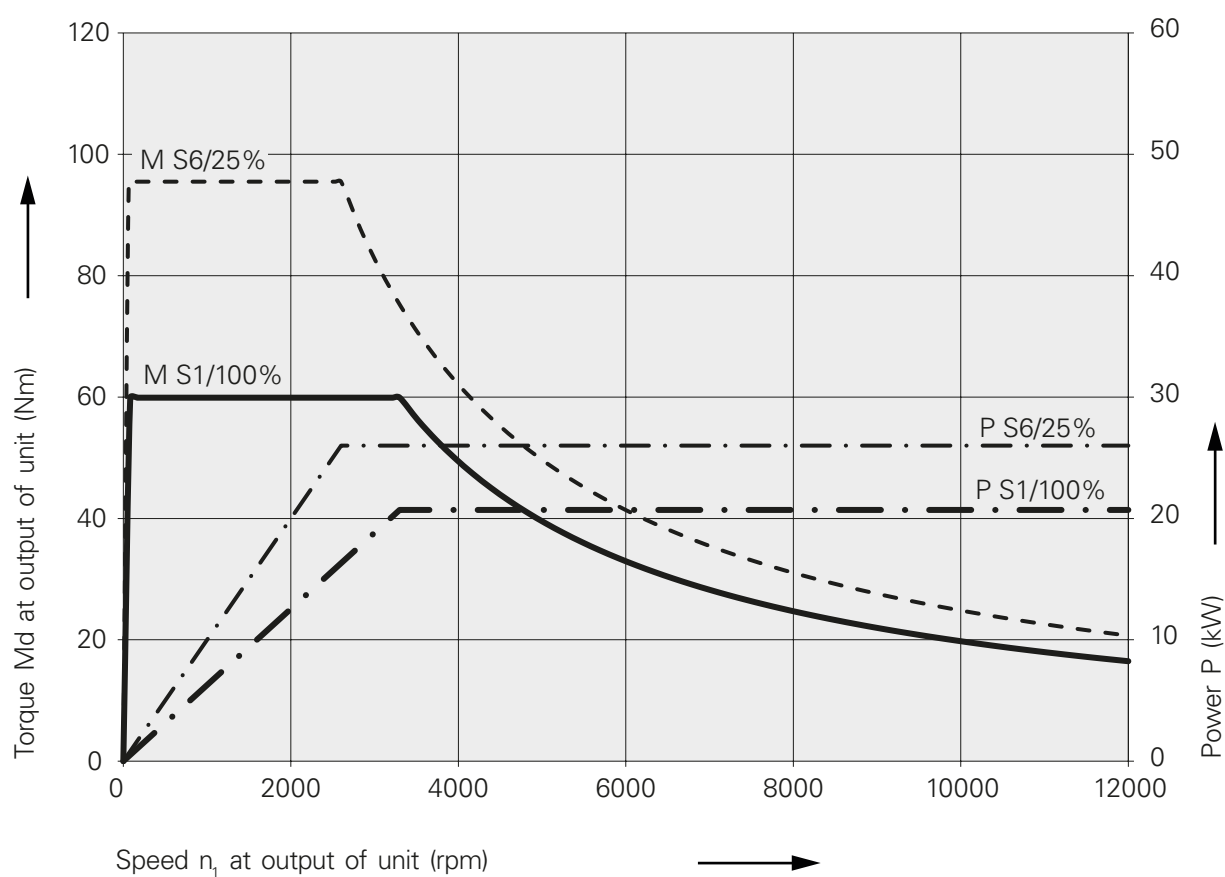


Performance chart INDEX G320.2


Live tools with tooling system VDI30

Tool carrier XYZ at bottom, VDI30 with 15 stations

Speed range 0-7200 rpm



For information on how to use the diagram, see Chapter "Technical Information".

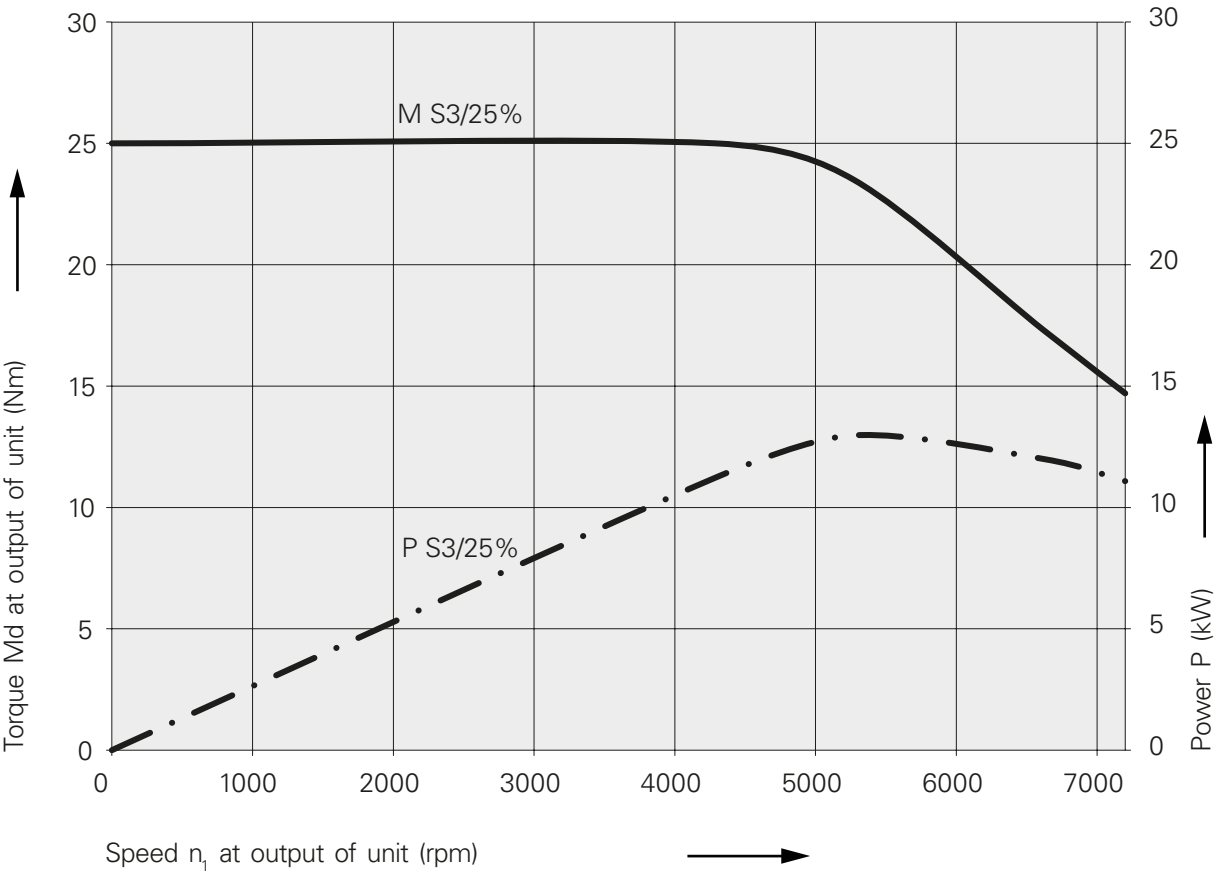

Performance chart INDEX G320.2


Live tools with tooling system VDI40

Tool carrier XYZ at bottom, VDI40 with 12 stations

Speed range 0-5400 rpm



For information on how to use the diagram, see Chapter "Technical Information".

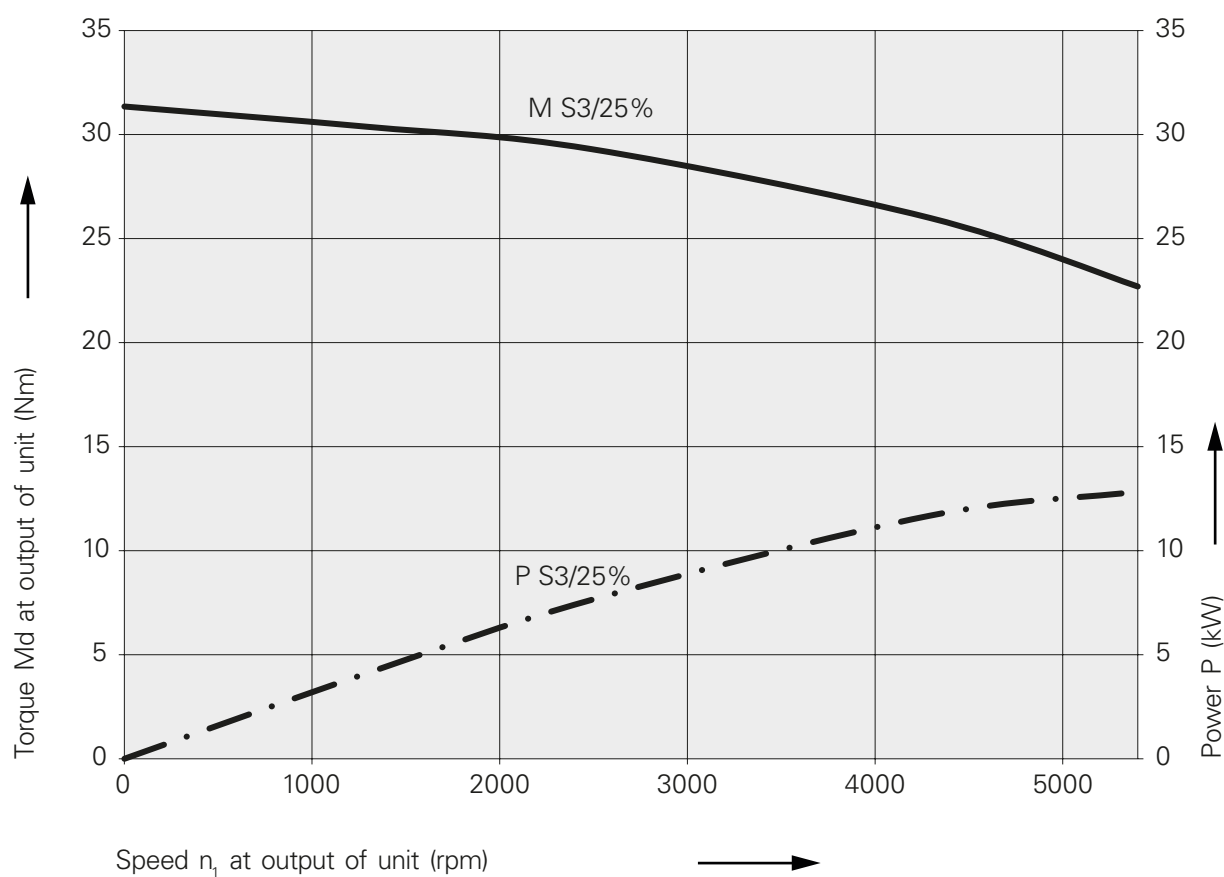

INDEX

DIW069EN - 20273393 02.24 Printed in Germany Subject to change without prior notice

INDEX-Werke GmbH & Co. KG Hahn & Tessky

Plochinger Straße 92
D-73730 Esslingen

Fon +49 711 3191-0
Fax +49 711 3191-587

info@index-werke.de
www.index-werke.de